Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NOMA 6821001

NOMA Outdoor Christmas Icicle Lights User Manual

Model: 6821001

Introduction

Thank you for choosing NOMA Outdoor Christmas Icicle Lights. This manual provides important information regarding the safe installation, operation, and maintenance of your new lighting product. Please read this manual thoroughly before use and retain it for future reference.



Image: NOMA Icicle Lights installed on the eaves of a house, illuminating the exterior with a white/blue glow.

Safety Information

Always follow basic safety precautions when using electrical products to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Before installation and use.
- **Outdoor Use:** This product is designed for both indoor and outdoor use. Ensure all connections are secure and protected from moisture when used outdoors.
- **Power Source:** Connect the product only to a 32 Volt AC power supply. Do not overload electrical outlets.
- **Damage Inspection:** Do not use if the cable or light string is damaged. Inspect before each use.
- **Installation:** Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- **Secure Mounting:** Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- **Unplug When Not In Use:** Always unplug the product when leaving the house, when retiring for the night, or if left unattended.
- **Children and Pets:** Keep out of reach of small children and pets.

Package Contents

Please check the box to ensure all components are present:

- 1 x NOMA Snowing Icicle Christmas Lights (144 LED, White/Ice Blue, 7.9m cable)
- 1 x Power Adapter with Easytimer function
- 1 x User Manual (this document)

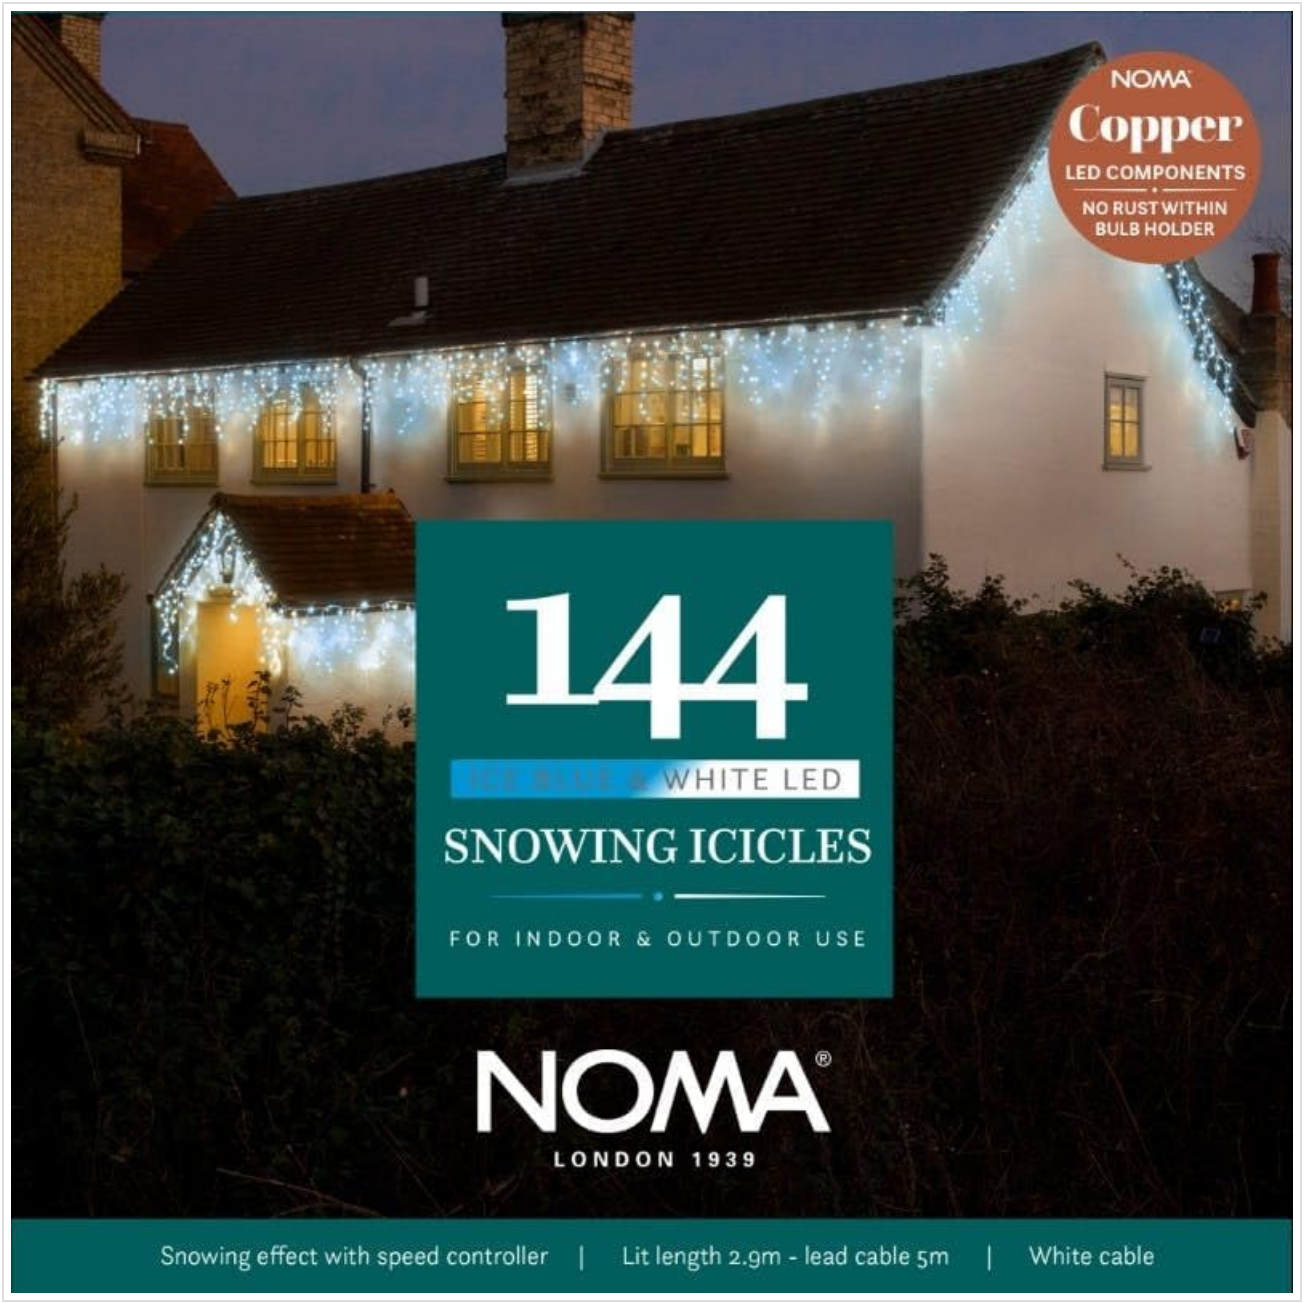


Image: Product packaging highlighting the 144 LED Snowing Icicles feature and suitability for indoor and outdoor use.

Setup

Follow these steps for easy installation:

1. **Unpack:** Carefully remove the light string and power adapter from the packaging. Untangle the lights gently to avoid damage.
2. **Placement:** Determine the desired location for your icicle lights. Ensure the location is suitable for outdoor use if applicable, with access to a power outlet.
3. **Mounting:** Secure the light string using appropriate outdoor-rated clips or ties. Avoid using staples, nails, or sharp objects that could damage the cable insulation. Ensure the lights hang freely in an icicle pattern.
4. **Connect Power:** Connect the light string to the power adapter. Ensure the connection is firm and secure.
5. **Plug In:** Plug the power adapter into a suitable 32 Volt electrical outlet. For outdoor use, ensure the outlet is a

weather-protected, ground-fault circuit interrupter (GFCI) outlet.

6. **Test:** Once plugged in, the lights should illuminate.

Operating

Your NOMA Icicle Lights feature an Easytimer function for convenient operation.

- **Power On/Off:** Plug the unit into the power outlet to turn the lights on. Unplug to turn them off.
- **Easytimer Function:** The integrated Easytimer allows the lights to operate on a repeating cycle of 8 hours ON and 16 hours OFF. To activate the timer, simply plug the lights in at the desired time you want them to turn on. The timer will automatically begin its cycle from that point.
- **Resetting the Timer:** To reset the timer, unplug the lights for a few seconds and then plug them back in at the new desired start time.



Image: A close-up view of the white cable and individual LED bulbs, showing the icicle light design.

Maintenance

Proper care will extend the life of your NOMA Icicle Lights.

- **Cleaning:** Disconnect from power before cleaning. Wipe the lights and cable with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, carefully coil the light string and store it in a cool, dry place, away from direct sunlight and extreme temperatures. Store in original packaging or a protective container to prevent tangling and damage.
- **Inspection:** Before each season's use, inspect the product carefully for any cuts, damage, or frayed insulation on the wire, cracks in the lampholders or enclosures, loose connections, or exposed copper wire. Discard the light set if any damage is found.



Image: A detailed close-up of the NOMA icicle lights, highlighting the white cable and the small, bright LED bulbs.

Troubleshooting

If your NOMA Icicle Lights are not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the outlet. Loose connection. Timer not set correctly.	Check the power outlet with another device. Ensure all connections between the lights and adapter are secure. Unplug and replug to reset the Easytimer.
Lights flicker or are dim.	Insufficient power. Damaged cable/LEDs.	Ensure the power source is stable. Inspect the cable for damage. If damaged, discontinue use.
Timer function is not working as expected.	Timer was plugged in at an undesired time.	Unplug the lights for a few seconds, then plug them back in at the exact time you wish them to turn on daily.

If you continue to experience issues, please contact NOMA customer support.

Specifications

Feature	Detail
Brand	NOMA
Manufacturer	Noma
Item Model Number	6821001

Feature	Detail
Color	White/Blue
Number of Bulbs	144
Voltage	32 Volts
Special Features	Timer (Easytimer)
Plug Type	Electric Cable
Batteries Included	No
Batteries Required	No
Bulb Type	LED
Wattage	3.6 Watts
Item Weight	410 g
Package Dimensions	18.3 x 17.8 x 7.3 cm
Light Color	Blue
Occasion	Christmas

Warranty and Support

Specific warranty information is not available in the provided product details. For warranty claims or technical support, please contact the retailer or NOMA customer service directly. Keep your proof of purchase for any warranty inquiries.

© 2024 NOMA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09KDDWH8M

More documents and user manuals: **https://manuals.plus/**