Mellerware MWAF 01-Digital

Mellerware MWAF 01-Digital Air Fryer User Manual

Model: MWAF 01-Digital | Brand: Mellerware

Introduction Safety Information Product Components Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for choosing the Mellerware MWAF 01-Digital Air Fryer. This appliance utilizes advanced AirCrisp Technology to circulate hot air rapidly, allowing you to fry, roast, grill, and bake with little to no oil, resulting in healthier and delicious meals. This manual provides essential information for safe operation, maintenance, and optimal use of your new air fryer.



Figure 1: Mellerware MWAF 01-Digital Air Fryer, teal color with digital display.

1.1. AirCrisp Technology

The Mellerware Air Fryer employs AirCrisp Technology, which circulates hot air at high speed and constant temperature. This method ensures even cooking and crisp results with significantly less fat compared to traditional deep frying, reducing fat content by over 99%.



Figure 2: Diagram illustrating AirCrisp Technology, showing hot air circulation for frying.

2. Important Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Always unplug the appliance from the power outlet when not in use and before cleaning. Allow it to cool down before handling.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.

- Do not place the appliance against a wall or other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not place anything on top of the appliance.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- Do not use the appliance for any purpose other than described in this manual.
- This appliance is intended for household use only.

3. Product Components

The Mellerware MWAF 01-Digital Air Fryer comes with the following main components:

- **Main Unit:** The primary body of the air fryer containing the heating element and fan.
- **Cooking Pan:** The outer pan that holds the food basket.
- **Food Separator:** An accessory to divide the cooking basket for different food items.
- **Removable Crisping Basket:** The inner basket where food is placed for cooking. Features a non-stick coating.
- **Instruction Manual:** This document.
- **Recipe Book:** A guide with various recipes suitable for the air fryer.
- **Warranty Card:** For product warranty registration and details.



Figure 3: Illustration of the non-stick slide-out pan and removable crisping basket.

4. Setup and First Use

1. **Unpack:** Carefully remove all packaging materials from the air fryer.
2. **Clean Components:** Wash the removable crisping basket and cooking pan with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. The main unit should be wiped with a damp cloth.
3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm of clear space around the back and sides, and 10 cm above the appliance for proper ventilation.
4. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (356°F) to burn off any manufacturing residues. A slight odor may be present, which is normal and will dissipate.

5. Operating Instructions

5.1. Digital Display and Touch Control Panel

The Mellerware MWAF 01-Digital Air Fryer features an intuitive digital touch screen for easy operation. The panel allows you to select preset programs, adjust temperature, and set cooking time.



Figure 4: Close-up view of the digital display and touch control panel.

5.2. Using Preset Programs

The air fryer comes with 8 convenient preset programs for common food items. These programs automatically set the optimal temperature and time for specific dishes.

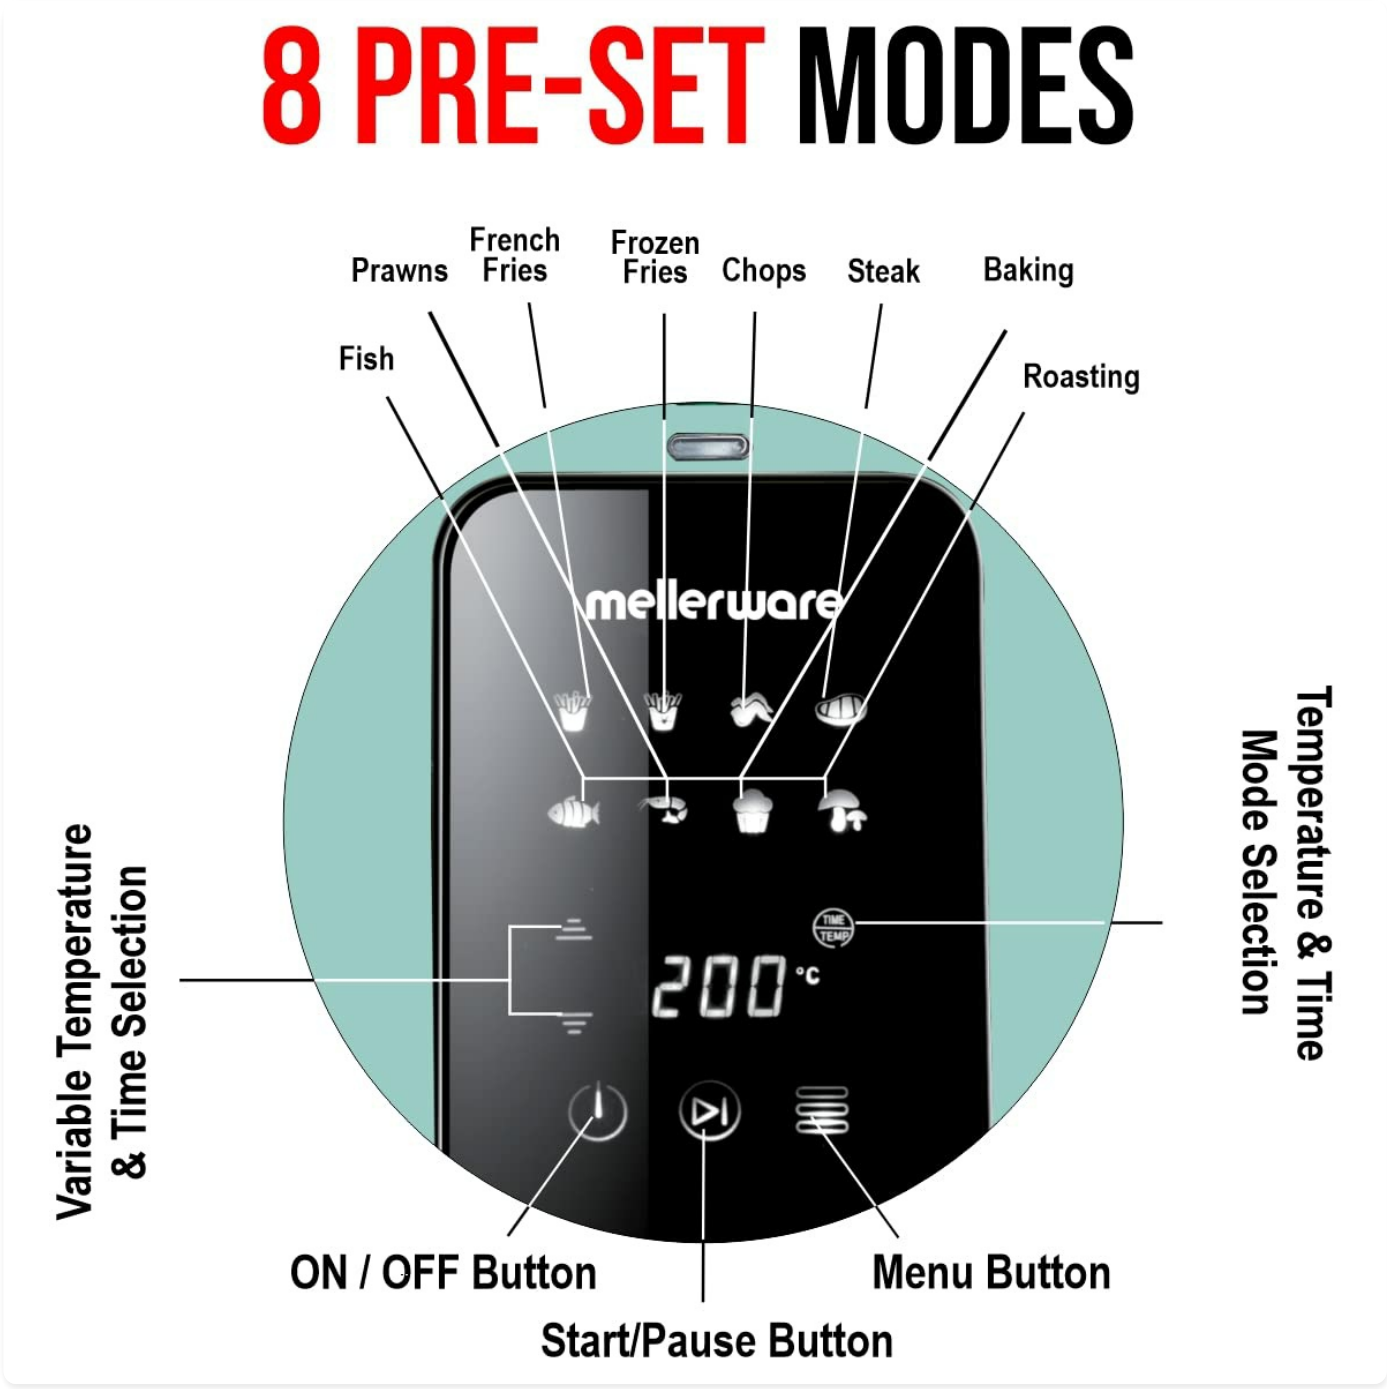


Figure 5: Diagram showing the 8 preset cooking modes and control buttons.

1. **Power On:** Plug in the air fryer. Press the **ON/OFF Button** to turn on the display.
2. **Select Program:** Press the **Menu Button** repeatedly to cycle through the 8 preset icons (e.g., Fish, Prawns, French Fries, Frozen Fries, Chops, Steak, Baking, Roasting). The selected icon will illuminate.
3. **Start Cooking:** Once a preset is selected, press the **Start/Pause Button** to begin cooking.

5.3. Manual Temperature and Timer Control

For custom cooking, you can manually set the temperature and time.

1. **Power On:** Press the **ON/OFF Button**.
2. **Adjust Temperature:** Use the **Temperature & Time Selection** buttons (up/down arrows) to set the desired temperature between 40°C and 200°C.
3. **Adjust Time:** Press the **Temperature & Time Selection** buttons again to switch to time adjustment. Set the desired cooking time between 1 and 60 minutes.

4. **Start Cooking:** Press the **Start/Pause Button** to begin cooking.

5.4. Cooking Process

- Preheat the air fryer for 3-5 minutes if the recipe calls for it.
- Carefully pull out the cooking pan and basket from the main unit.
- Place your food into the crisping basket. Do not overfill the basket to ensure even cooking. The 4L capacity allows for up to 900 grams of potatoes (approx. 5-6 servings).
- Slide the cooking pan and basket back into the air fryer until it clicks into place.
- Select your desired preset or set manual temperature and time. Press start.
- Some foods may require shaking or tossing halfway through cooking. The air fryer can be paused by pulling out the basket, and it will resume when the basket is reinserted.
- A buzzer will sound when the cooking time is complete.
- Carefully remove the cooking pan and basket using the cold-touch handle. Transfer food to a serving dish.



Figure 6: Visual representation of the air fryer's versatility beyond just frying, including roasting, grilling, and baking.

6. Cleaning and Maintenance

Regular cleaning ensures the longevity and optimal performance of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

6.1. Cleaning the Basket and Pan

- The removable crisping basket and cooking pan are non-stick. Do not use abrasive cleaning materials or metal utensils.
- Soak the detachable basket and pan in warm water with a mild dish soap for about 10-15 minutes to loosen any stuck-on food.
- Use a soft sponge or cloth to clean the surfaces.
- Rinse thoroughly and dry immediately to protect the non-stick coating.
- *Note: The basket and pan are not dishwasher safe.*



Figure 7: Visual guide for cleaning the detachable basket in warm water.

6.2. Cleaning the Main Unit

- Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- For the interior, gently wipe with a damp cloth. Ensure no water enters the electrical components.
- Clean the heating element with a cleaning brush to remove any food residue.

7. Troubleshooting

If you encounter issues with your Mellerware Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/tossed.	Do not overfill the basket. Cook in smaller batches if necessary. Shake or toss food halfway through cooking.
Food is not crispy.	Not enough oil (for certain foods). Temperature too low or time too short.	Lightly brush or spray food with oil for extra crispiness. Increase temperature or cooking time.
White smoke coming from the appliance.	Greasy residue from previous use. High fat content food.	Clean the basket and pan thoroughly after each use. For high-fat foods, place a piece of aluminum foil at the bottom of the pan to catch excess oil.
Appliance smells during first use.	Manufacturing residues burning off.	This is normal. Run the air fryer empty for 10-15 minutes at 180°C before first use. The smell will dissipate.

8. Product Specifications

Feature	Detail
Model Number	MWAF 01-Digital
Brand	Mellerware
Capacity	4 Litres
Wattage	1400 Watts
Control Method	Touch Control
Temperature Range	40°C - 200°C
Timer Range	1 - 60 Minutes
Special Feature	Temperature Control, Digital Display, 8 Preset Programs
Product Dimensions	0.28D x 5.08W x 0.33H Meters
Item Weight	4.8 Kilograms
Material	Plastic
Color	Teal
Included Components	Main Unit, Food Separator, Cooking Pan, Recipe Book, Instruction Manual, Warranty Card

9. Warranty and Support

9.1. Warranty Information

The Mellerware MWAF 01-Digital Air Fryer comes with a**1 Year Warranty** from the date of purchase. Please refer to the included Warranty Card for detailed terms and conditions, including coverage and exclusions.

9.2. Customer Support

For any product-related queries, technical assistance, or warranty claims, please contact Mellerware customer support:

Manufacturer: Tuareg Marketing Private Limited

Importer: Tuareg Marketing Pvt. Ltd.

Address: Khasra No- 1189, Bhalswa, New Delhi-110033, Delhi, India.

Contact Number: 9773982065

Email: customercare@inalsa.co.in

Website: inalsaappliances.com

Please have your model number (MWAF 01-Digital) and proof of purchase ready when contacting support.

© 2024 Mellerware. All rights reserved.