Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

STERWINS 1200W 220V

Sterwins Electric Lawnmower 1200W 220V User Manual

Model: 1200W 220V

1. Introduction

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your Sterwins Electric Lawnmower 1200W 220V. Please read it thoroughly before first use and keep it for future reference. This electric lawnmower is designed for maintaining lawns up to 400 m².



Image 1.1: Overview of the Sterwins Electric Lawnmower. This image displays the complete lawnmower with its handle and grass

collection box.

2. Safety Instructions

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **Read the Manual:** Familiarize yourself with all controls and proper use of the appliance.
- **Personal Protective Equipment:** Always wear sturdy footwear and long trousers. Do not operate the mower barefoot or in open sandals. Wear eye protection.
- **Clear the Area:** Before mowing, clear the area of stones, sticks, wires, bones, and other foreign objects that could be thrown by the blade.
- **Inspect the Mower:** Before each use, check the power cord for damage. Do not use if the cord is damaged. Ensure all guards and handles are securely attached.
- **Electrical Safety:** Do not expose the mower to rain or wet conditions. Avoid using the mower in wet grass. Always connect to a properly grounded outlet.
- **Maintain a Safe Distance:** Keep children, bystanders, and pets away from the mowing area.
- **Slope Operation:** Mow across the face of slopes, never up and down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes.
- **Disconnect Power:** Always disconnect the power supply before cleaning, adjusting, or repairing the mower.
- **Storage:** Store the mower in a dry, secure place out of reach of children.

3. Assembly and Setup

Your lawnmower requires minimal assembly. Follow these steps to prepare your device for use.

3.1 Handle Assembly

The handle comes partially folded for packaging. Unfold the handle and secure it using the provided quick-release levers or knobs. Ensure the handle is firmly locked into position.



Image 3.1: Detail of the handle adjustment mechanism. This image shows how the handle can be adjusted for user comfort and folded for storage.

3.2 Grass Collection Box Attachment

Assemble the grass collection box if it came in separate pieces. Attach the assembled grass box to the rear of the lawnmower. Ensure it clicks securely into place.



Image 3.2: The lawnmower with its 30-liter grass collection box attached. This highlights the bagging feature and capacity.

3.3 Cutting Height Adjustment

The lawnmower features a semi-circular cutting height adjustment mechanism. Adjust the cutting height to one of the available positions (e.g., 4 positions as indicated in the diagram) by moving the lever or mechanism located near the wheels. Refer to the diagram for visual guidance.

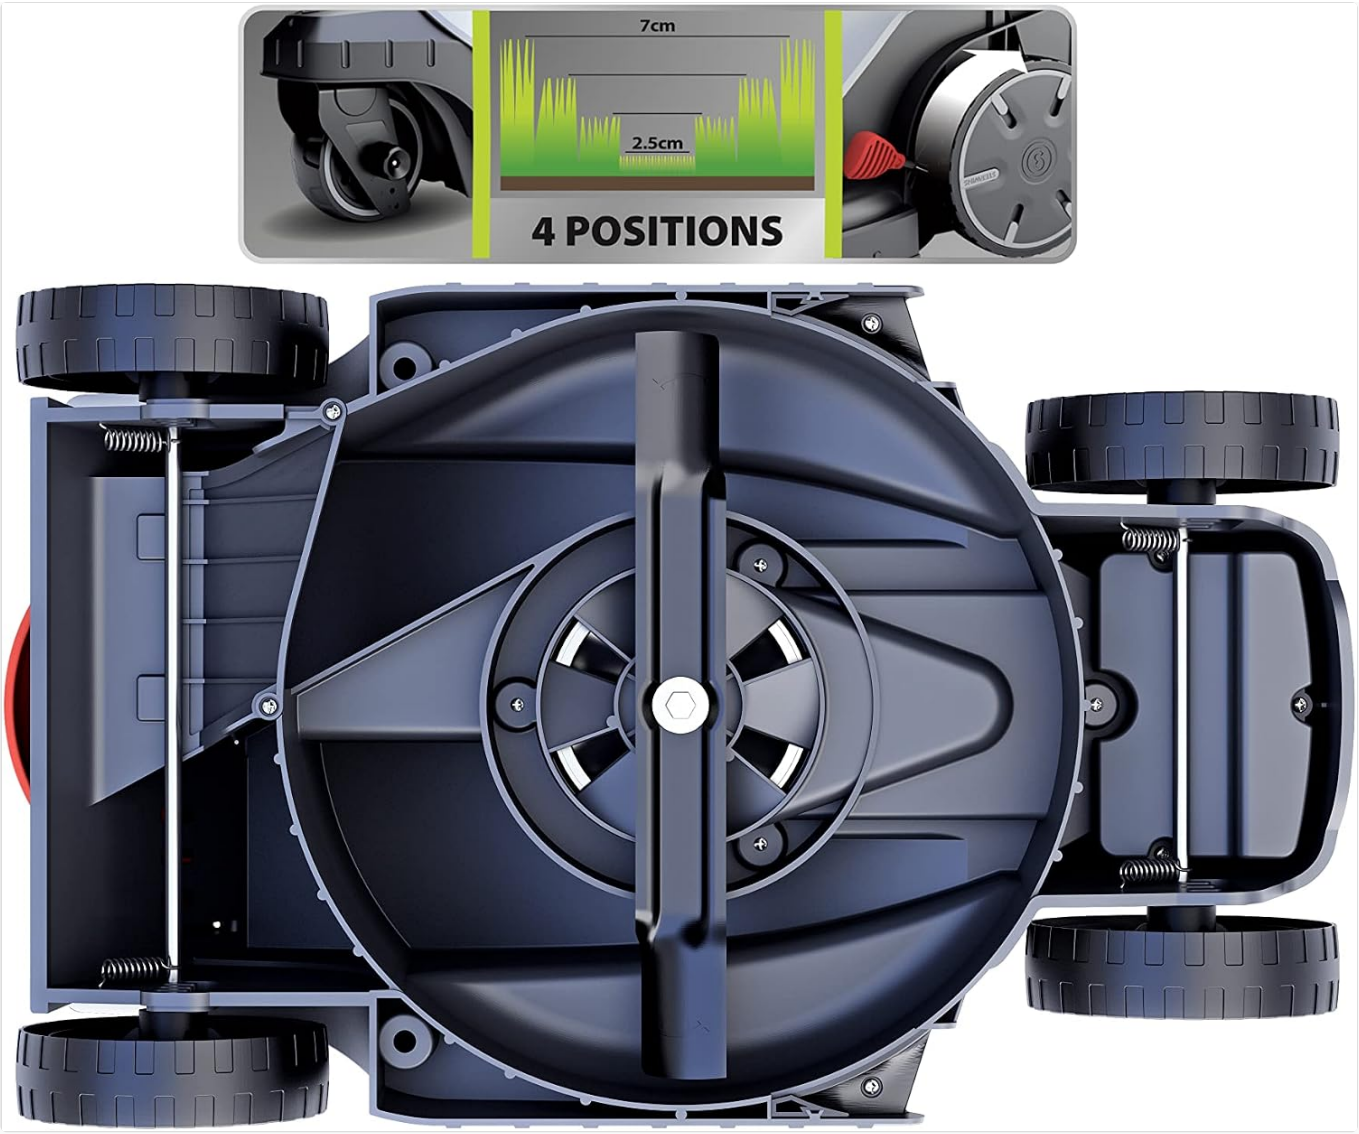


Image 3.3: Underside view of the lawnmower, illustrating the blade and the 4-position cutting height adjustment. This shows the range of cutting heights available.

4. Operating Instructions

4.1 Starting the Lawnmower

1. Ensure the power cord is securely plugged into a suitable outdoor extension cord and then into a grounded power outlet.
2. Press and hold the safety button (if present) and then pull the bail switch lever towards the handle. The motor will start.
3. Release the safety button once the motor is running.



Image 4.1: Close-up of the control panel on the grass collection box, showing 'GO' and 'STOP' indicators. This illustrates the user interface for starting and stopping the mower.

4.2 Mowing Technique

- Push the lawnmower forward at a steady pace. Avoid rushing.
- Overlap each cutting path slightly to ensure an even cut.
- For optimal results, mow when the grass is dry.
- The lawnmower's design allows for easy maneuvering in tight spaces and features edge combs for cutting close to borders.

4.3 Stopping the Lawnmower

Release the bail switch lever to stop the motor. Always disconnect the power cord from the outlet after use and before performing any maintenance.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your lawnmower.

5.1 Cleaning

- After each use, disconnect the power and clean the underside of the mower deck to remove grass clippings. Use a brush or scraper.
- Clean the exterior of the mower with a damp cloth. Do not use water jets or high-pressure cleaners.
- Empty and clean the grass collection box regularly. The full view indicator helps determine when to empty.

5.2 Blade Care

Periodically check the blade for sharpness and damage. A dull or damaged blade can lead to poor cutting performance and strain the motor. If necessary, have the blade sharpened or replaced by a qualified service technician.

5.3 Storage

The foldable handle allows for easy storage. Clean the mower thoroughly before storing it in a dry, protected area, away from direct sunlight and moisture.

6. Troubleshooting

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Mower does not start	No power supply; Safety switch not engaged; Damaged power cord	Check power connection; Ensure safety button and bail switch are fully engaged; Inspect power cord for damage and replace if necessary.
Uneven cutting	Dull or damaged blade; Incorrect cutting height setting	Sharpen or replace blade; Adjust cutting height evenly on all wheels.
Excessive vibration	Damaged or unbalanced blade; Loose components	Inspect blade for damage and replace if necessary; Check all fasteners for tightness.
Motor stops during operation	Overload (e.g., very thick grass); Power interruption	Raise cutting height; Mow slower; Check power connection. Allow motor to cool if it overheated.

7. Specifications

- **Brand:** STERWINS
- **Manufacturer:** ADEO
- **Power Source:** Electric with cord
- **Power:** 1200 W
- **Voltage:** 220 V
- **Cutting Width:** 330 mm (33 cm)
- **Recommended Lawn Size:** Up to 400 m^2
- **Grass Box Capacity:** 35 Liters
- **Cutting Height Adjustment:** Semi-circular, multiple positions (e.g., 4 positions)
- **Minimum Adjustable Cutting Height:** 1 cm
- **Product Dimensions:** 66 x 62 x 33 cm
- **Material:** Plastic
- **ASIN:** B09KNV8418
- **Manufacturer Reference:** 3276000429968

- **First Available Date:** May 10, 2022

8. Warranty and Support

This product is covered by a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. Please retain your proof of purchase for warranty claims.
For technical support, spare parts, or warranty service, please contact your retailer or the manufacturer directly. Refer to the contact information provided with your purchase documentation.

© 2024 STERWINS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the best cutting height setting for the Sterwins 1200W 220V electric lawnmower?

The Sterwins 1200W 220V Electric Lawnmower features a semi-circular cutting height adjustment mechanism with multiple positions (typically 4 positions). The minimum adjustable cutting height is 1 cm. While the "best" setting depends on your...

Read full answer

Open the live page

https://manuals.plus/asin/B09KNV8418

More documents and user manuals: **https://manuals.plus/**