Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JVC SI40FR

JVC SI40FR Smart TV User Manual

Model: SI40FR | Brand: JVC

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your JVC SI40FR Smart TV. Designed with quality materials, this product is user-friendly and adaptable to various entertainment needs. Please read this manual thoroughly before using your television to ensure proper functionality and safety.

2. Safety Information

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. Package Contents

Please check to ensure all items are included in your package:

- JVC SI40FR Smart TV Unit
- Remote Control (x1)
- Batteries (x2)
- User Manual (this document)
- Warranty Card
- TV Stands (2 pieces) and Screws

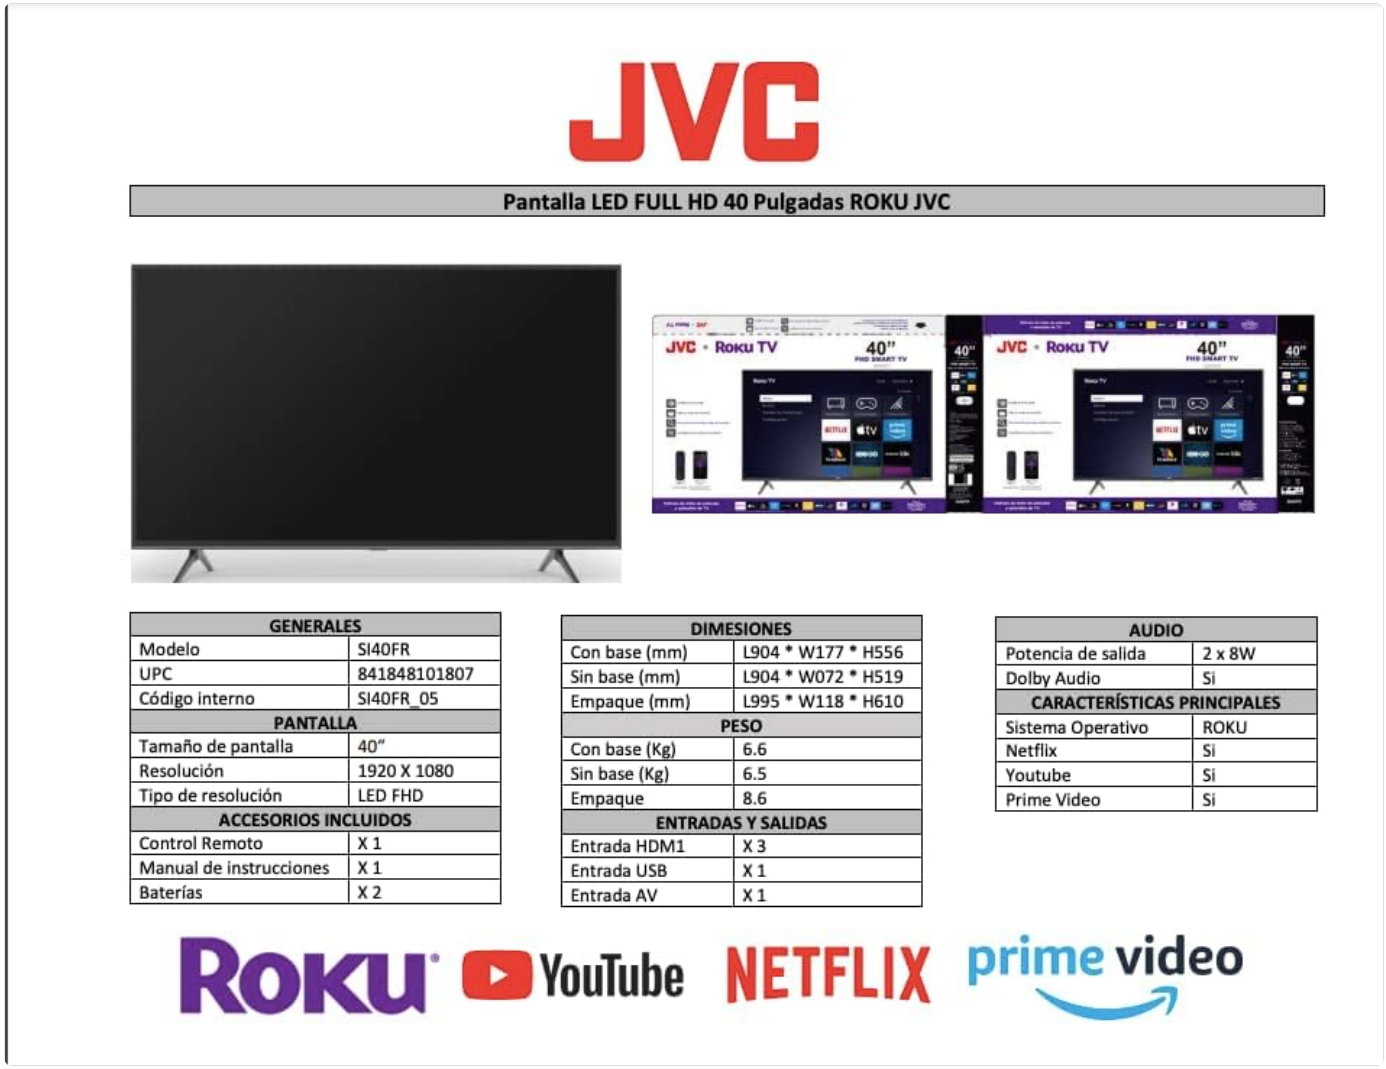


Image: Illustration of included components, including the TV, remote, and manual.

4. Setup

4.1 Attaching the TV Stands

1. Carefully place the TV face down on a soft, clean surface to prevent screen damage.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. Do not overtighten.

4.2 Connecting Peripherals

Your JVC Smart TV offers multiple connectivity options:

- **HDMI:** Connect up to three HDMI devices (e.g., game consoles, Blu-ray players) to the HDMI ports.
- **USB:** Use the USB port for media playback from a USB drive.
- **AV Input:** Connect older devices using the AV input.
- **Wi-Fi:** Connect to your home network wirelessly for Smart TV features.

4.3 Initial Power On and Roku TV Setup

1. Plug the power cord into an electrical outlet.
2. Press the power button on the TV or remote control.
3. Follow the on-screen instructions to complete the Roku TV guided setup, including network connection and channel scanning.

5. Operating Your JVC Smart TV

Your JVC SI40FR is a Smart TV with integrated Roku TV, offering a wide range of entertainment options.

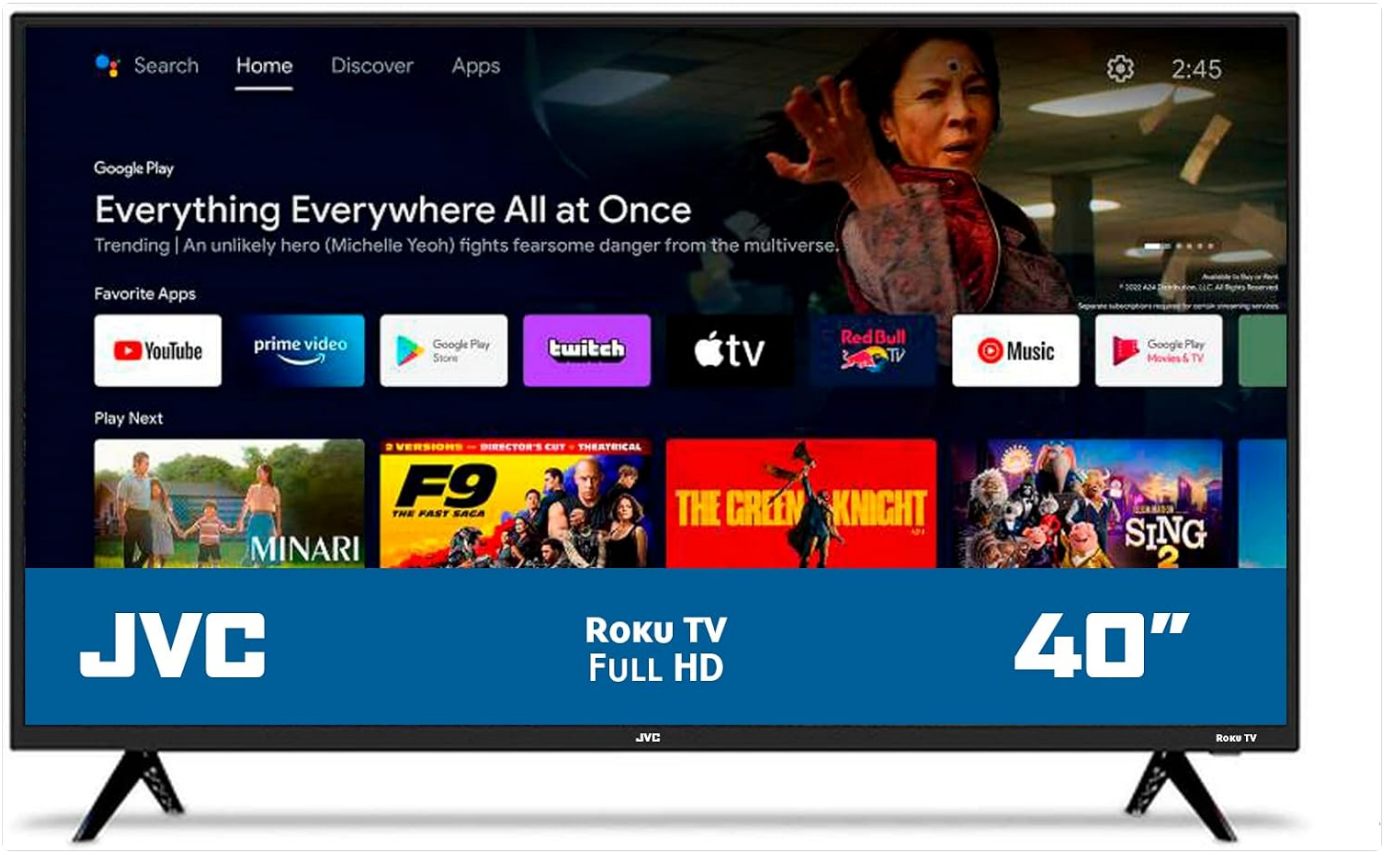


Image: The JVC Smart TV displaying the intuitive Roku TV home screen.

5.1 Remote Control Functions

The included remote control allows you to navigate the Roku TV interface, adjust volume, change channels, and access streaming services.

5.2 Roku TV Features

- **Streaming Channels:** Access thousands of free and paid streaming channels, including Netflix, YouTube, and Prime Video.
- **Mobile App Control:** Download the Roku mobile app to control your TV from your smartphone and access additional functions.
- **High Definition Entertainment:** Enjoy movies and video games in Full HD (1080p) resolution.
- **Convenient Interface:** The Roku TV system provides a simple and intuitive user experience.

6. Maintenance

Proper care will extend the life of your JVC Smart TV.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for electronics, applied to the cloth, not directly to the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Do not use abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage.

7. Troubleshooting

If you encounter issues with your JVC Smart TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord unplugged; no power from outlet.	Check power cord connection; test outlet with another device.
No picture, but sound is present	Incorrect input source selected; loose HDMI/AV cable.	Press the "Input" button on the remote to select the correct source; check cable connections.
No sound, but picture is present	Volume muted or too low; audio cable issues.	Unmute volume or increase level; check audio cable connections.
Cannot connect to Wi-Fi	Incorrect password; router issues; TV too far from router.	Verify Wi-Fi password; restart router; move TV closer to router or use a Wi-Fi extender.
Remote control not working	Dead batteries; obstruction between remote and TV.	Replace batteries; remove any obstructions.

If the problem persists, please contact JVC customer support.

8. Specifications

Detailed technical specifications for the JVC SI40FR Smart TV:

Feature	Detail
Model Name	SI40FR
Screen Size	40 Inches (102 cm visible diagonal)
Display Technology	LED
Resolution	Full HD 1080p (1920 x 1080 Pixels)
Refresh Rate	60 Hz
Aspect Ratio	16:9
Smart TV Features	Roku TV, Full HD, HD Compatible
Connectivity	HDMI (x3), Wi-Fi, USB (x1), AV Input (x1)
Mounting Type	Table Mount
Dimensions (W x D x H)	91 x 7 x 55 cm
Weight	8 kg
Model Year	2021

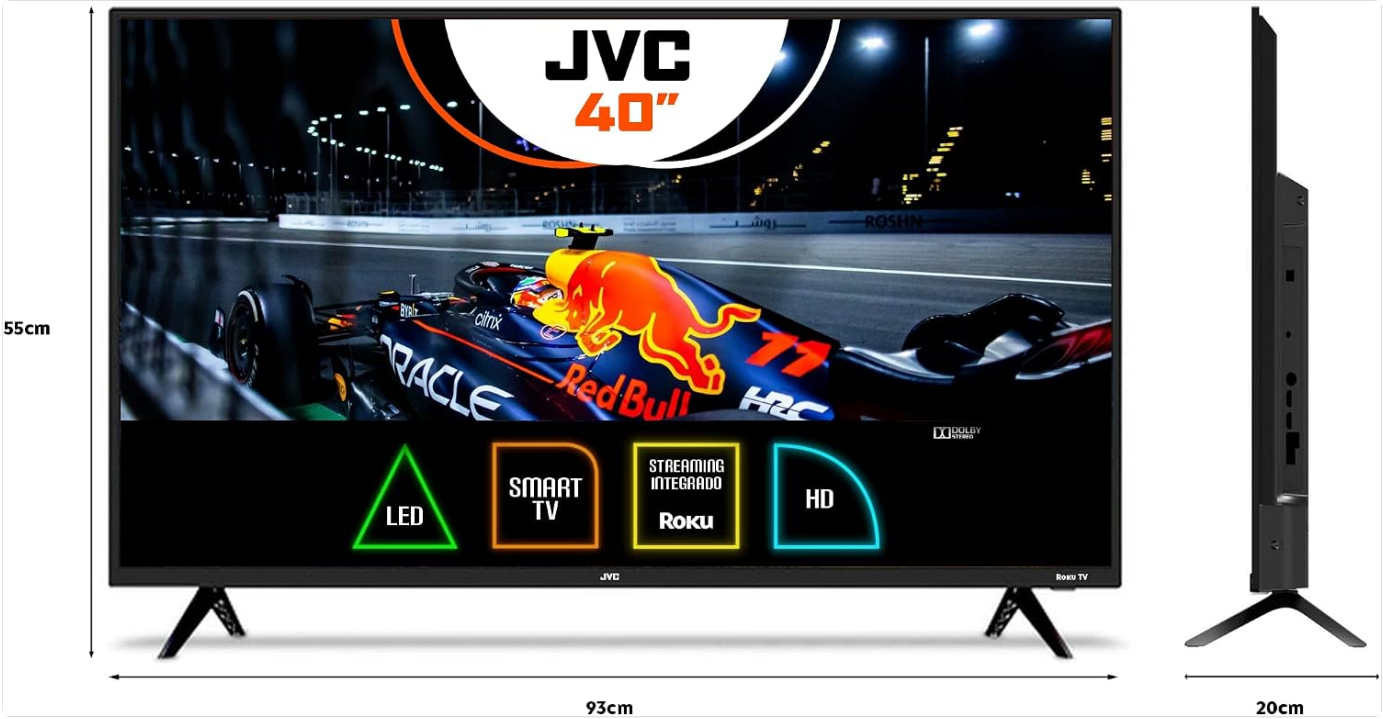


Image: Physical dimensions and key features of the JVC Smart TV.

9. Warranty and Support

9.1 Warranty Information

Your JVC SI40FR Smart TV comes with a manufacturer's warranty. Please refer to the included warranty card for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact JVC customer support. Contact details can typically be found on the warranty card or the official JVC website.
Online Resources: For the latest updates, FAQs, and additional support, visit the official JVC support website.

© 2023 JVC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09KW8DJP9

More documents and user manuals: **https://manuals.plus/**