mastrad A17614

Mastrad A17614 Kitchen Tongs User Manual

Your guide to using and maintaining your Mastrad Kitchen Tongs.

Introduction

Thank you for choosing Mastrad Kitchen Tongs, model A17614. These multi-use serving tongs are designed for convenience and durability in your kitchen. Featuring a stainless steel handle and silicone ends, they are ideal for various cooking tasks without scratching your cookware. This manual provides essential information for the proper setup, operation, and care of your new kitchen tool.

Product Features

- **Multi-Use Design:** Excellent for grabbing, tossing, turning, mixing, and serving a wide range of dishes.
- **One-Handed Opening Mechanism:** Innovative design for quick and easy operation.
- **Heat Resistant Silicone Ends:** Made with food-grade silicone, safe for temperatures up to 482°F (250°C), and gentle on non-stick pans.
- **Durable Construction:** Stainless steel handle for long-lasting performance.
- **Easy to Clean:** Features a removable base and is dishwasher safe for ultimate hygiene.
- **Upright Storage:** Designed to stand upright on your countertop for convenient access and storage.

Setup

Before first use, please follow these steps:

1. **Unpack:** Carefully remove the tongs from their packaging.
2. **Initial Cleaning:** Wash the tongs thoroughly with warm soapy water or place them in a dishwasher before their first use. Ensure all packaging residues are removed.
3. **Inspect:** Check the tongs for any signs of damage. If damaged, do not use and contact customer support.

Operating Instructions

The Mastrad Kitchen Tongs feature an intuitive one-handed opening and closing mechanism for ease of use.

Opening the Tongs (Unlock)

To open the tongs, lift and squeeze the base mechanism. This action will unlock the tongs, allowing them to spring open for use.

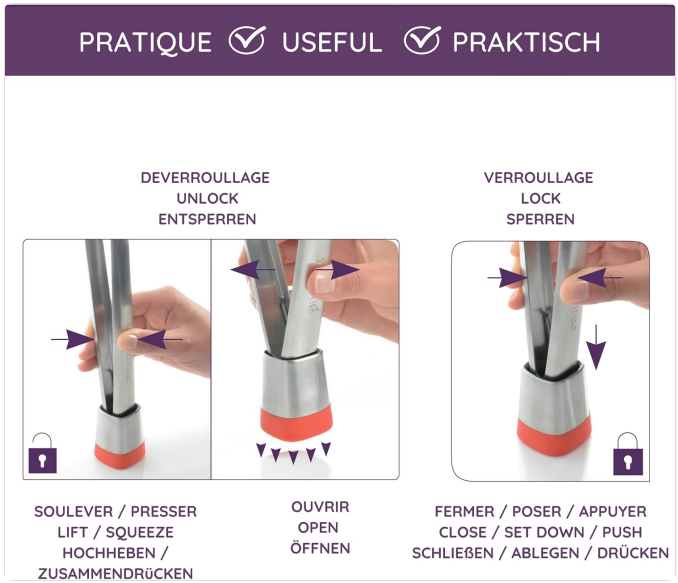


Figure 1: Illustration of the one-handed unlock mechanism. Lift and squeeze the base to open the tongs.

Closing the Tongs (Lock)

To close and lock the tongs for compact storage, simply push down on the base mechanism. This will secure the tongs in a closed position.

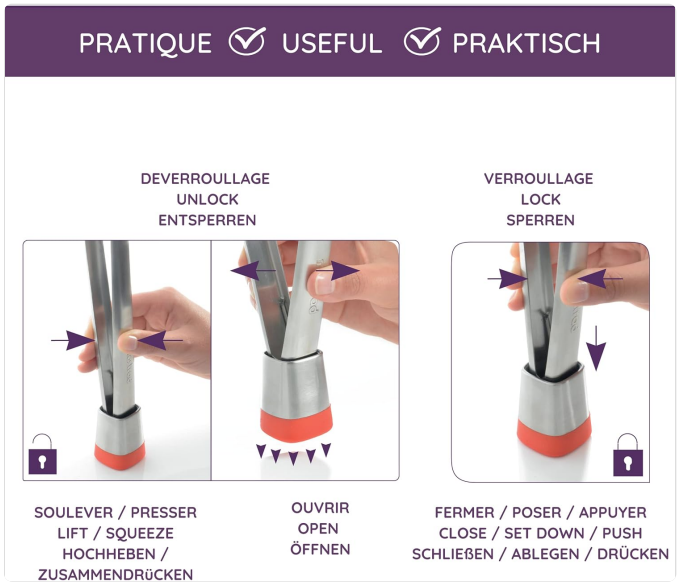


Figure 2: Illustration of the one-handed lock mechanism. Push down on the base to close and secure the tongs.

General Use

- Use the tongs for cooking tasks such as flipping meats, stirring vegetables, or serving salads.
- The silicone tips are designed to be gentle on all types of cookware, including non-stick surfaces, preventing scratches.
- The tongs can withstand high temperatures, making them suitable for use with hot foods and in hot pans.



Figure 3: Mastrad tongs in use, demonstrating their utility for handling food in a pan.

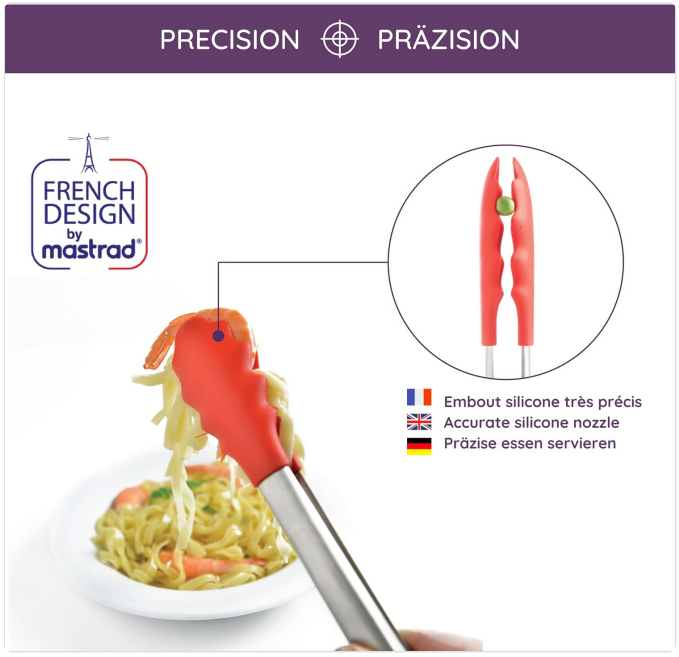


Figure 4: The precise silicone tips allow for delicate handling and serving of various foods.

Care and Maintenance

Proper care will extend the life of your Mastrad Kitchen Tongs.

- **Cleaning:** The tongs are dishwasher safe. For manual cleaning, wash with warm soapy water.
- **Removable Base:** The base of the tongs is removable for thorough cleaning, ensuring optimal hygiene. Gently pull the base to detach it, clean, and then reattach securely.
- **Storage:** These tongs are designed to stand upright on your countertop when closed, offering convenient storage and quick access.



Figure 5: The removable base facilitates easy and hygienic cleaning. The tongs are also dishwasher safe.



Figure 6: The tongs are designed to stand upright for convenient storage on your countertop.

SPECIFICATIONS

Feature	Detail
Model Number	A17614
Material	Stainless Steel handle, Silicone tips
Color	Gray (Silicone tips)
Dimensions	12 x 1 x 1 inches (approximately)
Item Weight	7 ounces
Heat Resistance	Up to 482°F (250°C)
Dishwasher Safe	Yes

Troubleshooting

- **Tongs not opening/closing smoothly:** Ensure the locking mechanism at the base is clean and free of food debris. Apply gentle pressure as described in the "Operating Instructions" section.
- **Tongs feel loose:** Check that the removable base is securely attached.
- **Silicone tips discolored:** While resistant, some foods with strong pigments may cause slight discoloration over time. This does not affect performance or safety.

Warranty and Support

For warranty information or customer support regarding your Mastrad Kitchen Tongs, please refer to the product packaging or visit the official Mastrad website. Keep your purchase receipt as proof of purchase.
For further assistance, you may contact Mastrad customer service through their official channels.

© 2023 Mastrad. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question