Fischer & Honsel 40300

Fischer & Honsel Dent LED Floor Lamp

Model: 40300

Instruction Manual

1. Important Safety Instructions

Please read these instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure the power supply is disconnected before installation, cleaning, or maintenance.
- This product is designed for indoor use only.
- Do not expose the lamp to water or excessive moisture.
- Do not attempt to modify or repair the lamp. Repairs should only be performed by qualified personnel.
- The integrated LED light sources are not replaceable. Do not attempt to remove or replace them.
- Keep packaging materials out of reach of children.

2. Product Overview

The Fischer & Honsel Dent LED Floor Lamp (Model 40300) is a modern lighting solution featuring two adjustable LED light heads. It offers dimmable light output and adjustable color temperature (CCT) to suit various moods and tasks.



This image displays the complete Fischer & Honsel Dent LED Floor Lamp, highlighting its two adjustable light heads and sleek design. The lamp is shown illuminated, demonstrating its lighting capabilities.



This detailed view focuses on one of the lamp's LED light heads, illustrating the integrated touch controls for adjusting brightness and color temperature. Icons for dimming and CCT (Correlated Color Temperature) are visible.

Key Features:

- Two integrated LED light sources (2x6W).
- Total luminous flux of 1600 lumens.
- Adjustable color temperature from 2700K (warm white) to 4000K (neutral white).
- Dimmable light output.
- Modern design with a sandschwarz (sand black) finish.

3. Setup

3.1 Unpacking

Carefully remove all components from the packaging. Check for any damage during transit. Retain packaging for future transport or returns if necessary.

3.2 Assembly

1. Attach the base to the main lamp body using the provided screws. Ensure it is securely fastened for stability.
2. Connect the two light arms to the central support structure.
3. Position the lamp on a flat, stable surface.

3.3 Placement

Place the floor lamp in your desired location, ensuring it is away from direct heat sources, moisture, and areas where it could be easily knocked over. Ensure the power cord can reach an outlet without being strained or creating a tripping hazard.



This diagram provides a clear representation of the lamp's physical dimensions, indicating a total height of 150 cm, a width of 40 cm, and a base diameter of 25 cm. It also reiterates the CCT and dimming features.

4. Operating Instructions

The Fischer & Honsel Dent LED Floor Lamp features intuitive touch controls located on the light heads.

4.1 Power On/Off

- To turn the lamp ON, gently touch the designated power symbol on either light head.
- To turn the lamp OFF, touch the power symbol again.

4.2 Dimming Function

- While the lamp is ON, touch and hold the dimming symbol (often represented by a circular icon or a hand icon) on either light head.
- The brightness will gradually increase or decrease. Release your finger when the desired brightness level is reached.

4.3 Color Temperature Adjustment (CCT)

- While the lamp is ON, touch the CCT symbol (often represented by a circle with color gradients) on either light head.
- Each touch will cycle through the available color temperature settings (e.g., 2700K warm white, 3000K soft white, 4000K neutral white).

5. Maintenance

5.1 Cleaning

- Always disconnect the lamp from the power supply before cleaning.
- Wipe the lamp with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or polishing agents, as these can damage the finish.

5.2 LED Light Sources

The LED light sources in this lamp are integrated and cannot be replaced. The lamp is designed for a long operational lifespan. If the LEDs fail, the entire fixture may need to be replaced.

6. Troubleshooting

6.1 Lamp Does Not Turn On

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the wall switch (if applicable) is in the ON position.
- Verify that there is power to the outlet by testing it with another device.

6.2 Dimming or CCT Adjustment Not Working

- Ensure your finger is making proper contact with the touch sensor.
- Try restarting the lamp by unplugging it for a few minutes and then plugging it back in.

6.3 Flickering Light


- Check for loose connections in the power outlet.

- Ensure the lamp is not connected to a dimmer switch that is incompatible with LED lighting (though the lamp itself is dimmable, external dimmers can cause issues).

7. Specifications

Model Number	40300
Brand	Fischer & Honsel
Light Source Type	Integrated LED
Number of Light Sources	2
Wattage per Light Source	6W
Total Luminous Flux	1600 lm
Color Temperature	2700K - 4000K (Adjustable)
Special Feature	Dimmable
Material	Metal
Color	Sandschwarz (Sand Black)
Product Dimensions (L x W x H)	40 x 25 x 150 cm
Product Weight	4.82 kg

7.1 Energy Efficiency

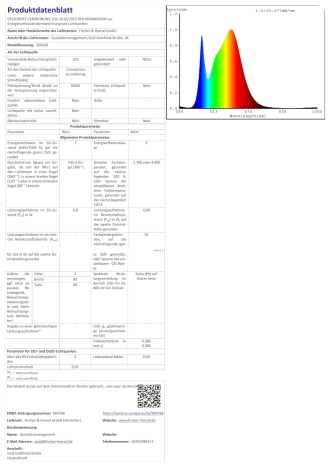

This image displays the EU energy efficiency label for the lamp, indicating its energy class F and other relevant energy consumption data. A QR code is present for further information.

For detailed energy information, please refer to the EPREL database: https://eprel.ec.europa.eu/qr/993766

8. Warranty Information

Fischer & Honsel products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims.

For specific warranty terms and conditions, please refer to the documentation provided at the time of

purchase or contact Fischer & Honsel customer support.

9. Support

If you encounter any issues or have questions regarding your Fischer & Honsel Dent LED Floor Lamp that are not covered in this manual, please contact your retailer or Fischer & Honsel customer service for assistance.

Please have your model number (40300) and proof of purchase ready when contacting support.

© 2023 Fischer & Honsel. All rights reserved.