Fischer & Honsel 30369

Fischer & Honsel Mara 30369 Wall Sconce Instruction Manual

Model: 30369 | Brand: Fischer & Honsel

1. Introduction

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your Fischer & Honsel Mara 30369 Wall Sconce. This elegant wall light features a timeless design with an upward and downward light distribution, creating a pleasant, indirect illumination. It is equipped with integrated, energy-efficient LEDs that emit a warm white light.



Figure 1: Fischer & Honsel Mara 30369 Wall Sconce in operation.

2. Safety Instructions

Please read these safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with all local and national electrical codes. Always disconnect power at the main circuit breaker before installation, maintenance, or bulb replacement.
- **Product Integrity:** Do not modify or alter the product in any way. Use only original replacement parts if necessary.
- **Environment:** This fixture is rated IP20, meaning it is protected against solid objects larger than 12.5mm but has no protection against water. Do not install in damp or wet locations.
- **Heat:** Ensure adequate ventilation around the fixture. Do not cover the fixture with any materials.
- **Handling:** Handle the fixture with care to avoid damage. Do not apply excessive force during installation.

3. Package Contents

Verify that all components are present before beginning installation.

- 1 x Fischer & Honsel Mara 30369 Wall Sconce (with integrated LED bulbs)

4. Setup and Installation

This wall sconce is designed for wall mounting. Professional installation is recommended.

1. **Prepare for Installation:**
    - Turn off the main power supply to the installation area at the circuit breaker.
    - Ensure the power is off using a voltage tester.
    - Gather necessary tools (screwdriver, drill, wire strippers, etc.).
2. **Mount the Fixture:**
    - Carefully remove the mounting bracket from the back of the wall sconce.
    - Position the mounting bracket on the wall at the desired location, ensuring it is level. Mark the drilling points.
    - Drill holes at the marked points and insert appropriate wall anchors (if required for your wall type).
    - Secure the mounting bracket to the wall using screws.
3. **Electrical Connection:**
    - Connect the household electrical wires to the fixture's wires according to local electrical codes (typically: Live to Live, Neutral to Neutral, Ground to Ground). Use appropriate wire connectors.
    - Ensure all connections are secure and insulated.
4. **Attach the Sconce:**
    - Carefully align the wall sconce with the mounted bracket and secure it in place using the provided screws or fasteners.
    - Ensure the fixture is firmly attached to the wall.
5. **Restore Power:**
    - Once installation is complete and all connections are secure, restore power at the main circuit breaker.
    - Test the light fixture to ensure proper operation.

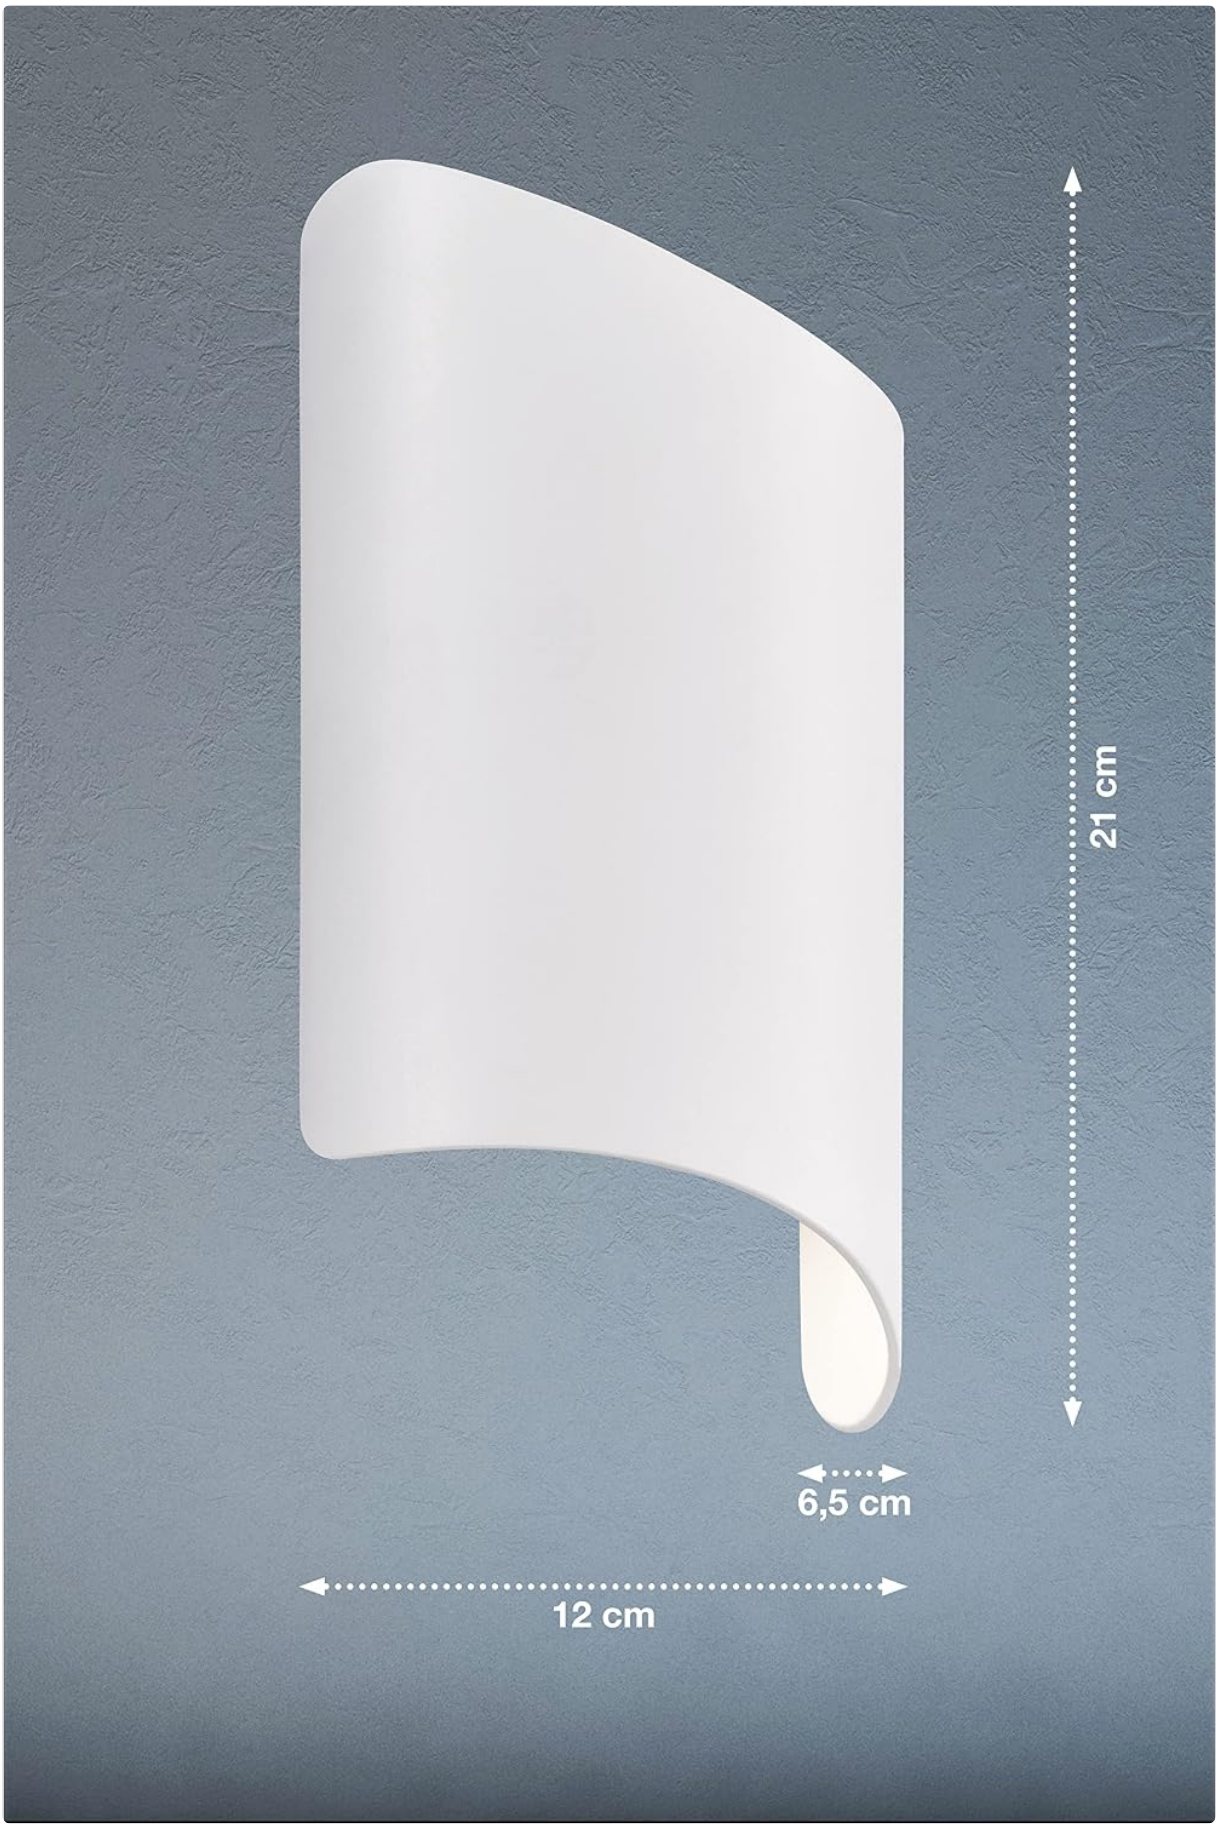


Figure 2: Product dimensions for installation planning.

5. Operating Instructions

The Fischer & Honsel Mara 30369 Wall Sconce is designed for simple operation.

- **Turning On/Off:** The light is controlled by a standard wall switch connected to the electrical circuit. Flip the switch to turn the light on or off.
- **Light Effect:** The fixture provides indirect light distribution, with light shining both upwards and downwards, creating a soft, non-glaring ambiance.



Figure 3: Detail of the up and down lighting effect.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your wall sconce.

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry, or slightly damp cloth to wipe the surface of the fixture. Do not use abrasive cleaners, solvents, or polishes, as these can damage the finish.
- **Bulb Replacement:** The Mara 30369 features integrated LED bulbs. These are not user-replaceable. If the LEDs fail, the entire fixture may need to be replaced. Contact customer support for assistance.
- **Inspection:** Periodically check the fixture for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.

7. Troubleshooting

If you encounter issues with your wall sconce, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Light does not turn on	No power supply Loose wiring connection Faulty wall switch	Check circuit breaker. Ensure power is off, then check wire connections. Test or replace the wall switch.
Light flickers	Loose wiring Power fluctuations	Ensure power is off, then check all wire connections. Consult an electrician if power fluctuations are suspected.
Light is dim	Not applicable (integrated LEDs)	The integrated LEDs provide a fixed lumen output. If significantly dim, contact support.

If the problem persists after attempting these solutions, please contact customer support or a qualified electrician.

8. Specifications

Detailed technical specifications for the Fischer & Honsel Mara 30369 Wall Sconce.

Feature	Specification
Brand	Fischer & Honsel
Model Number	30369
Dimensions (L x W x H)	21 x 12 x 6.5 cm
Weight	510 g
Material	Metal
Color	White

Feature	Specification
Light Source Type	Integrated LED
Number of Light Sources	2
Luminous Flux	370 lm
Average Lifespan	20,000 Hours
Energy Efficiency Label	F
IP Rating	IP20
Power Source	DC
Special Feature	Energy-efficient

Datenblatt

function

FISCHER & HONSEL

4 003694 303699



Serienname: Mara
Artikel-Nr.: 30369 ASIN: **B09KZYWRL5**

Wandleuchte, Mara | weiß
L: 21,00 cm, B: 12,00 cm, Ausladung Wand: 6,50 cm
2x LED 3,5W 2700 K inkl.
740 lm
Enthält Lichtquellen der Energieeffizienzklassen
F

Leuchtmittel: inkl.
Schutzart: IP20
Schutzklasse: 2
Katalog Seite: 0234 Katalog FH 2021/2022
GTIN-Nummer: 4003694303699
Zolltarifnummer: 094051190

Fischer & Honsel GmbH | Graf-Gottfried-Straße 111 | D-59755 Arnsberg | P +49 (0) 2932 989 - 0 | F +49 (0) 2932 989 - 101
info@fischer-honsel.de | www.fischer-honsel.de

Figure 4: Product datasheet with technical details. UPC: 4003694303699



Figure 5: Energy efficiency class F label.

9. Warranty and Support

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official Fischer & Honsel website. Keep your proof of purchase for warranty claims.

© 2023 Fischer & Honsel. All rights reserved.