NOQIZ NO-IOCK02

NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock User Manual

Model: NO-IOCK02

1. Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.



This image displays the NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock. On the left is the exterior unit with the keypad and keyhole. On the right is the interior unit, showing the thumb turn and battery compartment cover.

2. Important Safety Information

- Do not attempt to disassemble or modify the lock. This may cause damage and void the warranty.
- Ensure all components are installed correctly according to the instructions. Improper installation can lead to malfunction.
- Keep your physical keys in a safe location outside the property.
- Regularly check battery levels and replace batteries as needed to prevent lockouts.
- Avoid exposing the lock to extreme temperatures or direct water spray.

3. Package Contents

Please verify that all parts are present before beginning installation. Refer to your product packaging for a detailed list of included components. Typically, the package includes:

- Exterior Keypad Assembly
- Interior Assembly
- Deadbolt Latch
- Mounting Plate
- Strike Plate and Reinforcement Screws
- Mounting Hardware (screws, bolts)
- Physical Keys (2 supplied)
- User Manual

4. Specifications

Brand	NOQIZ
Model Number	NO-lOCK02
Colour	Black
Lock Type	Keypad Deadbolt
Special Features	Auto-Lock, Keyless Entry, Alarm
Door Thickness Compatibility	1.38 inches - 1.77 inches (35mm - 45mm)
Power Source	4 AA Batteries (not included)
Emergency Power	USB Socket
Controller Type	Amazon Alexa (Note: Specific Alexa integration details may require additional setup or hub, refer to manufacturer's website for full compatibility.)
Item Weight	1.03 kg

5. Setup and Installation


The NOQIZ Keyless Entry Door Lock is designed for easy installation, replacing most existing deadbolts. Ensure your door thickness is between 1.38 inches and 1.77 inches (35mm - 45mm).



This image shows the NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock installed on a residential door, emphasizing its compatibility with standard door thicknesses ranging from 1.38 to 1.77 inches (35mm to 45mm).

Installation Steps:

1. **Install the Latch and Strike:** Insert the deadbolt latch into the door edge. Secure the strike plate to the door frame.
2. **Install the Exterior Assembly:** Position the exterior keypad assembly on the outside of the door, ensuring the spindle passes through the latch.
3. **Install the Mounting Plate:** Secure the mounting plate to the interior side of the door, aligning it with the exterior assembly.
4. **Connect the Cable:** Connect the cable from the exterior assembly to the interior assembly.
5. **Install the Interior Assembly:** Attach the interior assembly to the mounting plate.
6. **Test Lock:** Insert 4 AA batteries (not included) into the interior assembly. Test the lock's functionality using the keypad and physical key.

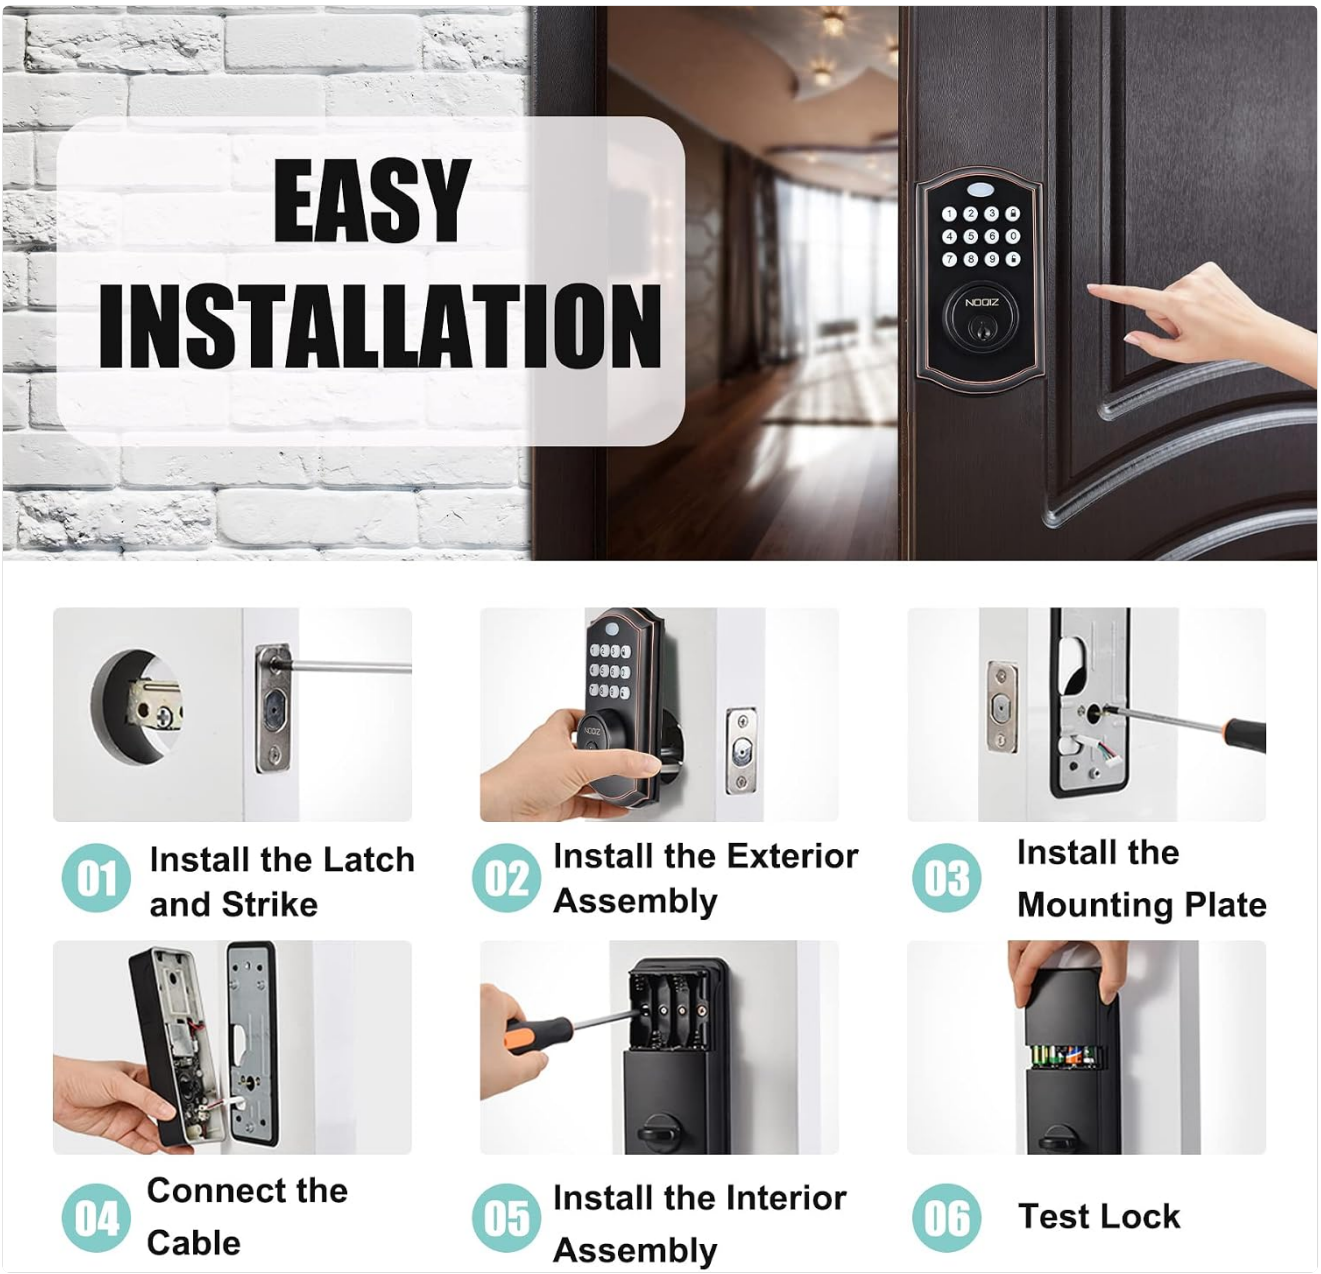

This image provides a visual, step-by-step guide for installing the NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock. It shows the process from installing the latch to testing the lock.

6. Operating Instructions

Your NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock offers multiple convenient ways to secure and access your property.



This image highlights key features of the NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock, including easy installation, two entry methods (code or key), and a convenient auto-lock function.

6.1. Keypad Entry

- The keypad is backlit for visibility in low-light conditions.
- To unlock: Enter your programmed user code (up to 50 codes can be added) and press the lock button.
- To lock: Press the lock button once.

6.2. Physical Key Entry

Two physical keys are supplied for manual unlocking. Insert the key into the keyhole on the exterior assembly and turn to unlock or lock the deadbolt.



This image displays the NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock along with the physical keys provided, demonstrating the two available entry options: keypad code or traditional key.

6.3. Auto-Lock Function

- The lock can be programmed to automatically re-lock after a set period (3-30 seconds) for added security.
- To disable auto-lock, set the auto-lock time to 0 seconds during programming.

6.4. Alarm Function

The lock features an auto-alarm for enhanced security. Details on specific alarm triggers and settings can be found in the full programming guide (refer to manufacturer's website).



This image illustrates additional features of the NOQIZ Keyless Entry Smart Keypad Deadbolt Door Lock, such as compatibility with standard-sized doors, an integrated alarm for security, and smart reminders.

7. Maintenance

7.1. Battery Replacement

- The lock is powered by 4 AA batteries (not included).
- A low-battery alert will indicate when batteries need replacement.
- To replace, remove the interior assembly cover, replace the old batteries with new ones, and reattach the cover.

7.2. Emergency Charging

In case of complete battery depletion, a USB socket is located at the bottom of the exterior unit for emergency power. Connect a portable power bank to temporarily power the lock and gain entry.

7.3. Cleaning

Clean the lock's exterior with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish or electronic components.

8. Troubleshooting

- **Lock not responding:** Check battery levels. If batteries are low or dead, replace them or use the emergency USB power.
- **Keypad not lighting up:** This usually indicates low or dead batteries.
- **Lock not engaging/disengaging:** Ensure the deadbolt latch is installed correctly and moves freely. Check for any obstructions in the door frame.
- **Forgotten user code:** Refer to the full programming guide (available on the manufacturer's website) for instructions on resetting or recovering user codes.
- **Alarm sounding unexpectedly:** Review the alarm settings in the programming guide. Ensure the lock is properly calibrated and not being tampered with.

9. Warranty Information

For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official NOQIZ website. Keep your proof of purchase for warranty claims.

10. Support

If you encounter any issues not covered in this manual or require further assistance, please contact NOQIZ customer support. Contact information can typically be found on the product packaging or the official NOQIZ website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question