Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SIKVIO W8

SIKVIO W8 1080P Spy Camera Pen User Manual

Model: W8 | Brand: SIKVIO

Introduction

This manual provides comprehensive instructions for the SIKVIO W8 1080P Spy Camera Pen. This device is designed for discreet video recording and photo capture, featuring Full HD 1080P resolution, one-touch operation, and a portable design. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.



Image: Overview of the SIKVIO W8 Spy Camera Pen, highlighting its discreet design.

Package Contents

Please check the package contents upon unboxing to ensure all items are present:

- 1 x SIKVIO W8 Hidden Camera Pen

- 1 x Card Reader
- 5 x Ink Refills
- 1 x Ejection Pin
- 1 x USB Cable
- 1 x 32GB SD Card



Image: All items included in the SIKVIO W8 Spy Camera Pen package.

Product Overview

Familiarize yourself with the key components of your SIKVIO W8 Spy Camera Pen.



Image: A hand holding the camera pen, illustrating the camera lens, indicator lights, and the sliding cover mechanism.

- **Camera Lens:** Located near the top of the pen.
- **Operation Button:** Single button on top for all functions.
- **Indicator Light:** Provides status feedback (e.g., recording, charging).
- **USB Port/SD Card Slot:** Located under the pen's top section for charging and data transfer.
- **Sliding Camera Cover:** Allows for discreet concealment of the camera lens.

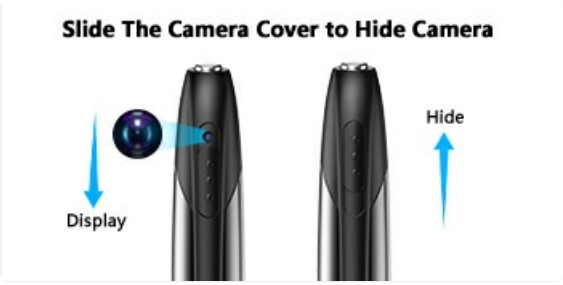


Image: Diagram showing how to slide the camera cover to reveal or hide the lens.

Setup

1. **Charge the Device:** Before first use, fully charge the camera pen. Connect the pen to a USB power source using the provided USB cable. The indicator light will show charging status and turn off when fully charged.
2. **Insert SD Card:** The pen comes with a 32GB SD card. Locate the SD card slot (refer to Product Overview) and gently insert the SD card until it clicks into place. Ensure the pen is powered off before inserting or removing the SD card.
3. **Power On:** Press and hold the operation button for a few seconds until the indicator light turns on, indicating the device is powered on and in standby mode.



Image: Close-up view of the pen's top section, showing the USB charging port and the TF (Micro SD) card connector.

Operating Instructions

Video Recording

1. Ensure the pen is powered on and in standby mode (indicator light on).

2. Press the operation button once. The indicator light will flash a few times and then turn off, indicating that video recording has started.
3. To stop recording and save the video, press the operation button once again. The indicator light will turn back on, signifying standby mode.

Photo Taking

1. Ensure the pen is powered on and in standby mode.
2. Double-click the operation button. The indicator light will flash once, indicating a photo has been taken and saved.

Power Off

To power off the device, press and hold the operation button for several seconds until the indicator light turns off completely.

Charging

Connect the pen to a USB power source using the provided cable. The device supports recording while charging, providing extended operational time. A full charge typically provides up to 150 minutes of recording.



Image: The camera pen connected to a power bank via USB cable, illustrating its charging capability.

Viewing Files

To view recorded videos and photos, connect the camera pen to a computer via the USB cable, or remove the SD card and insert it into the provided card reader, then connect the card reader to your computer. The files will be accessible as a removable disk.

Loop Recording

The device supports loop recording. When the SD card memory is full, the oldest files will be automatically overwritten by new recordings.



Image: Visual representation of the loop recording function, where new footage overwrites the oldest when storage is full.

Maintenance

Ink Refill Replacement

To replace the ink refill, follow these steps:

1. Rotate the lower part of the pen body counter-clockwise.
2. Pull the two halves apart.
3. Carefully take out the old ink refill.
4. Insert a new refill.
5. Tighten the upper and lower parts together by rotating clockwise.
6. Turn the tip of the pen to extend the ballpoint.



Image: Step-by-step guide for replacing the ink refill in the camera pen.

Cleaning and Storage

- Wipe the pen with a soft, dry cloth. Do not use liquid cleaners.
- Store the pen in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the device or subjecting it to strong impacts.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device fully.
Recording stops automatically after a few minutes.	Low battery or SD card issue.	Ensure the device is fully charged. Check if the SD card is properly inserted or try formatting it (this will erase all data).
Poor video/photo quality.	Insufficient lighting, dirty lens, or movement during capture.	Ensure adequate lighting. Clean the camera lens gently with a soft cloth. Minimize movement during recording or photo taking.

Problem	Possible Cause	Solution
Cannot view files on computer.	Incorrect connection or driver issue.	Ensure the USB cable is securely connected. Try a different USB port or computer. Use the provided card reader to access files directly from the SD card.
Pen clip broke.	Material fatigue or excessive force.	Handle the pen clip with care. If within warranty, contact customer support for assistance.

Specifications

- **Model Name:** W8
- **Brand:** SIKVIO
- **Video Recording Resolution:** 1080p (Full HD)
- **Video Capture Format:** AVI
- **Photo Resolution:** 4032*3024 pixels
- **Connectivity Technology:** Wireless (Note: The product operates primarily standalone without Wi-Fi for basic functions, despite some specifications listing wireless/Wi-Fi connectivity. File viewing is typically via USB or SD card reader.)
- **Special Feature:** Portable
- **Power Source:** Battery Powered (340 mAh rechargeable battery)
- **Battery Life:** Approximately 150 minutes of continuous recording
- **Storage Capacity:** Supports up to 64GB (32GB SD card included)
- **Dimensions (L x W x H):** 8 x 2 x 1 cm
- **Weight:** 80 grams
- **Controller Type:** Push Button
- **International Protection Rating:** IP54
- **Internal Material:** Plastic

Warranty and Support

The SIKVIO W8 Spy Camera Pen comes with a 30-day refund policy and an 18-month warranty or replacement guarantee. For any questions, technical support, or warranty claims, please contact SIKVIO customer service. Refer to the product packaging or the retailer's website for specific contact information.

© 2024 SIKVIO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09L4KK876

More documents and user manuals: **https://manuals.plus/**