Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

E-YOOSO E-1010

E-YOOSO E-1010 Wireless Optical Mouse User Manual

Model: E-1010

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your E-YOOSO E-1010 Wireless Optical Mouse. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

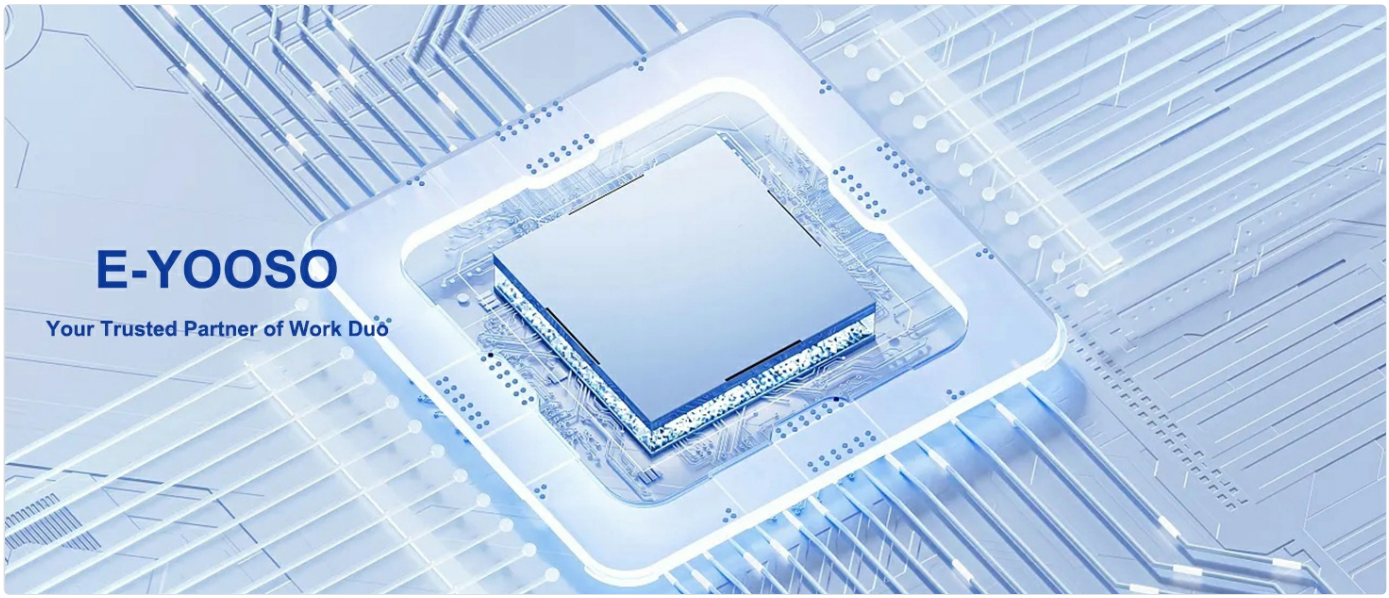


Image: E-YOOSO Wireless Mouse connected to a laptop, illustrating its wireless functionality.

2. Package Contents

Verify that all items are present in your package:

- 1 x E-YOOSO E-1010 Wireless Optical Mouse
- 1 x USB Nano Receiver
- 1 x User Manual

Note: 1 AA battery is required and not included in the package.

3. Setup Guide

3.1 Installing the Battery

1. Open the battery compartment cover located on the underside of the mouse.
2. Insert one AA battery, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.



Image: Illustration of opening the battery cover, inserting an AA battery, and storing the USB receiver.

3.2 Connecting the USB Receiver

1. Locate the USB Nano Receiver, which is typically stored within the battery compartment of the mouse for convenience.

2. Plug the USB Nano Receiver into an available USB port on your computer (PC, laptop, Chromebook, Mac, etc.).
3. The mouse is plug-and-play and should be recognized automatically by your operating system within a few seconds.

For a visual guide on setup, please refer to the video below:

Your browser does not support the video tag.

Video: E-YOOSO E-1010 Wireless Mouse setup guide, demonstrating battery installation and USB receiver connection.

4. Operating Instructions

4.1 Button Functions

The E-YOOSO E-1010 mouse features 6 buttons for enhanced functionality:

- **Left Button:** Standard click function.
- **Right Button:** Context menu function.
- **Middle Button (Scroll Wheel):** Scroll up/down, click for auto-scroll.
- **DPI Adjustment Button:** Located below the scroll wheel, used to cycle through DPI settings.
- **Forward Button:** Navigates forward in web browsers or file explorers (not available on Mac OS).
- **Backward Button:** Navigates backward in web browsers or file explorers (not available on Mac OS).

4.2 DPI Adjustment

The mouse offers 5 adjustable DPI levels to suit various tasks, from precise work to fast-paced gaming. The current DPI level is indicated by LED flashes:

- **800 DPI:** LED flashes once.
- **1200 DPI (Default):** LED flashes twice.
- **1600 DPI:** LED flashes three times.
- **2000 DPI:** LED flashes four times.
- **2400 DPI:** LED flashes five times.

To change the DPI, press the DPI adjustment button. The LED will flash to indicate the new setting.



Image: Visual representation of the 5 DPI levels and their corresponding LED flash indicators.

4.3 Polling Rate Adjustment

The mouse supports two polling rates: 125Hz (default) and 250Hz. To switch between these rates, press the Right Button and the Middle Button (scroll wheel) simultaneously for 3 seconds. The LED will flash 5 times during the switching process.

5. Maintenance and Power Saving

5.1 Battery Life and Power Saving Mode

The E-YOOSO E-1010 Wireless Mouse is designed for extended battery life, offering up to 18 months of use on a single AA battery. To conserve power, the mouse features a smart auto-sleep mode:

- If the mouse is inactive for 8 minutes, it will automatically enter sleep mode.
- To reactivate the mouse, simply click any button.



Image: Diagram illustrating the mouse's working, standby, auto-sleep, and activation states for power saving.

5.2 Cleaning

To clean your mouse, use a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the surface.

6. Troubleshooting

- **Mouse not responding:** Ensure the USB Nano Receiver is securely plugged into a USB port. Check the battery and replace it if necessary. Try plugging the receiver into a different USB port.
- **Intermittent connection:** Ensure the mouse is within the 33ft (10m) operating range of the receiver. Avoid using the mouse on highly reflective or transparent surfaces.
- **Cursor movement is erratic:** Clean the optical sensor on the underside of the mouse. Adjust the DPI setting to a lower value if the cursor is too sensitive.

- **Side buttons not working on Mac:** The forward and backward buttons are not functional on Mac OS. This is a system limitation.

7. Specifications

Feature	Detail
Brand	E-YOOSO
Model Number	E-1010
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Movement Detection Technology	Optical
DPI Levels	800, 1200, 1600, 2000, 2400 (5-level adjustable)
Polling Rate	125Hz / 250Hz
Button Quantity	6 (Left, Right, Middle, DPI, Forward, Backward)
Hand Orientation	Right
Wireless Range	Up to 33 feet (10 meters)
Battery Type	1 x AA Battery (not included)
Battery Life	Up to 18 months
Keystroke Test	5,000,000 clicks
Material	Plastic

8. Compatibility

The E-YOOSO E-1010 Wireless Optical Mouse is widely compatible with various operating systems and devices:

- **Operating Systems:** Windows 11, 10, 8.1, 8, 7, XP, Vista, Linux, Chrome OS, Mac OS (Note: Side buttons are not available on Mac OS).
- **Compatible Devices:** Personal Computers, Laptops (HP, DELL, Lenovo, Acer, ASUS, Microsoft, ThinkPad, SAMSUNG), Surface Pro, Surface, Chromebooks, and any device with a USB port.



Image: Visual showing the mouse's compatibility with Windows, Mac OS, Linux, PC, and Notebooks, suitable for both office and gaming environments.

9. Warranty and Support

E-YOOSO provides a 1-year warranty for this product. For technical support, warranty claims, or further assistance, please contact your retailer or visit the official E-YOOSO website. Please retain your proof of purchase for warranty purposes.

© 2026 E-YOOSO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09LYQ983C

More documents and user manuals: **https://manuals.plus/**