Bellemave bed-frames

Bellemave Full Over Full Bunk Beds with Trundle and Stairs Instruction Manual

Model: bed-frames

Introduction

This manual provides comprehensive instructions for the assembly, operation, maintenance, and safety of your Bellemave Full Over Full Bunk Beds with Trundle and Stairs. Please read all instructions carefully before assembly and use to ensure safe and proper operation of the product.



Image: The Bellemave Full Over Full Bunk Bed with Trundle and Stairs, showcasing its grey finish and integrated storage.

Safety Information

Your safety is paramount. Adhere to the following guidelines to prevent injury and ensure the longevity of your bunk bed.

- **Maximum Weight Capacity:** The upper bed has a weight capacity of 250 lbs. The bottom bed also has a weight capacity of 250 lbs. Do not exceed these limits.
- **Guardrails:** The upper bunk is equipped with full-length guardrails. Ensure they are always securely in place to prevent falls.
- **Staircase Safety:** Exercise caution around the sharp edges of the staircase storage. Always use the staircase for access to the upper bunk; do not jump on or off the bed.
- **Mattress Requirements:** No box spring is required. Use a mattress that fits the bed frame dimensions appropriately.
- **Assembly:** Follow all assembly instructions precisely. Improper assembly can lead to instability and potential hazards.

- **Regular Checks:** Periodically check all bolts and connections to ensure they remain tight. Tighten as necessary.

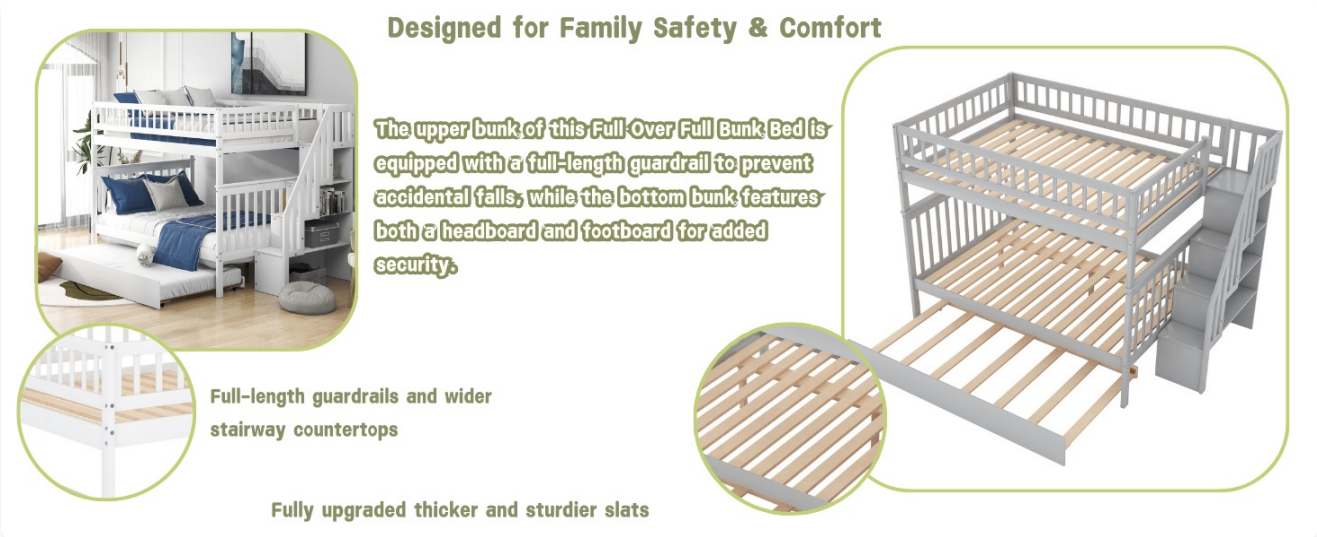


Image: Illustration emphasizing the full-length guardrails on the upper bunk and the robust slat system for enhanced safety and comfort.

Product Features

The Bellemave Full Over Full Bunk Beds with Trundle and Stairs offers a versatile and space-saving sleeping solution with integrated storage.

- **Spacious Design:** Full over full bunk bed configuration maximizes sleeping space.
- **Integrated Trundle:** A built-in trundle bed provides additional sleeping capacity for guests or family members.
- **Staircase with Storage:** A four-step staircase offers safe access to the top bunk and includes four spacious storage compartments for bedding, books, or toys.
- **Solid Wood Construction:** Crafted from durable, high-quality pine wood and engineered wood for stability and long-lasting use.
- **Detachable Design:** The bunk bed can be separated into two individual full-size beds, offering flexible use options.
- **Safety Features:** Full-length guardrails on the upper bunk and headboard/footboard on the bottom bunk ensure a secure sleeping environment.

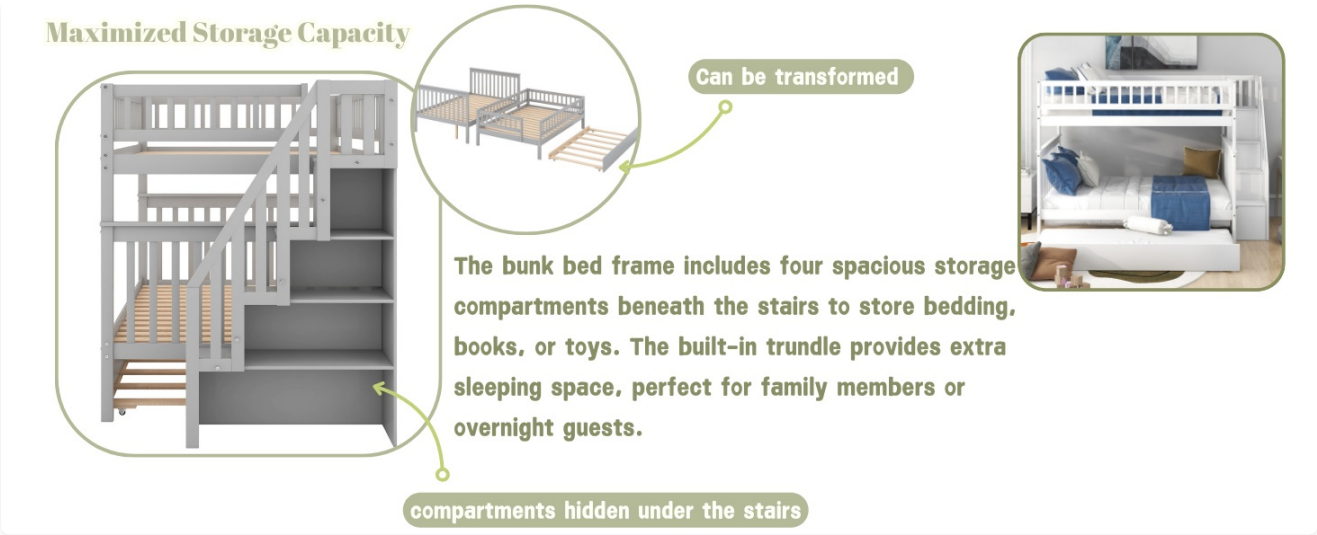


Image: The bunk bed featuring its pull-out trundle and the integrated storage compartments within the staircase.

Setup and Assembly

Assembly is required for this bunk bed. Please ensure all parts are present and follow the steps carefully. A full set of mounting hardware and instructions are included with the product.

Assembly Video Guide

Your browser does not support the video tag.

Video: A detailed assembly guide for the Bellemave Full Bunk Bed with Trundle. This video demonstrates each step of the construction process, from attaching headboards and footboards to installing slats and assembling the staircase.

Key Assembly Steps (Refer to included manual for full details)

1. **Prepare Components:** Unpack all boxes and identify all parts and hardware according to the provided parts list.
2. **Assemble Bed Frames:** Construct the upper and lower bed frames by attaching the side rails to the headboards and footboards using the specified hardware.
3. **Install Slats:** Securely attach the wooden slats to both the upper and lower bed frames. Ensure all slats are evenly spaced and firmly fastened.
4. **Assemble Staircase:** Construct the staircase unit, ensuring all storage compartments are correctly aligned and secured.
5. **Attach Staircase:** Connect the assembled staircase to the main bunk bed frame.
6. **Install Guardrails:** Securely attach the guardrails to the upper bunk.
7. **Assemble Trundle:** Construct the trundle bed frame and install its slats and wheels.
8. **Final Placement:** Position the trundle under the lower bunk.



Image: An example of the detailed assembly instructions provided, showing a hardware list and step-by-step diagrams.

Operating Instructions

The Bellemave bunk bed offers flexible configurations to suit your needs.

Using the Trundle Bed

The trundle bed is designed for easy access and storage. Simply pull the trundle unit out from under the lower bunk when an additional sleeping space is needed. Push it back in when not in use to save space.



Image: The trundle bed extended, ready for use, demonstrating its smooth pull-out mechanism.

Detaching into Two Individual Beds

For increased versatility, the bunk bed can be separated into two independent full-size beds. This process involves carefully disassembling the connecting components between the upper and lower bunks and removing the staircase. Refer to your detailed assembly manual for specific steps on how to safely detach the beds.



Image: An illustration demonstrating how the bunk bed can be separated into two individual full-size beds, along with the trundle.

Maintenance

Proper care will extend the life and appearance of your Bellemave bunk bed.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the bed frame to prevent buildup.
- **Hardware Check:** Periodically inspect all bolts, screws, and connections. Tighten any loose hardware to maintain structural integrity.
- **Avoid Excessive Moisture:** Protect the wood from prolonged exposure to moisture.

Troubleshooting

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Bed feels wobbly or unstable	Loose hardware connections.	Check and tighten all bolts and screws on the bed frame and staircase. Ensure all parts are correctly aligned.
Squeaking noises	Loose connections or friction between wooden parts.	Tighten all hardware. If squeaking persists, apply a small amount of paraffin wax or silicone spray to contact points between wooden components.

Problem	Possible Cause	Solution
Trundle does not slide smoothly	Obstruction under the bed or dirty wheels.	Clear any debris from under the bed. Clean the trundle wheels and ensure they are free of hair or dirt. Check if wheels are properly installed.
Staircase storage drawers stick	Misalignment or debris.	Ensure items are not overfilling the compartments. Check for any foreign objects obstructing the movement. Verify the staircase assembly is correct.

Specifications

Feature	Detail
Size	Full Over Full with Trundle
Color	Grey
Material	Engineered Wood, Pine Wood
Product Dimensions	92.9 x 57.9 x 65.7 inches
Upper Bed Weight Capacity	250 lbs
Bottom Bed Weight Capacity	250 lbs
Trundle Bed Weight Capacity	Not specified, assume similar to bottom bed.
Assembly Required	Yes
Storage Options	Staircase storage, Under-bed storage (trundle)
Model Number	bed-frames
UPC	733805223526

Warranty and Support

Bellemave products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or contact Bellemave customer support directly. If you have any questions, require replacement parts, or need assistance with assembly or troubleshooting, please reach out to our customer service team. Contact details can typically be found on the product packaging or the official Bellemave website.

© 2025 Bellemave. All rights reserved.