Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KREAFUNK 18760

KREAFUNK Awake Smart Alarm Clock with QI Charge

User Manual - Model: 18760

Brand: KREAFUNK

1. Introduction

The KREAFUNK Awake is an intelligent alarm clock designed to enhance your morning routine. It features a built-in QI wireless charging pad, a simulated sunrise LED lamp, and pre-defined sleep sounds and alarm melodies. This manual provides detailed instructions for setting up, operating, and maintaining your Awake alarm clock.



Figure 1.1: Front view of the KREAFUNK Awake Smart Alarm Clock, displaying the digital time and temperature, with a fabric speaker grille on the left side.

2. Important Safety Information

Please read all safety instructions carefully before using the device. Keep this manual for future reference.

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures, direct sunlight, or heat sources.
- Do not disassemble, repair, or modify the device. This will void the warranty.
- Use only the provided power adapter or a certified equivalent.
- Keep out of reach of children and pets.
- Ensure proper ventilation around the device during operation.
- Avoid placing metallic objects on the QI charging pad, as this may cause overheating or damage.

3. Package Contents

Verify that all items are present in the package:

- KREAFUNK Awake Smart Alarm Clock
- USB Power Cable
- User Manual

4. Product Overview

Familiarize yourself with the various parts of your KREAFUNK Awake alarm clock.

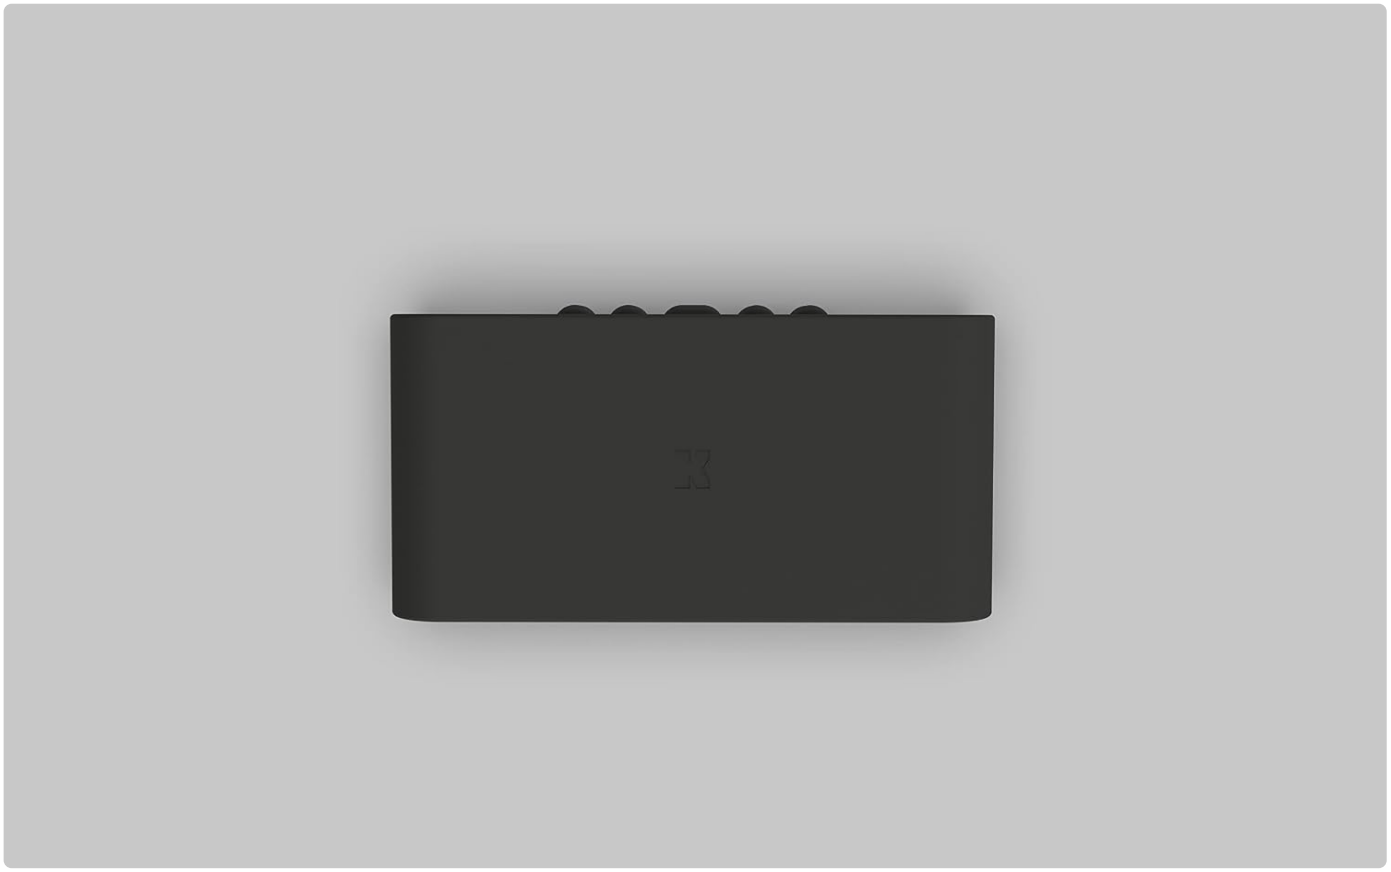


Figure 4.1: Top view of the KREAFUNK Awake, showing the QI wireless charging pad and the control buttons located at the rear top edge.

1. **Digital Display:** Shows time, temperature, and alarm status.
2. **Speaker Grille:** Located on the left side, for audio output.
3. **QI Wireless Charging Pad:** Top surface for wireless charging compatible devices.
4. **Control Buttons:** Located on the rear top edge for settings and functions.
5. **LED Lamp:** Integrated light for sunrise simulation, located at the rear.
6. **Power Port:** For connecting the USB power cable.



Figure 4.2: Angled view of the KREAFUNK Awake, highlighting the sleek design and the digital display.

5. Setup

5.1 Power Connection

1. Connect the provided USB power cable to the power port on the back of the Awake alarm clock.
2. Plug the other end of the USB cable into a compatible USB power adapter (not always included) and then into a wall outlet.
3. The display will light up, indicating the device is powered on.

5.2 Initial Time Setting

Upon first power-up or after a power interruption, you may need to set the time manually. Refer to the "Operating" section for detailed instructions on setting the time and alarm. Note: The device may not retain time settings without continuous power.

6. Operating Instructions

6.1 Setting Time and Date

Use the control buttons on the rear top edge to navigate settings.

1. Press the **SET** button to enter time setting mode.
2. Use the **+/-** buttons to adjust hours, then press**SET** to confirm and move to minutes.
3. Repeat for minutes, then date (if applicable).
4. Press **SET** again to exit.

6.2 Setting the Alarm

1. Press the **ALARM** button to enter alarm setting mode.

2. Use the **+/-** buttons to set the desired alarm time.
3. Press **ALARM** again to confirm.
4. You may be prompted to select an alarm melody or sound. Use **+/-** to choose.
5. To activate/deactivate the alarm, press the **ALARM** button briefly outside of setting mode. An alarm icon will appear/disappear on the display.

6.3 QI Wireless Charging

The top surface of the Awake alarm clock functions as a QI wireless charging pad.

1. Place your QI-compatible smartphone or device directly onto the center of the charging pad.
2. Ensure the device is properly aligned for optimal charging. A charging indicator (if available on the alarm clock or your device) will confirm charging has begun.
3. Remove any metallic objects or thick cases from your device before charging.



Figure 6.1: A user placing a smartphone on the KREAFUNK Awake's top surface for QI wireless charging.

6.4 Sunrise Simulation LED Lamp

The integrated LED lamp simulates a sunrise, gradually brightening before your alarm time.

- The lamp will automatically begin to illuminate a set time before your alarm sounds (e.g., 30 minutes).
- Consult the manual's specific section on light settings to adjust the intensity or duration if available.

6.5 Bluetooth Connectivity

The Awake alarm clock can function as a Bluetooth speaker.

1. Press the **Bluetooth** button (or a dedicated mode button) to enter Bluetooth pairing mode. The display may show "PAIR" or a blinking Bluetooth icon.

2. On your smartphone or audio device, enable Bluetooth and search for "KREAFUNK Awake" (or similar name).
3. Select the device to pair. Once connected, you can stream audio to the alarm clock.

6.6 Snooze Function

When the alarm sounds, press the **SNOOZE** button (often a large button on top or a specific control button) to temporarily silence the alarm. The alarm will sound again after a set interval (e.g., 9 minutes).



Figure 6.2: The KREAFUNK Awake alarm clock positioned on a bedside table, demonstrating its integration into a bedroom environment.

7. Maintenance

7.1 Cleaning

- Unplug the device before cleaning.
- Wipe the surface with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or strong chemicals.
- Avoid getting moisture into any openings.

7.2 Storage

If storing the device for an extended period, unplug it and keep it in a cool, dry place away from direct sunlight.

8. Troubleshooting

If you encounter issues with your KREAFUNK Awake, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Device does not power on.	Power cable not connected properly; power outlet not working.	Ensure power cable is securely connected. Try a different power outlet.
QI charging not working.	Device not QI-compatible; misaligned on pad; metallic objects present; thick phone case.	Verify device compatibility. Realign device on the center of the pad. Remove metallic objects or thick cases.
Alarm does not sound.	Alarm not activated; volume too low; incorrect alarm time.	Ensure alarm icon is visible on display. Increase volume. Verify alarm time settings.
Poor sound quality (Bluetooth).	Device too far from alarm clock; interference; low quality audio source.	Move Bluetooth device closer. Reduce interference from other electronics. Try a different audio source.
Temperature display is inaccurate.	Environmental factors; sensor calibration.	Ensure device is not near heat sources or vents. The temperature reading is for general indication and may not be laboratory precise.
Display dimming setting reverts or is too bright.	Specific device behavior; limited dimming range.	This may be a characteristic of the device's design. Check if there's a firmware update or a specific setting to lock brightness. Some displays have a minimum brightness that is still visible in dark rooms.
Time resets when unplugged.	No backup battery or backup battery depleted.	This model may require continuous power to maintain time settings. Ensure it remains plugged in.

9. Specifications

Brand:	KREAFUNK
Model Number:	18760
Color:	Black
Material:	Plastic, Metal
Dimensions (Package):	10 x 2 x 2 cm
Item Weight:	1 Kilogram
Compatible Devices:	Android, iOS (for Bluetooth connectivity)
Special Features:	Alarm, QI Wireless Charging, Sunrise Simulation LED Lamp, Bluetooth Speaker
Power Source:	Powered by cable (USB)
Total USB Ports:	1 (for power input)

10. Warranty and Support

KREAFUNK products are designed with quality and durability in mind. For specific warranty information, please refer to the warranty card included with your product or visit the official KREAFUNK website.
If you require technical support or have questions not covered in this manual, please contact KREAFUNK customer service through their official channels.

- **Online Support:** Visit the KREAFUNK official website for FAQs, support articles, and contact forms.
- **Email Support:** Refer to your product packaging or the official website for customer service email addresses.

© 2023 KREAFUNK. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09MJ32JGB

More documents and user manuals: **https://manuals.plus/**