Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

BRANDT BPI6364B

BRANDT BPI6364B Induction Hob User Manual

Model: BPI6364B

1. Introduction and Safety Information

This manual provides essential information for the safe and efficient operation of your BRANDT BPI6364B induction hob. Please read all instructions carefully before installation and use, and retain this manual for future reference.

General Safety Warnings

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Do not operate the hob if the ceramic glass surface is cracked or broken. Disconnect from the power supply immediately.
- Keep children away from the appliance during operation and when it is cooling down. Residual heat can cause burns.
- Do not place metallic objects such as knives, forks, spoons, or lids on the hob surface as they can become hot.
- Avoid overheating oil or fat, as this can lead to fire.
- Do not use steam cleaners to clean the hob.
- Individuals with pacemakers or similar medical implants should consult their doctor before using an induction hob.

2. Product Overview

The BRANDT BPI6364B induction hob is designed for modern kitchens, offering efficient and precise cooking with its advanced features.

Key Features:

- **3 Induction Cooking Zones:** Provides flexibility for various pot and pan sizes.
- **1 x 28 cm Self-Adapting Zone:** Accommodates larger cookware with up to 3600W power.
- **Integrated Timer:** Allows setting cooking durations from 1 to 99 minutes with automatic shut-off.
- **10-Point Safety System:** Includes anti-overheating, anti-overflow, residual heat indicators, keypad lock, automatic

stop, and detection for utensils, small objects, low intensity overvoltage, and poor connection.

- **Operation Indicator:** Visual feedback for active zones and functions.



Figure 2.1: Front view of the BRANDT BPI6364B induction hob, showing the three cooking zones and sleek black ceramic glass surface.

3. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your induction hob. This appliance is designed for built-in installation.

What's in the Box:

- BRANDT BPI6364B Induction Hob Unit

Installation Requirements:

- **Type of Installation:** Built-in
- **Power Supply:** 3600 Watts, Cable electric (refer to local electrical codes for connection).
- **Material:** Ceramic glass surface.

Dimensions and Cut-out:

Ensure your countertop has the correct cut-out dimensions for a secure fit.

- **Product Dimensions (L x W x H):** 75 x 61 x 16 cm
- **Weight:** 6 kg



Figure 3.1: Underside view of the induction hob, showing the casing and connection points for installation.



Figure 3.2: Detailed installation diagram showing the required countertop cut-out dimensions (560mm x 490mm) and clearances for the BRANDT BPI6364B induction hob.

4. Operating Instructions

Your BRANDT BPI6364B induction hob features intuitive touch controls for easy operation.

Control Panel Overview:

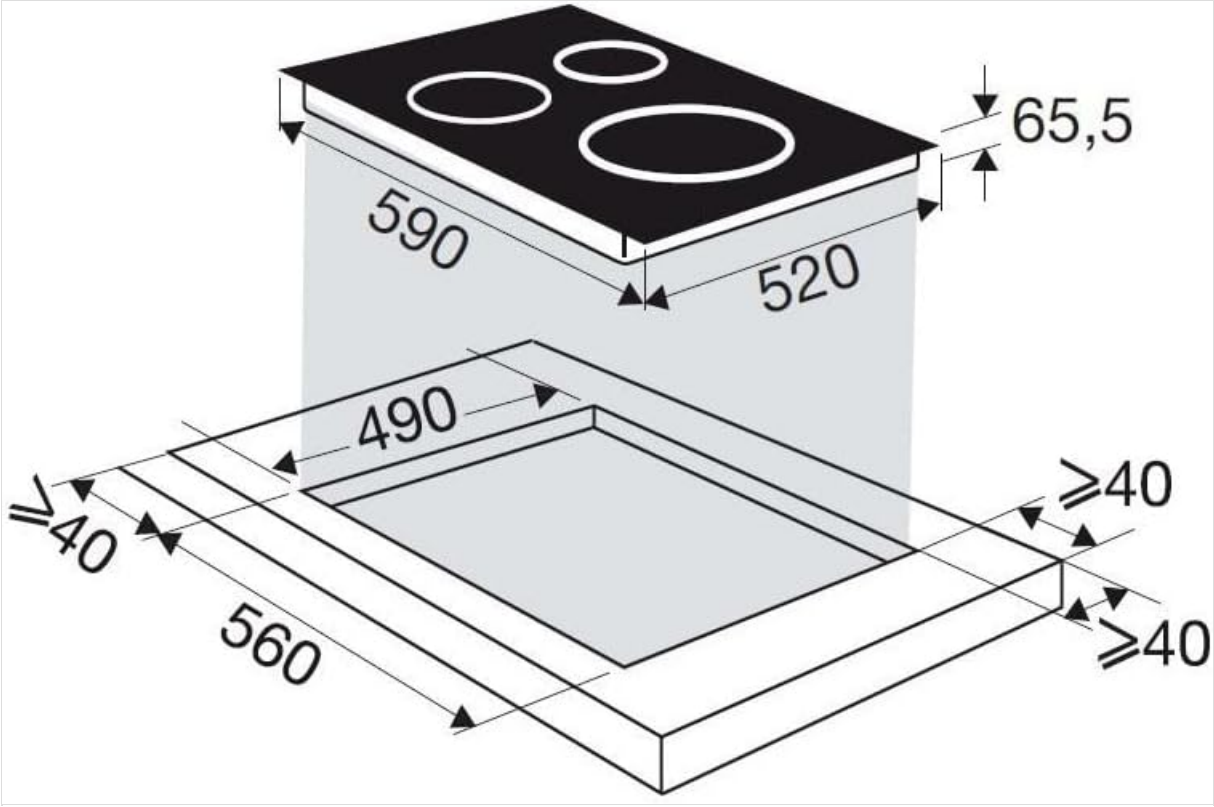


Figure 4.1: Close-up of the touch control panel, showing power, timer, and zone selection buttons with digital display.

Turning On/Off:

- Press the main power button (**O**) to turn the hob on. The display will show '0' for each zone.
- Press and hold the main power button to turn the hob off.

Selecting a Cooking Zone and Power Level:

- Place suitable induction-compatible cookware on the desired cooking zone.
- Select the cooking zone by pressing its corresponding zone selection button.
- Adjust the power level using the '+' and '-' buttons. The power level will be displayed.

Using the Timer:

- With a cooking zone active, press the timer button (**clock icon**).
- Use the '+' and '-' buttons to set the desired cooking time (1 to 99 minutes).
- The timer will count down, and the selected cooking zone will automatically switch off when the time expires.

Safety Features:

- **Residual Heat Indicators (H):** After use, 'H' will appear on the display for zones that are still hot. Do not touch these zones.
- **Keypad Lock:** Activates to prevent accidental changes to settings. Refer to the full manual for specific activation steps.
- **Automatic Stop:** If a cooking zone is left on for an extended period without adjustment, it will automatically switch off.
- **Pan Detection:** The hob will only activate if suitable cookware is placed on the zone. An error message may appear if no pan or an unsuitable pan is detected.

5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

Daily Cleaning:

- Always ensure the hob is cool before cleaning.
- Wipe the ceramic glass surface with a soft cloth and warm soapy water.
- For stubborn stains, use a specialized ceramic hob cleaner and a non-abrasive sponge.
- Rinse thoroughly and dry with a clean cloth to prevent water marks.

Important:

- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the ceramic surface.
- Avoid spilling sugary substances on the hot hob, as they can melt and cause permanent damage. If this occurs, scrape off immediately with a hob scraper while still warm, then clean.

6. Troubleshooting

Before contacting customer service, please refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Main power button not pressed correctly.	Check circuit breaker; Ensure power button is pressed and held for a few seconds.
Cooking zone not heating.	Unsuitable cookware; No cookware detected; Pan not centered.	Use induction-compatible cookware; Place pan centrally on the zone; Ensure pan base covers the zone.
Display shows 'E' or error code.	Internal fault; Overheating; Object on control panel.	Turn off and restart the hob; Allow to cool down; Remove any objects from the control panel. If the error persists, contact customer support.
Hob makes noise during operation.	Normal fan operation; Cookware material.	This is normal for induction hobs. Some cookware may produce a slight buzzing sound.

7. Specifications

Specification	Detail

Specification	Detail
Brand	BRANDT
Model Number	BPI6364B
Product Dimensions (L x W x H)	75 x 61 x 16 cm
Weight	6 Kilograms
Installation Type	Built-in
Hob Type	Induction
Number of Cooking Zones	3
Color	Black
Configuration	Touch controls
Wattage	3600 Watts
Energy Type Used	Induction
Material	Ceramic glass
Special Feature	Timer

8. Warranty and Support

Your BRANDT BPI6364B induction hob comes with a manufacturer's warranty.

Warranty Information:

- **Manufacturer's Commercial Warranty:** 2 years

Please retain your proof of purchase for warranty claims. For technical support, service, or spare parts inquiries, please contact your local BRANDT service center or authorized dealer. Information regarding spare parts availability is currently unavailable.

© 2023 BRANDT. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09MJ94D9H

More documents and user manuals: **https://manuals.plus/**