Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MangoKit MD3

MangoKit MD3 DAB Radio with Bluetooth

INSTRUCTION MANUAL

1. INTRODUCTION

Thank you for purchasing the MangoKit MD3 DAB Radio with Bluetooth. This manual provides detailed instructions for setting up, operating, and maintaining your device to ensure optimal performance and longevity. Please read this manual thoroughly before use and keep it for future reference.

2. WHAT'S IN THE BOX

- MangoKit MD3 DAB Radio
- Power Adapter
- Owner's Manual

3. PRODUCT OVERVIEW



Front view of the MangoKit MD3 DAB Radio, showcasing its display screen and control buttons.

3.1 Controls and Display

The MangoKit MD3 features an intuitive layout for easy navigation and control:

- **MENU Button:** Access the main menu for various settings.
- **●/VOLUME Dial:** Press to power on/off or confirm selections. Rotate to adjust volume or navigate menus.
- **INFO Button:** Display additional information about the current station or track.
- **◄◄ / ►► Buttons:** Navigate through stations or tracks.
- **►▮▮ /▮▮ ► Buttons:** Play/Pause or skip tracks in Bluetooth mode.
- **1, 2, 3+ Buttons:** Quick access to preset stations. Long press to save, short press to recall.
- **BACK Button:** Return to the previous menu or screen.
- **SOURCE Button:** Switch between DAB, FM, and Bluetooth modes.
- **Colour Display:** Provides clear visual feedback for station information, settings, and time.

3.2 Ports and Antenna

- **Type C USB Port:** For mains power supply.
- **3.5mm Headphone Jack:** For private listening.
- **Telescopic Antenna:** Extend and rotate for optimal signal reception.

4. Setup

4.1 Powering On

The MangoKit MD3 can be powered by mains or batteries.

- **Mains Power:** Connect the supplied power adapter to the Type C USB port on the radio and plug it into a wall

outlet.

- **Battery Power:** Insert 4 AA batteries (not included) into the battery compartment. Please note that the device cannot charge rechargeable batteries.



The radio can be powered by 4 AA batteries for portability or via the included mains adapter.

4.2 Initial Scan (DAB/DAB+)

Upon first power-on, the radio will automatically perform a full scan for available DAB/DAB+ stations. Extend the telescopic antenna fully for best reception. This process may take a few minutes. Once complete, the radio will display the first available station.



The radio's display showing options for DAB/DAB+ and FM radio, indicating its dual band capabilities.

5. Operating Instructions

5.1 DAB/DAB+ Radio Mode

1. Press the **SOURCE** button to select DAB mode.
2. If an auto-scan hasn't been performed or you wish to rescan, press **MENU**, navigate to 'Full Scan' and press the ●/**VOLUME** dial to confirm.
3. Use the ◄◄ / ►► buttons to browse through the available stations.
4. Press the ●/**VOLUME** dial to select a station.

5.2 FM Radio Mode

1. Press the **SOURCE** button to select FM mode.
2. To auto-scan for FM stations, press **MENU**, navigate to 'Auto Scan' and press the ●/**VOLUME** dial.
3. To manually tune, press **MENU**, navigate to 'Manual Tune' and use the ●/**VOLUME** dial to adjust the frequency.


4. Use the ◄◄ / ►► buttons to fine-tune or jump to the next strong signal.

5.3 Bluetooth Mode

Wirelessly stream audio from your Bluetooth-enabled device.

1. Press the **SOURCE** button to select Bluetooth mode. The display will show 'Bluetooth Pairing'.
2. On your smartphone or other Bluetooth device, enable Bluetooth and search for 'MangoKit MD3'.
3. Select 'MangoKit MD3' from the list to pair. Once connected, the radio will confirm.
4. You can now play audio from your device through the radio. Use the radio's►▮▮ /▮▮ ► buttons for playback control.

Note: This radio functions as a Bluetooth speaker only and does not have Bluetooth transmission capabilities. It cannot connect to Bluetooth earphones.

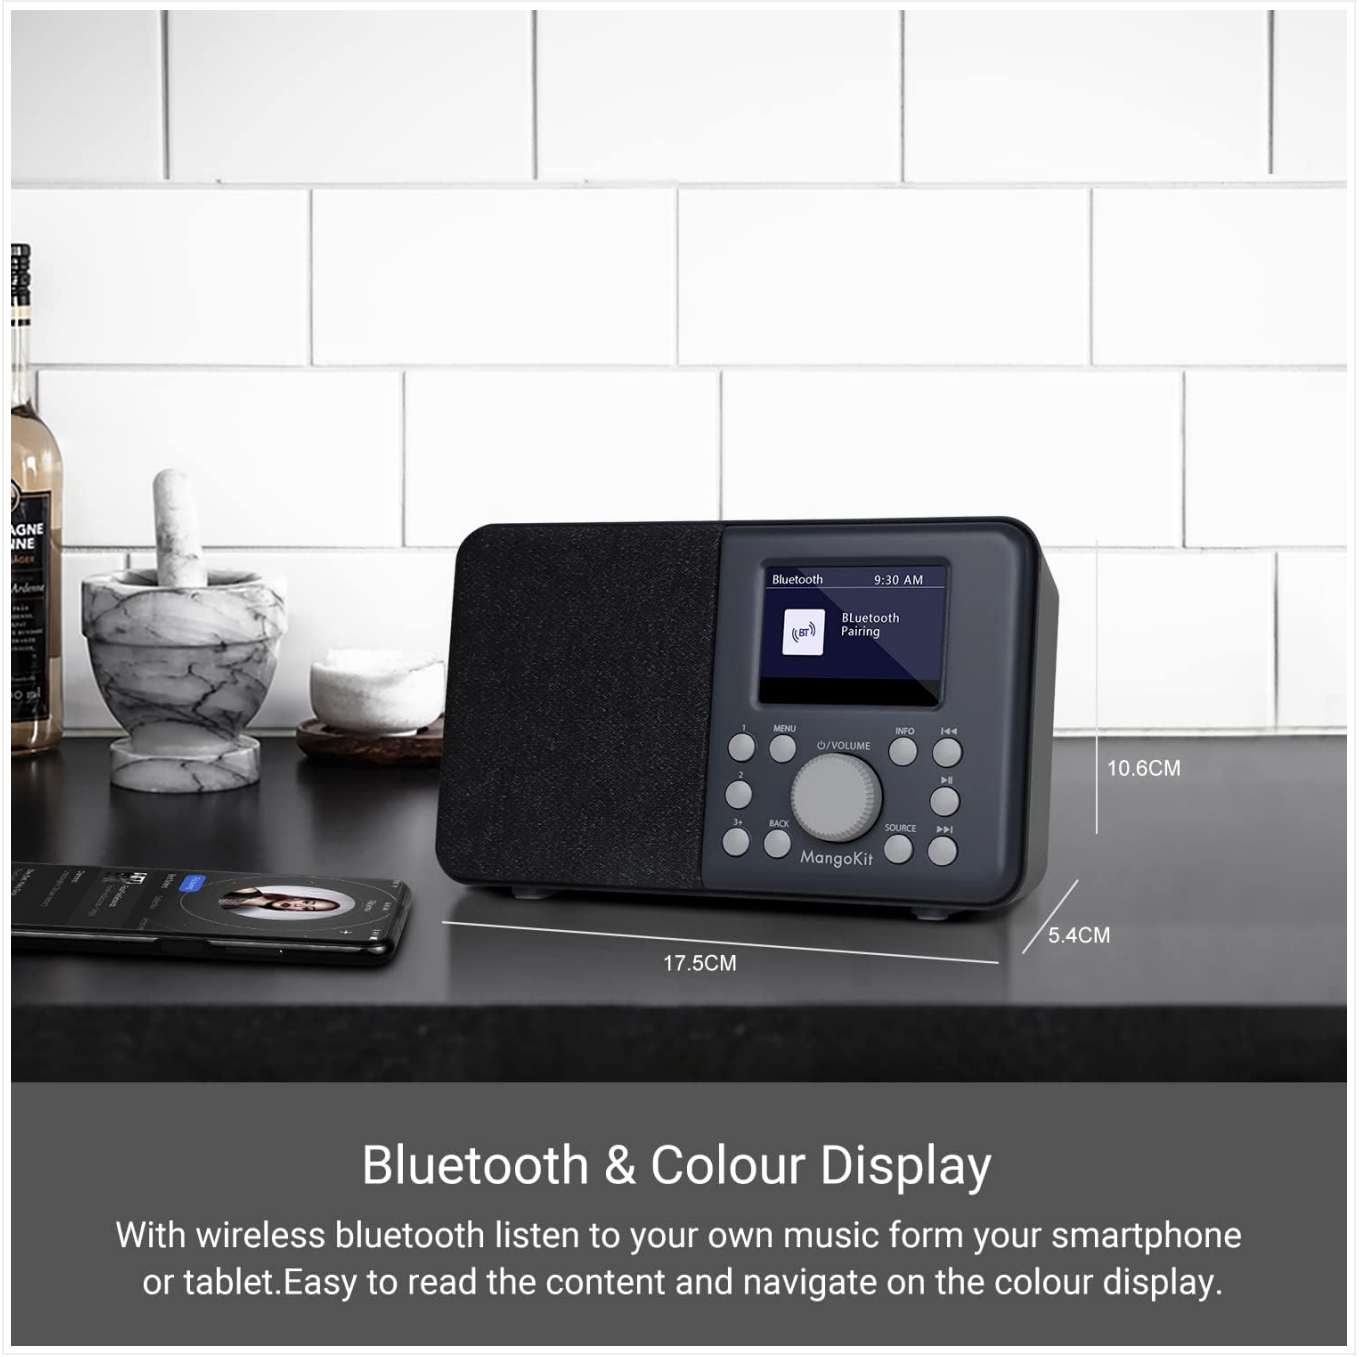

The radio displaying the Bluetooth pairing screen, with its compact dimensions highlighted.

5.4 Presets

The MangoKit MD3 allows you to store up to 40 preset stations (20 DAB/20 FM).

- **To Save a Preset:** Tune to your desired station. **LONG PRESS** one of the preset buttons (1, 2, or 3+). The display will prompt you to select a preset number. Use the ●/**VOLUME** dial to choose a number and press to confirm.
- **To Recall a Preset: SHORT PRESS** the corresponding preset button (1, 2, or 3+). For presets beyond 3, short press 3+ and then use the ◄◄ / ►► buttons to navigate to the desired preset number and press the●/**VOLUME** dial to select.

5.5 Dual Alarms Clock & Sleep Timer

Set up to two independent alarms and a sleep timer.




The radio's display showing the dual alarm clock settings, allowing users to schedule different wake-up times.

- **Setting Alarms:** Press **MENU**, navigate to 'Alarm' and select 'Alarm 1' or 'Alarm 2'. Follow the on-screen prompts to set the time, duration, source (DAB/FM), and volume. You can choose your favorite DAB or FM radio stations as ringtones.
- **Setting Sleep Timer:** Press **MENU**, navigate to 'Sleep'. Use the●/**VOLUME** dial to set the desired sleep duration

(up to 60 minutes). The radio will automatically turn off when the time is up.

5.6 Private Listening

For personal audio enjoyment, plug 3.5mm headphones into the headphone jack on the radio. The speaker will automatically mute.

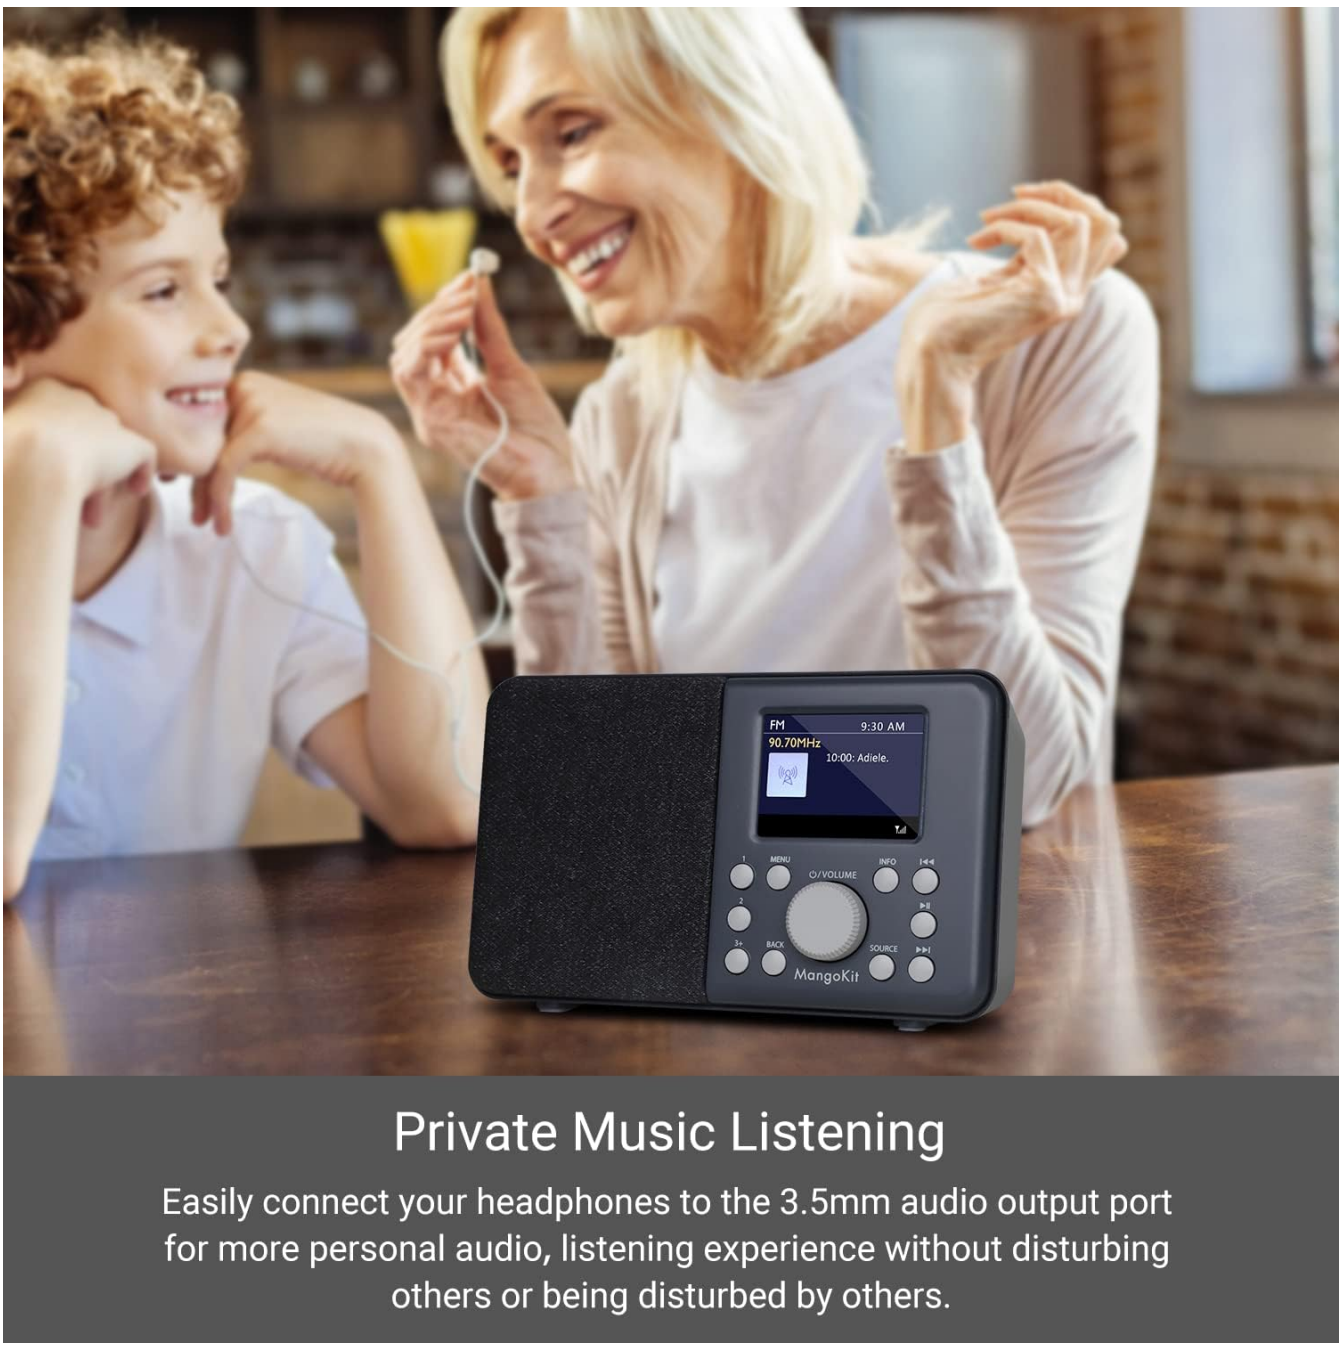

A user enjoying private listening with headphones connected to the MangoKit MD3 radio.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the radio's surface. Do not use abrasive cleaners or solvents.
- **Antenna Care:** Handle the telescopic antenna gently. Avoid bending or forcing it.
- **Battery Storage:** If the radio will not be used for an extended period, remove the AA batteries to prevent leakage.
- **Placement:** Place the radio on a stable, flat surface away from direct sunlight, heat sources, and excessive moisture.

7. Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
No power	Power adapter not connected; Batteries depleted or incorrectly inserted.	Ensure power adapter is securely connected. Replace batteries or check polarity.
No DAB/FM signal or poor reception	Antenna not extended; Weak signal area; Interference.	Fully extend and adjust the telescopic antenna. Move the radio to a location with better reception. Avoid placing near other electronic devices. Perform a full scan.
Bluetooth not pairing	Radio not in Bluetooth mode; Device not discoverable; Already paired with another device.	Ensure radio is in Bluetooth mode. Make sure your device's Bluetooth is on and discoverable. Disconnect from other Bluetooth devices. Try restarting both devices.
No sound	Volume too low; Muted; Headphones connected.	Increase volume using the ●/VOLUME dial. Check if headphones are plugged in.

8. Specifications

MangoKit MD3 DAB Radio Specifications

Feature	Detail
Model Number	MD3
Product Dimensions	17.5L x 7W x 10.5H centimetres
Weight	610 g
Power Source	Mains (Type C USB) and 4 AA batteries (not included)
Tuner Technology	DAB+/DAB/FM
Connectivity	Bluetooth
Special Features	Portable Bluetooth speaker, FM radio, Alarm clock, Sleep timer, DAB DAB PLUS radio, 3.5mm headphone port
Preset Stations	40 (20 DAB, 20 FM)
Colour	Dark Grey
Manufacturer	MangoKit
Country of Origin	China

9. Warranty and Support

Your MangoKit MD3 DAB Radio is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or contact MangoKit customer support.
If you encounter any issues not covered in this manual or require further assistance, please contact MangoKit customer support through their official website or the retailer where you purchased the product. Please have your model number (MD3) and purchase details ready.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09N8HMZ34

More documents and user manuals: **https://manuals.plus/**