Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic P10Pro

Proscenic P10 Pro Cordless Vacuum Cleaner User Manual

Model: P10Pro


Important Safety Instructions

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Turn off the appliance before connecting or disconnecting the battery pack, or before performing any maintenance.
- Use only the charger supplied by the manufacturer to recharge the battery.
- Store the appliance indoors in a dry place.

Product Overview

The Proscenic P10 Pro is a versatile 4-in-1 cordless stick vacuum cleaner designed for efficient cleaning of various surfaces.

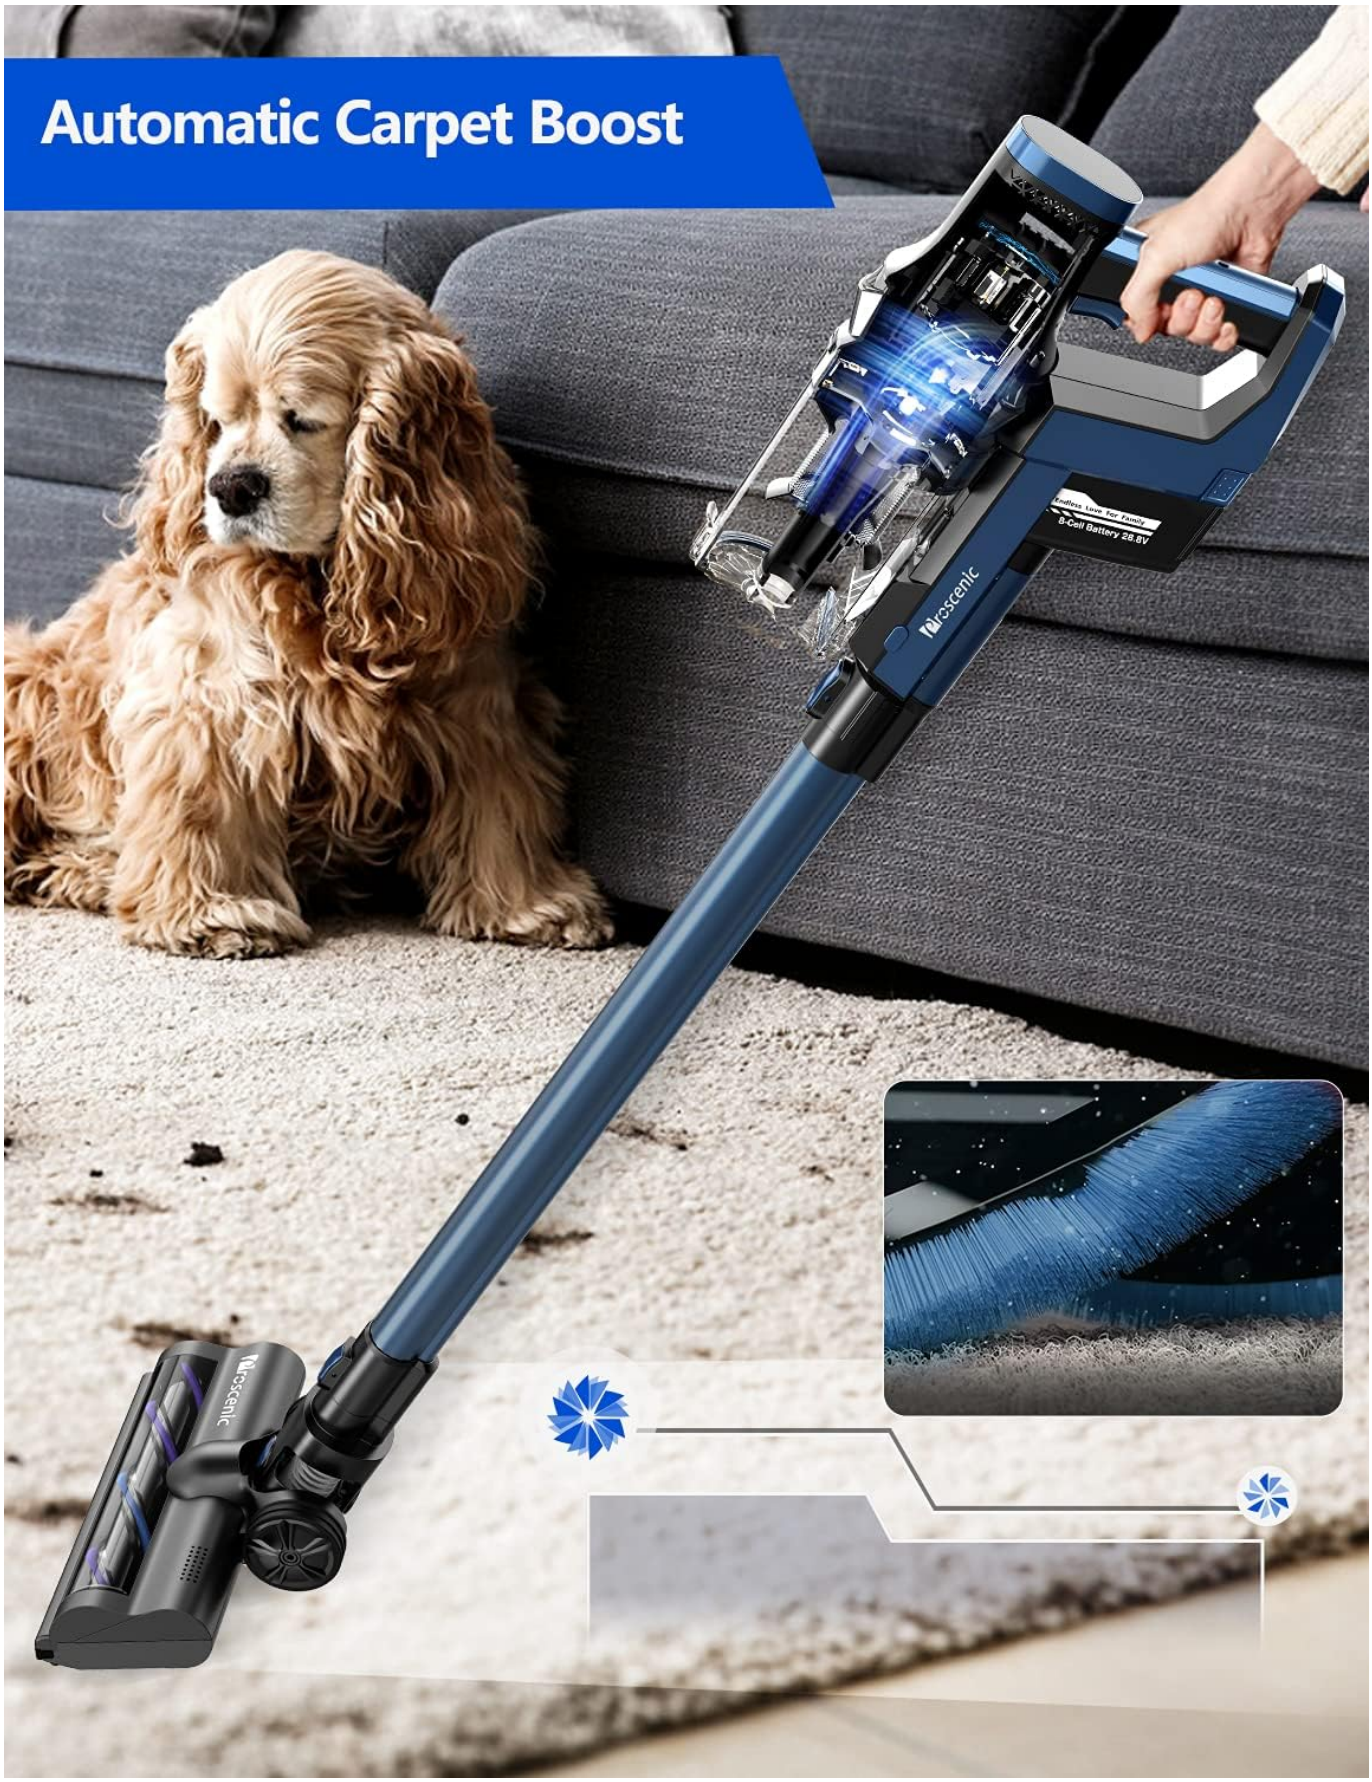

The Proscenic P10 Pro Cordless Vacuum Cleaner in its full assembly.

Components



Detailed view of the Proscenic P10 Pro vacuum cleaner components.

1. Main Motorized Brush Head
2. Wall Mount/Charging Dock
3. Main Unit (Motor, Dustbin, Battery Slot)
4. Removable Battery Pack

5. Round Brush Attachment
6. Mini Motorized Brush
7. Long Crevice Nozzle
8. Extension Wand

Setup

Assembly

1. Connect the extension wand to the main unit until it clicks into place.
2. Attach the main motorized brush head to the other end of the extension wand, ensuring it clicks securely.
3. For handheld use, attach desired accessories (crevice tool, round brush, mini motorized brush) directly to the main unit.

Battery Installation and Charging

The Proscenic P10 Pro features a removable battery for convenient charging.



Slide the battery pack into the main unit until it locks securely.

- Insert the battery pack into the slot on the main unit until it clicks.
- To charge, connect the charger to the battery pack or the charging port on the main unit.
- The LED display will indicate charging status. A full charge typically takes 4-5 hours.

Operating Instructions

Power On/Off and Mode Selection

The vacuum cleaner is equipped with an LED touch screen for easy control.



The LED touch screen displays power, fault alerts, and allows mode selection.

- Press the power button to turn the vacuum cleaner on or off.
- Touch the 'Mode' button on the LED screen to cycle through the three suction modes: Eco, Auto, and Max.
- The screen also displays battery level and any error codes.

Suction Modes



The vacuum offers Auto, Max, and Eco modes for varying cleaning needs.

- **Eco Mode:** For light cleaning and extended runtime (up to 52 minutes).
- **Auto Mode:** Automatically adjusts suction power based on floor type (e.g., carpet boost).
- **Max Mode:** Provides maximum suction (26,000 Pa) for deep cleaning.

Using Attachments

The P10 Pro comes with various attachments for different cleaning tasks.



The long crevice nozzle, round brush, and mini motorized brush are included for specialized cleaning.

- **Long Crevice Nozzle:** Ideal for narrow gaps, corners, and hard-to-reach areas.
- **Round Brush:** Suitable for dusting delicate surfaces, curtains, and upholstery.
- **Mini Motorized Brush:** Effective for removing pet hair and deep cleaning upholstery or mattresses.

Anti-Tangle Technology and LED Headlights



The Z-shaped brush roll design helps prevent hair tangles.

- The Z-shaped brush roll design minimizes hair tangling, making it easier to clean and maintain.
- The main brush head features LED headlights to illuminate dust and debris in dark areas, such as under furniture.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin



Press the release button to detach the dustbin and empty its contents.

- Press the dustbin release button to detach it from the main unit.
- Empty the contents into a trash bin.
- The dustbin is washable. Rinse with water and ensure it is completely dry before reattaching.

Cleaning the Filters

The P10 Pro uses a 4-stage filtration system including HEPA, sponge, and mesh filters.



The 4-stage filtration system includes a HEPA filter, sponge filter, mesh filter, and cyclone system.

- Remove the filters from the dustbin.
- Tap off loose dirt. For thorough cleaning, rinse the filters under running water.
- Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum

with wet filters.

- Replace the HEPA filter every 3-6 months, depending on usage.

Cleaning the Brush Roll

- Turn off the vacuum and detach the main brush head.
- Locate the brush roll release tab and remove the brush roll.
- Use scissors or a cleaning tool to cut and remove any tangled hair or debris from the brush roll.
- Reinsert the brush roll and secure it.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not installed correctly.	Charge the battery fully. Ensure the battery is securely inserted.
Weak suction power	Dustbin is full. Filters are clogged. Blockage in the nozzle or hose.	Empty the dustbin. Clean or replace filters. Check for and remove any blockages.
Brush roll not spinning	Hair or debris tangled in the brush roll. Brush roll is jammed.	Clean the brush roll. Ensure no objects are obstructing its rotation.
Vacuum stops suddenly	Battery is depleted. Overheating due to blockage.	Recharge the battery. Check for and clear any blockages, then allow the unit to cool down.

Specifications

Feature	Specification
Model Number	P10Pro
Suction Power	Up to 26,000 Pa
Motor Power	260 Watts
Battery Type	8 x 2000 mAh Lithium-ion (Removable)
Runtime	Up to 52 minutes
Voltage	34 Volts
Filtration System	4-stage sealed system with HEPA filter
Dustbin Capacity	Not specified, but described as large and washable
Noise Level	78 Decibels
Dimensions (L x W x H)	74.5 x 25.7 x 16.1 cm
Weight	4.17 kilograms

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact Proscenic customer service directly. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09NDQJJ8S

More documents and user manuals: **https://manuals.plus/**