Technivorm Moccamaster 53937

Technivorm Moccamaster KBGV Select Coffee Maker Instruction Manual

Model: 53937

Product Overview

The Technivorm Moccamaster KBGV Select is a premium 10-cup drip coffee maker designed to brew coffee to the golden cup standard. It features a selector switch for brewing half or full carafes, adjusting brewing speed and hotplate temperature accordingly. The brew basket automatically stops coffee flow when the carafe is removed, and the hotplate maintains optimal coffee temperature.



Figure 1: Technivorm Moccamaster KBGV Select Coffee Maker (Black model).

Setup

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts are present: main unit, glass carafe, brew basket, and water reservoir lid.
2. **Clean:** Before first use, wash the glass carafe, brew basket, and water reservoir lid with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface near a power outlet. Ensure adequate clearance around the unit.
4. **Initial Rinse:** For optimal performance and taste, perform an initial rinse cycle.
   - Fill the water reservoir with fresh, cold water up to the 10-cup mark.
   - Place an empty paper filter (size #4 cone filter) in the brew basket.
   - Place the empty glass carafe on the hotplate.
   - Turn on the coffee maker using the power switch. Allow the full cycle to complete. Discard the water.



Figure 2: Filling the water reservoir with fresh water.

Operating Instructions

1. **Add Water:** Fill the water reservoir with fresh, cold water to your desired level (up to 10 cups). The reservoir has clear markings for easy measurement.
2. **Insert Filter:** Place a size #4 cone paper filter into the brew basket.
3. **Add Coffee Grounds:** Add your preferred amount of medium-coarse ground coffee to the filter. A general guideline is 2 tablespoons of coffee per 6 ounces of water, but adjust to your taste.
4. **Position Carafe:** Place the glass carafe securely on the hotplate beneath the brew basket.
5. **Select Brew Volume:** Use the selector switch (often marked with half and full carafe icons) to choose between brewing a half or full carafe. This adjusts the brewing speed and hotplate temperature for optimal extraction.



Figure 3: Power and brew volume selector switches.

6. **Start Brewing:** Flip the power switch to the "on" position. The coffee maker will begin heating water and dispensing it over the coffee grounds through the unique shower head, ensuring even saturation.



Figure 4: Water being dispensed through the shower head for even coffee ground saturation.



Figure 5: Coffee brewing process in the brew basket.

7. **Enjoy:** Once brewing is complete (approximately 4-6 minutes for a full pot), the hotplate will keep your coffee warm. The unit automatically shuts off after 100 minutes for safety.



Figure 6: Pouring coffee from the glass carafe.

Maintenance

Regular cleaning and descaling are essential to maintain the performance and longevity of your Technivorm Moccamaster coffee maker.

Daily Cleaning:

- After each use, discard the used coffee grounds and paper filter.
- Wash the brew basket, glass carafe, and water reservoir lid with warm, soapy water. Rinse thoroughly and dry. These parts are not dishwasher safe.
- Wipe down the exterior of the coffee maker with a damp cloth. Do not immerse the main unit in water.

Descaling (Every 3 Months or 100 Brews):

Mineral deposits from water can build up over time, affecting brewing performance. Descale your coffee maker regularly using a descaling agent specifically designed for coffee makers (do not use vinegar).

1. **Prepare Solution:** Follow the instructions on your descaling agent for the correct water-to-solution ratio. Pour the mixture into the water reservoir.
2. **Run Cycle:** Place the empty carafe on the hotplate. Turn on the coffee maker and allow the descaling solution to run through a full brew cycle.
3. **Rinse Cycles:** After the descaling cycle, run two full cycles with fresh, clean water to thoroughly rinse the system. This removes any residual descaling agent.

Troubleshooting

Problem	Possible Cause	Solution
Coffee not brewing.	No water in reservoir; power not on; carafe not correctly placed.	Fill water reservoir; ensure power switch is on; correctly position carafe on hotplate.
Coffee tastes weak.	Not enough coffee grounds; coffee ground too coarse; poor quality coffee.	Increase coffee amount; use finer grind; use fresh, high-quality coffee beans.
Coffee tastes bitter.	Too many coffee grounds; coffee ground too fine; machine needs descaling.	Reduce coffee amount; use coarser grind; descale the coffee maker.
Water not flowing.	Mineral buildup in heating element.	Perform a descaling cycle.

Specifications

Brand: Technivorm Moccamaster

Model Name: KBGV Select

Item Model Number: 53937

Color: Black

Capacity: 10-Cup (40 Ounce / 1.25 Liters)

Product Dimensions: 6.5"D x 12.75"W x 14"H

Item Weight: 6 pounds

Special Feature: Auto Shut-Off (after 100 minutes)

Coffee Maker Type: Drip Coffee Machine

Filter Type: Paper (Size #4 Cone Filter)

Operation Mode: Fully Automatic

Voltage: 120V

Country of Origin: Netherlands

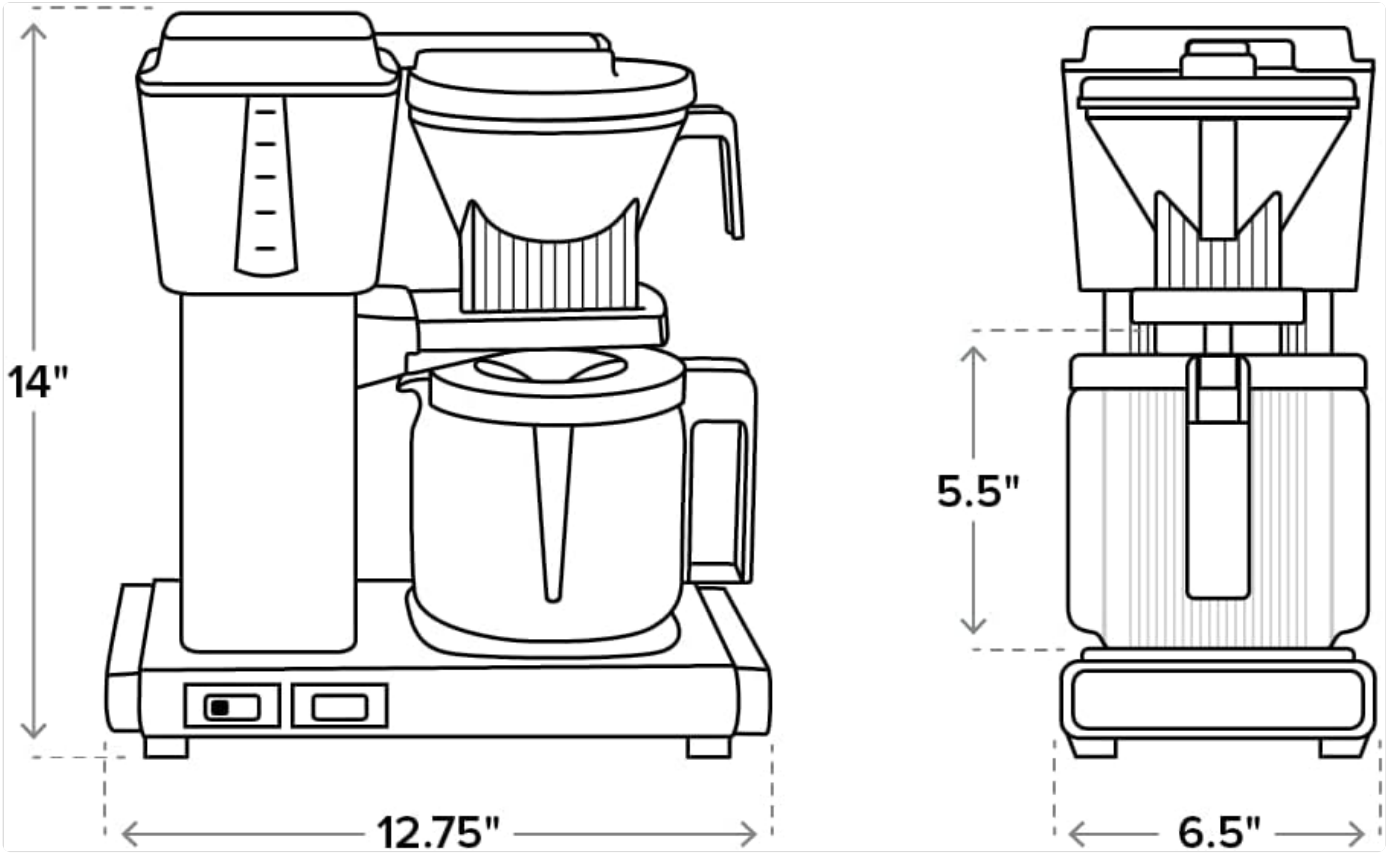


Figure 7: Product dimensions for the Moccamaster KBGV Select.

Warranty & Support

Technivorm Moccamaster coffee brewers come with a 5-year warranty, reflecting their commitment to quality and durability.

- **Warranty Period:** 5 years from the date of purchase.
- **Coverage:** Covers defects in materials and workmanship under normal use.
- **Registration:** It is recommended to register your product online to activate your warranty and receive important updates.
- **Support:** For technical assistance, troubleshooting, or warranty claims, please visit the official Technivorm Moccamaster website or contact their customer service.
- **Official User Guide:** A detailed PDF instruction manual is available for download:Instructions for Use (PDF).

© 2024 Technivorm Moccamaster. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question