Fischer & Honsel 30323

Fischer & Honsel Wolke Flexible Wall Lamp Instruction Manual

Model: 30323 | Brand: Fischer & Honsel

1. Introduction

Thank you for choosing the Fischer & Honsel Wolke Flexible Wall Lamp. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new lamp. Please read these instructions carefully before use and retain them for future reference.
The Wolke wall lamp features a flexible arm, a nickel-colored finish, and a grey fabric shade, designed to provide adjustable lighting for various indoor spaces.

2. Safety Instructions

- Ensure the power supply is disconnected before installation, maintenance, or bulb replacement.
- This product is designed for indoor use only.
- Use only E14 bulbs with a maximum wattage of 10W. Exceeding this limit may cause overheating and damage.
- Do not cover the lamp with flammable materials.
- Keep the lamp away from water and high humidity.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Installation should be performed by a qualified electrician if you are unsure about electrical wiring.

3. Package Contents

Please check that all components are present and undamaged:

- Fischer & Honsel Wolke Flexible Wall Lamp (main unit with flexible arm and fabric shade)
- Mounting bracket (pre-attached or separate)
- Screws and wall plugs for installation

- White cover for mounting screws
- Instruction Manual

Note: An E14 bulb is **not** included and must be purchased separately.

4. Setup and Installation

The lamp offers flexible installation options to suit your needs.



Figure 4.1: Installation options. The lamp can be mounted directly on a flat wall (1) or in a corner using an angled bracket (2). Ensure the power cord is routed safely.

1. **Choose Location:** Select a suitable indoor location on a wall, ensuring it is within reach of a power outlet.
2. **Mark Drilling Points:** Hold the mounting bracket against the wall at the desired height and mark the drilling points.
3. **Drill Holes:** Drill holes at the marked points and insert the wall plugs.
4. **Attach Mounting Bracket:** Secure the mounting bracket to the wall using the provided screws.
5. **Connect Power:** If connecting directly to mains wiring, ensure power is off and consult a qualified electrician. For plug-in use, simply route the cord to an outlet.
6. **Mount Lamp:** Attach the lamp unit to the mounting bracket.
7. **Conceal Screws:** Place the white cover over the mounting screws for a clean finish.
8. **Insert Bulb:** Carefully screw an E14 bulb (max 10W) into the lamp holder.

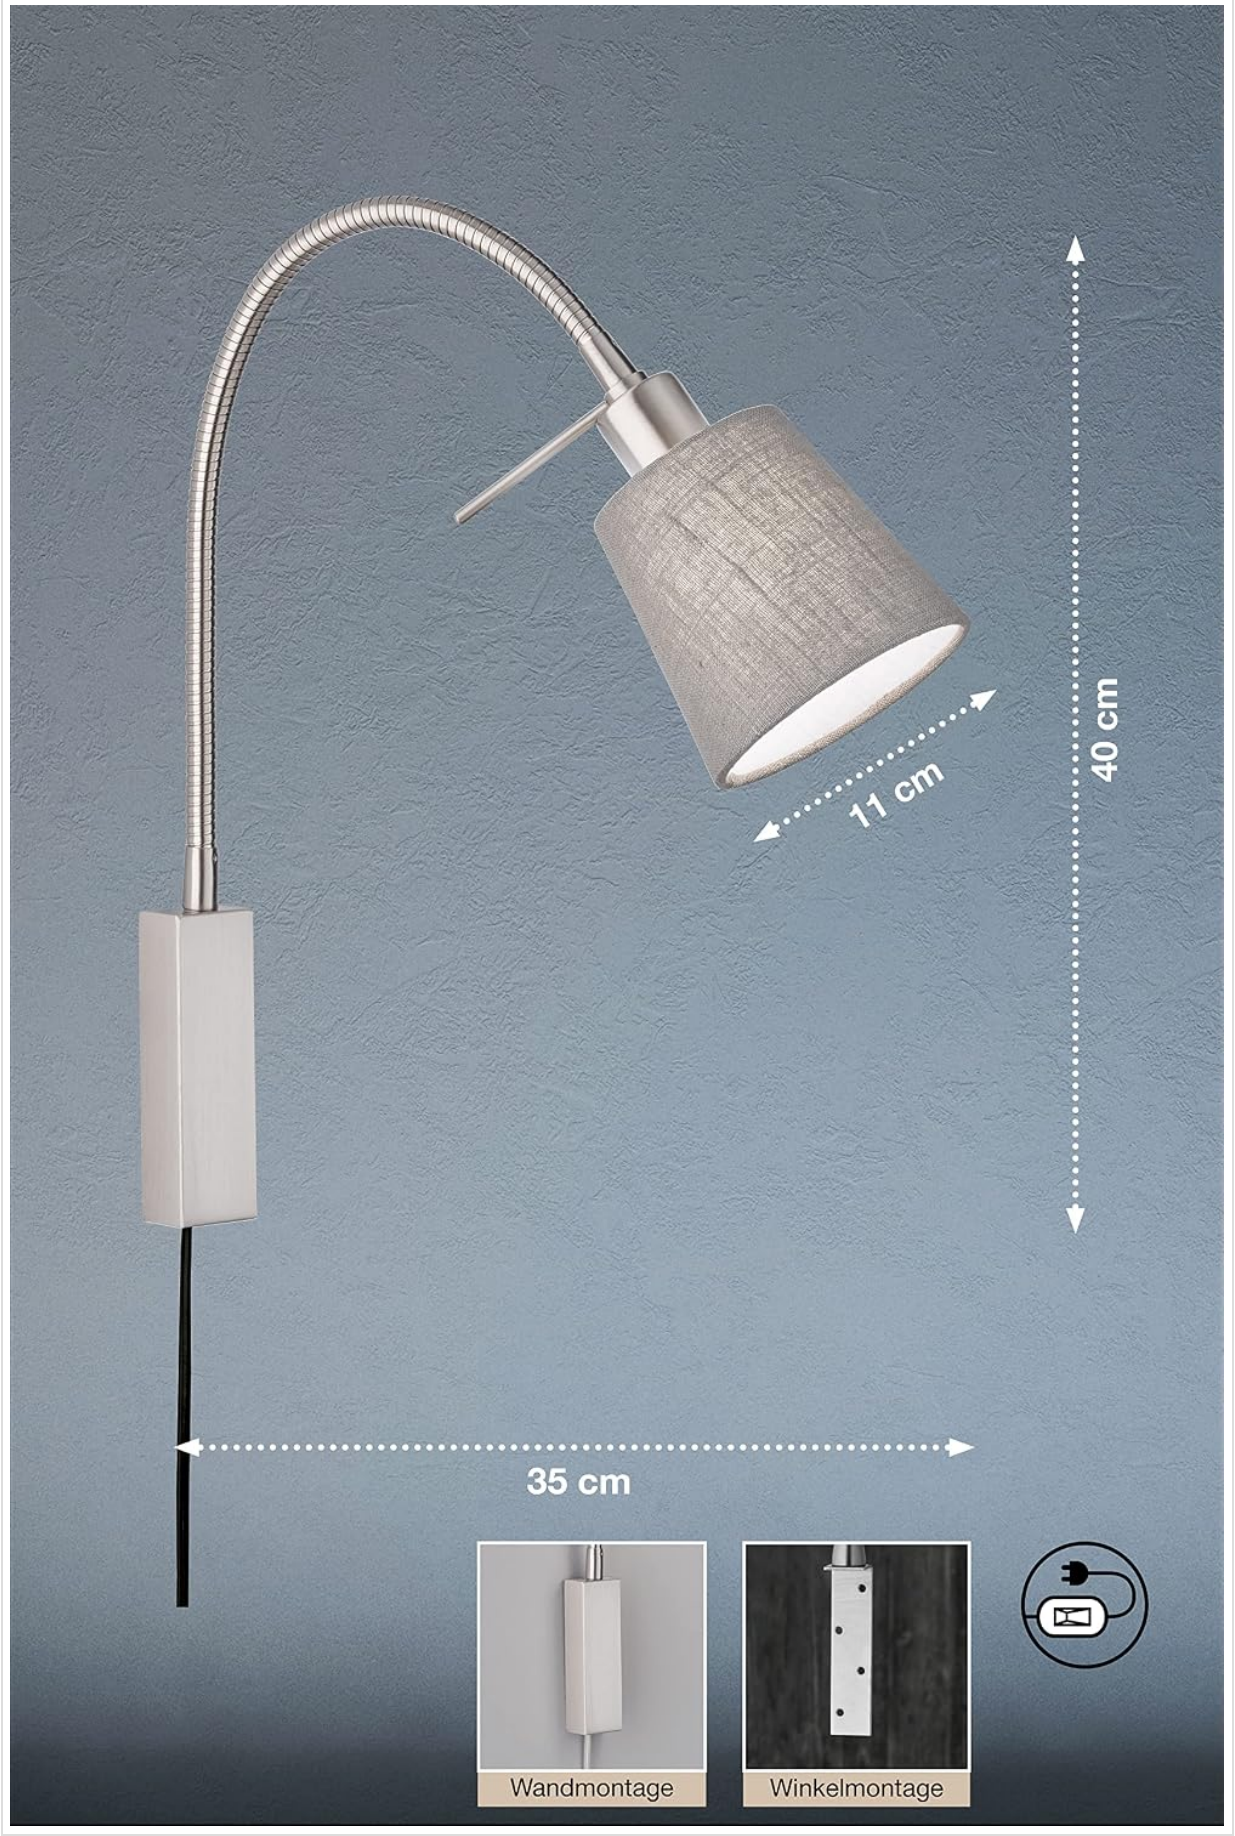


Figure 4.2: Product dimensions. The lamp has a height of 40 cm, projects 35 cm from the wall, and the shade has a width of 11 cm.

5. Operation

Operating your Wolke wall lamp is straightforward:

1. **Power On:** Plug the lamp into a suitable power outlet.
2. **Turn On/Off:** Use the cord switch located on the power cable to turn the lamp on or off.
3. **Adjust Light Direction:** Gently bend the flexible arm to direct the light as desired. The fabric shade can also be slightly angled.





Figure 5.1: The Wolke lamp in use, demonstrating its flexible arm and suitability as a bedside reading light.

6. Maintenance

To ensure the longevity and optimal performance of your lamp:

- **Cleaning:** Disconnect from power before cleaning. Wipe the metal parts with a soft, dry cloth. For the fabric shade, use a lint roller or a soft brush to remove dust. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the lamp is unplugged and cool before replacing the bulb. Unscrew the old E14 bulb and screw in a new one (max 10W).
- **Flexible Arm:** Handle the flexible arm gently when adjusting its position to avoid damage.

7. Troubleshooting

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply. Bulb is faulty or loose. Cord switch is off.	Check if the lamp is properly plugged into a working outlet. Replace the bulb or ensure it is screwed in tightly. Ensure the cord switch is in the 'ON' position.
Light is flickering.	Loose bulb connection. Faulty bulb.	Tighten the bulb. Replace the bulb.
Lamp gets too hot.	Bulb wattage too high.	Ensure the bulb does not exceed 10W (E14). Replace with a lower wattage bulb if necessary.

8. Specifications

Feature	Detail
Model Number	30323
Brand	Fischer & Honsel
Type	Flexible Wall Lamp / Bedside Lamp
Color	Nickel-colored (base), Grey (fabric shade)

Feature	Detail
Material	Metal, Fabric
Dimensions (L x W x H)	35 cm x 11 cm x 40 cm
Wall Projection	35 cm
Bulb Type	E14 (small Edison screw)
Max. Wattage	10W
Power Source	AC Power
Indoor/Outdoor Use	Indoor
Special Features	Flexible arm, Cord switch
GTIN (EAN)	4003694303231

9. Warranty and Support

Fischer & Honsel products are manufactured to high-quality standards. For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Fischer & Honsel directly:

Fischer & Honsel GmbH
Graf-Gottfried-Straße 111
D-59755 Arnsberg
Germany
Phone: +49 (0) 2932 989 - 0
Fax: +49 (0) 2932 989 - 101
Email: info@fischer-honsel.de
Website: www.fischer-honsel.de

© 2023 Fischer & Honsel. All rights reserved.