Aquasonic PDCAF

AquaSonic Aqua Flosser Instruction Manual

Model: PDCAF

Introduction

The AquaSonic Aqua Flosser is a cordless, rechargeable water flosser designed to provide an effective and gentle solution for daily oral hygiene. It utilizes powerful water jets to dislodge food particles and plaque from between teeth and below the gumline, offering a superior clean compared to traditional string flossing. This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your AquaSonic Aqua Flosser.



Image: AquaSonic Aqua Flosser unit with its packaging and accessories.

What's Included

Your AquaSonic Aqua Flosser package includes the following components:

- AquaSonic Aqua Flosser Unit
- Standard Jet Tip (for general cleaning)
- Orthodontic Tip (for braces and dental work)
- Periodontal Tip (for deep pockets below the gumline)
- Tongue Scraper Tip (for cleaning the tongue)
- USB Charging Cable
- Hygienic Travel Bag

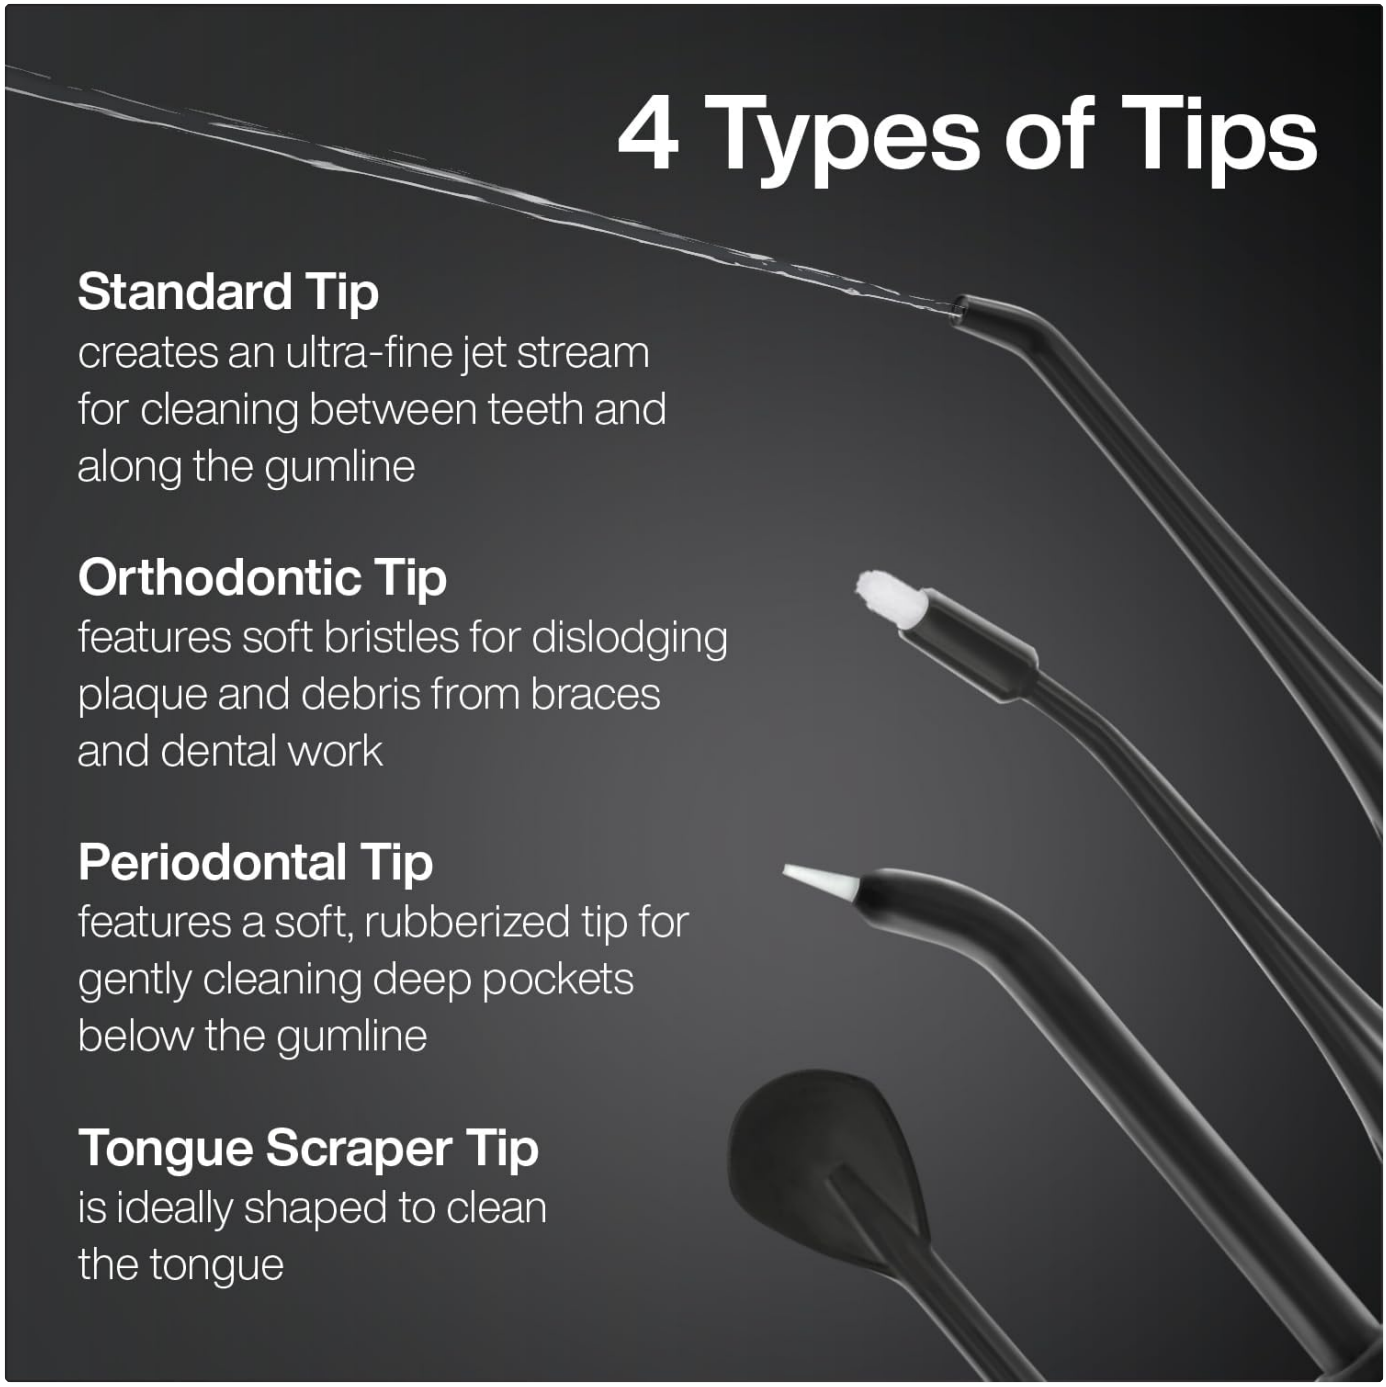


Image: Close-up view of the four specialized tips included with the Aqua Flosser.

Key Features

Cordless & Rechargeable: Equipped with a powerful lithium-ion battery, providing weeks of continuous use on a single charge.

Waterproof Design: Fully waterproof for safe use in the shower and easy cleaning. Ensure the charge port is covered during use.

Multiple Usage Modes: Features three distinct modes for customized cleaning: Normal, Soft, and Pulse.

5 Jet Tips: Includes a variety of tips for comprehensive oral care, including standard, orthodontic, periodontal, and tongue scraper tips.

360° Rotating Nozzle: Allows for easy access to all areas of the mouth, ensuring thorough cleaning.



Image: Diagram showing the internal components and key features like modes, removable tank, and battery.



Image: Detailed view of the control panel, illustrating the Normal, Soft, and Pulse mode selections.

Setup

1. **Charge the Unit:** Before first use, fully charge the Aqua Flosser. Connect the USB charging cable to the charging port on the unit and plug it into a compatible USB power adapter. The indicator light will show charging status and turn off when fully charged. A full charge typically lasts for weeks of continuous use.
2. **Clean Removable Parts:** Wash all removable parts, including the water reservoir and jet tips, with warm, soapy water. Rinse thoroughly.
3. **Attach a Jet Tip:** Select the desired jet tip and insert it firmly into the opening at the top of the flosser handle until it clicks into place.
4. **Fill the Water Reservoir:** Open the water reservoir cap located at the bottom of the unit. Fill the reservoir with lukewarm water. For best results, use distilled or filtered water to prevent mineral buildup. Close the cap securely.

Operating Instructions

1. **Positioning:** Lean over a sink and place the jet tip into your mouth, aiming it at your gumline at a 90-degree angle. Keep your mouth slightly open to allow water to flow into the sink.
2. **Select Mode:** Press the 'Mode' button to cycle through the three pressure settings: Normal (standard cleaning), Soft (gentle for sensitive teeth/gums), and Pulse (massages gums). Choose the setting that is most comfortable and effective for you.
3. **Start Flossing:** Press the 'ON/OFF' button to start the water flow.
4. **Flossing Technique:** Guide the water jet along your gumline and between each tooth. Pause briefly between teeth to allow the water to clean the interdental spaces. For braces, carefully clean around brackets and wires.
5. **Complete Cleaning:** Continue until you have cleaned all areas of your mouth. Refill the reservoir if necessary.
6. **Turn Off:** Press the 'ON/OFF' button again to stop the water flow.
7. **Empty Reservoir:** After each use, empty any remaining water from the reservoir to prevent bacterial growth.



Image: Illustration of the Aqua Flosser's water jet effectively cleaning between teeth and along the gumline.

Maintenance

- **Daily Cleaning:** After each use, remove the jet tip and rinse it under running water. Wipe the exterior of the flosser unit with a soft, damp cloth.
- **Reservoir Cleaning:** Periodically clean the inside of the water reservoir. It is detachable for easy cleaning. You can use a mild soap and water solution.
- **Deep Cleaning (Monthly):** To prevent mineral buildup, especially if using hard water, fill the reservoir with a mixture of 1 part white vinegar and 2 parts water. Run the solution through the unit until the reservoir is empty. Then, rinse by running a full reservoir of clean water through the unit.
- **Storage:** Store the Aqua Flosser in a cool, dry place. If traveling, use the provided hygienic travel bag.
- **Tip Replacement:** For optimal hygiene and performance, it is recommended to replace jet tips every 3-6 months, or sooner if they show signs of wear.

Troubleshooting

Problem	Possible Cause	Solution
Unit does not turn on.	Battery is low or depleted.	Charge the unit fully.
Weak water pressure.	Low water level in reservoir; Clogged tip; Mineral buildup.	Refill reservoir; Clean or replace tip; Perform deep cleaning with vinegar solution.
Water leaks from unit.	Reservoir cap not securely closed; Tip not properly inserted.	Ensure reservoir cap is tightly closed; Re-insert tip until it clicks.
Unit stops working after a short period.	Battery issue; Internal malfunction.	Ensure unit is fully charged. If problem persists, contact customer support.

Specifications

Model Number: PDCAF

Product Dimensions: 3.98 x 2.6 x 8.07 inches

Weight: 1.06 Pounds

Power Source: Battery Powered (Rechargeable Lithium-Ion)

Voltage: Dual voltage rated at 110V & 220V

Special Features: Rotatable tip, rechargeable, multiple tips, portable, lightweight

Warranty & Support

AquaSonic products are manufactured with high-quality standards. For warranty information, technical support, or any questions regarding your Aqua Flosser, please refer to the warranty card included in your product packaging or visit the official AquaSonic website. Do not attempt to repair the unit yourself, as this may void the warranty.

Important Safety Information

Please read all instructions before using this appliance. When using electrical products, especially when children are present, basic safety precautions should always be followed. Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

- Do not immerse the charging base in water or other liquids.
- Do not use if the charging cable or plug is damaged.
- Keep out of reach of children.
- Use this product only for its intended use as described in this manual.
- Consult your dentist or physician before using if you have any oral health concerns.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does my AquaSonic Aqua Flosser (PDCAF) charging light flash all night, but the unit will not turn on in the morning?

If your AquaSonic Aqua Flosser (Model PDCAF) indicator light flashes all night but the device fails to turn on, it typically indicates that the battery is not successfully holding a charge or there is...

Read full answer