Teka IZF 32400 MSP

Teka IZF 32400 MSP Modular Induction Hob User Manual

Model: IZF 32400 MSP

1. Product Overview

The Teka IZF 32400 MSP is a 30 cm modular induction hob designed for efficient and precise cooking. It features three cooking zones, including a flexible zone, Touch Control Multislider for intuitive operation, and a Power Plus function for rapid heating. This manual provides essential information for the safe and effective use of your appliance.

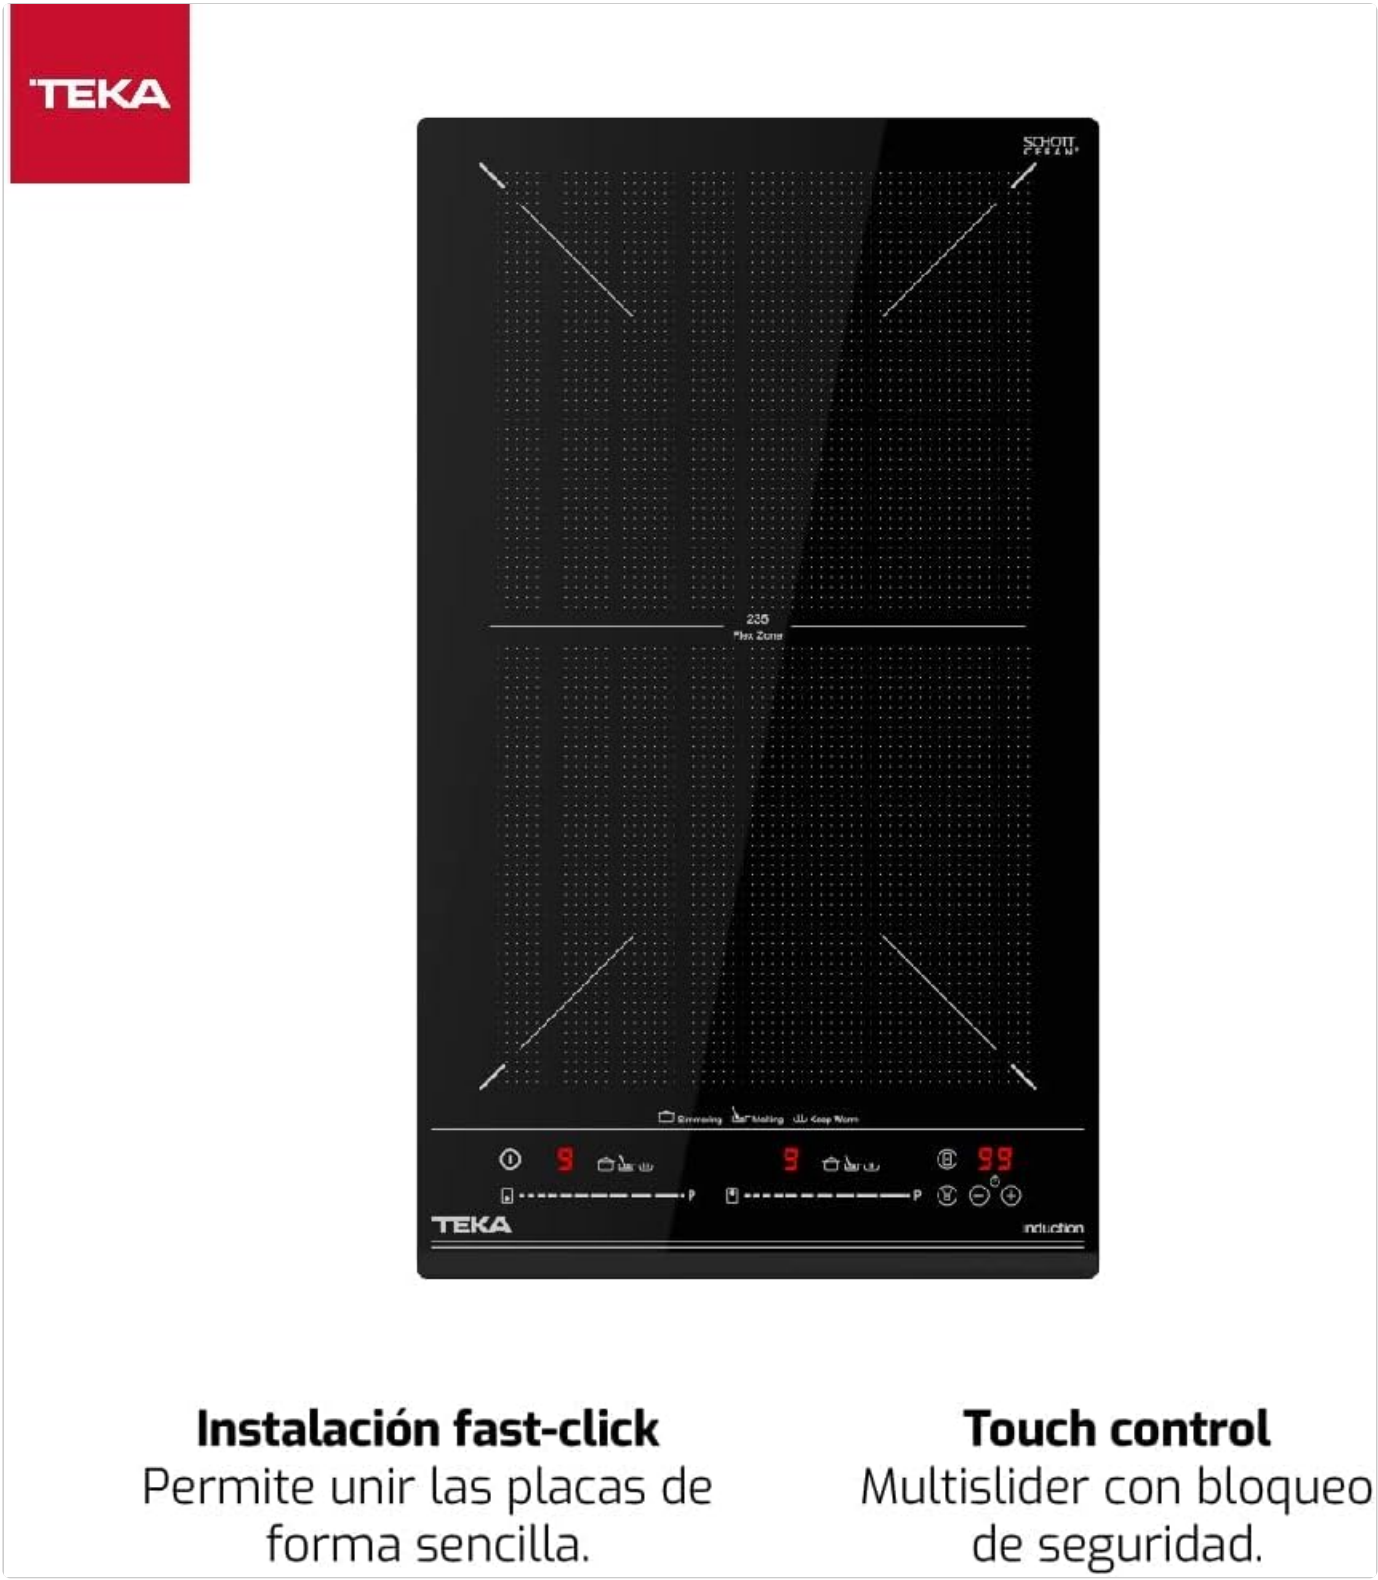


Figure 1: Top-down view of the Teka IZF 32400 MSP Induction Hob.

2. Installation

The Teka IZF 32400 MSP features a Fast-Click System for simplified installation. Ensure the appliance is installed by a qualified technician in accordance with local regulations and safety standards.

2.1 Dimensions and Cut-out

Refer to the diagram below for precise dimensions and the required countertop cut-out for proper installation.



Figure 2: Installation diagram showing the hob's dimensions and required cut-out (51 x 30 x 5.3 cm for the hob, 49 x 28 cm for the cut-out).

Ensure adequate ventilation space around the hob as specified in the full installation guide.

3. Operating Instructions

The hob is operated via its intuitive Touch Control Multislider panel. Each cooking zone has individual controls for precise heat management.

3.1 Control Panel

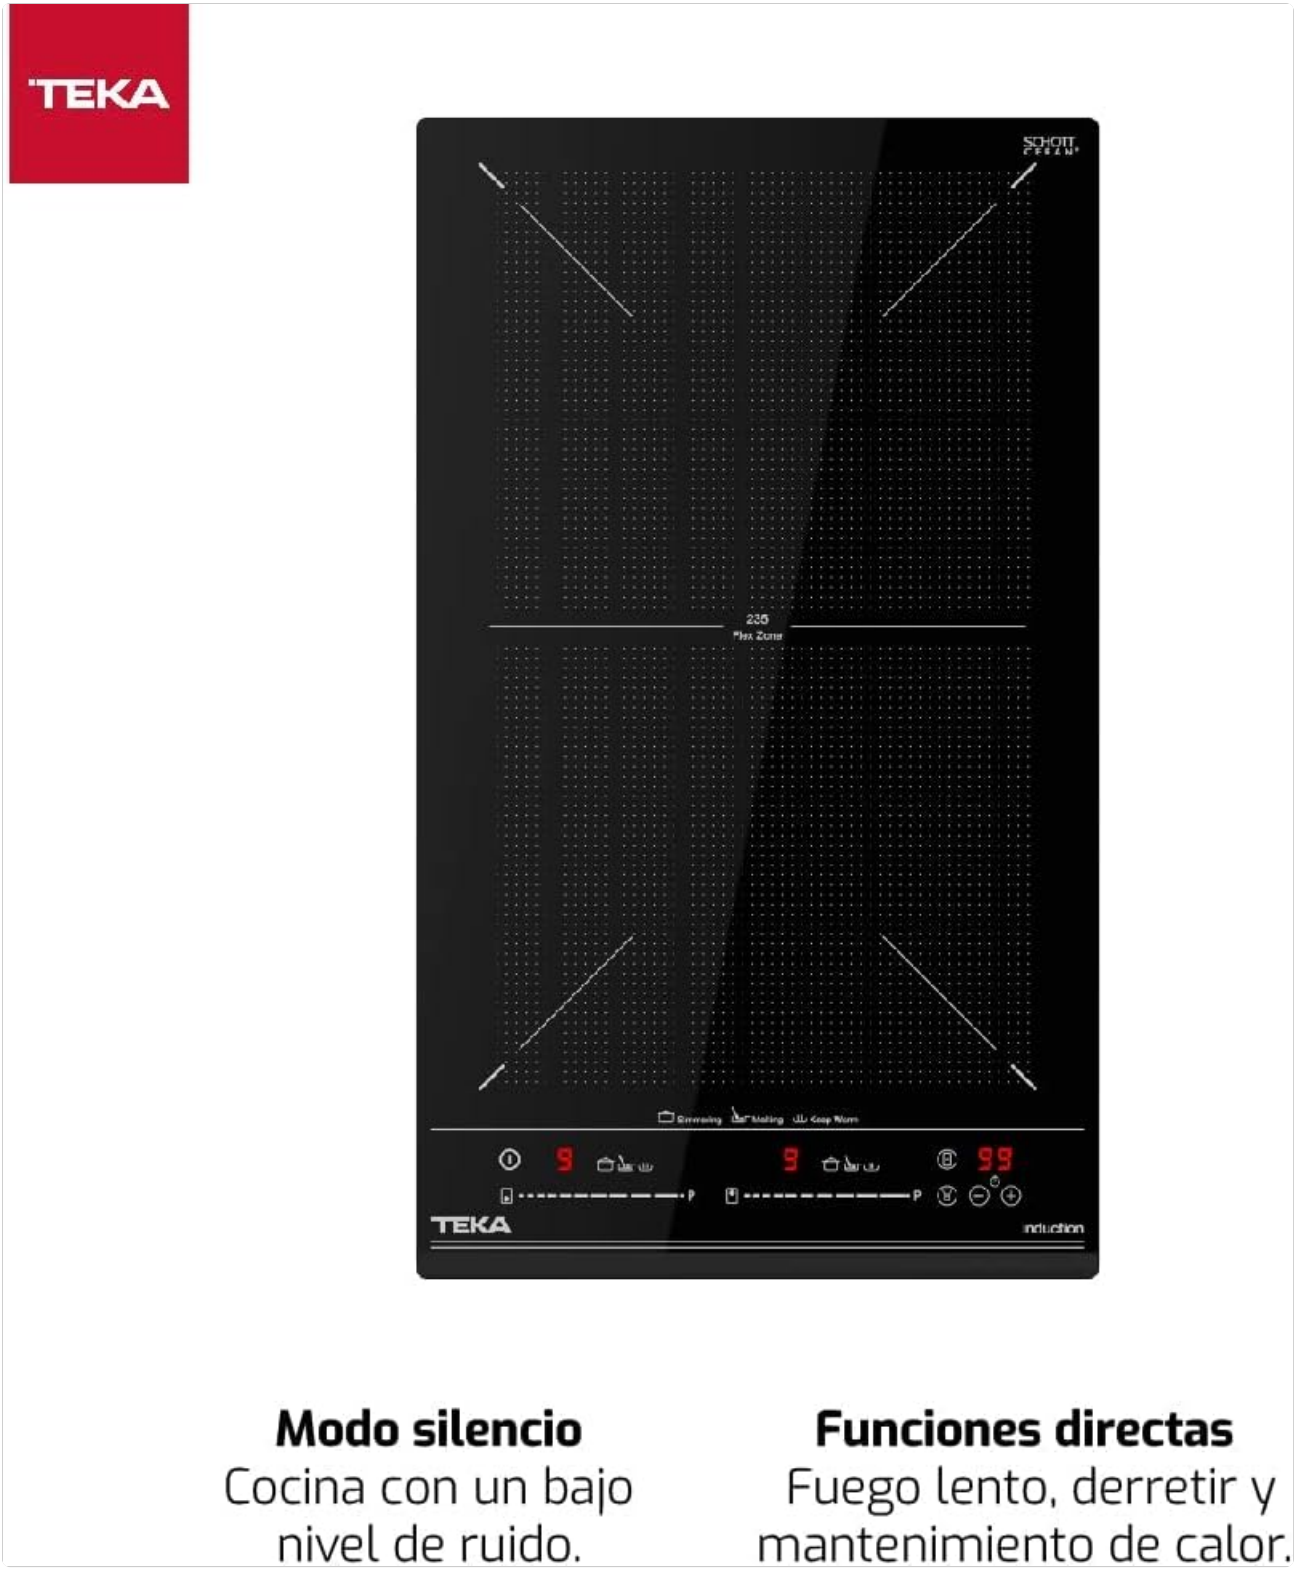


Figure 3: Close-up of the Touch Control Multislider panel.

To activate a cooking zone, place a suitable pan on the zone and touch the corresponding control. Adjust the power level by sliding your finger along the Multislider or by tapping the '+' and '-' symbols.

3.2 Cooking Zones

- **Two Standard Zones:** Each measuring 235 x 189 mm, suitable for standard pots and pans.
- **One Flex Zone:** A larger zone measuring 235 x 395 mm, designed to accommodate larger cookware or multiple smaller items simultaneously.

3.3 Power Plus Function

Activate the Power Plus function for any zone to achieve maximum power (up to 2,200 W) for a short period. This is ideal

for rapidly boiling water or searing food.

3.4 Timer Function

The integrated timer allows you to set cooking durations up to 99 minutes with an acoustic alert. This can be set for individual zones or multiple zones simultaneously.

3.5 Silent Mode

The hob operates with a silent mode feature, minimizing operational noise for a more pleasant cooking environment.

4. Safety Features

Your Teka induction hob is equipped with several safety features to ensure secure operation:

- **Safety Lock:** Prevents accidental activation or changes to settings, particularly useful in households with children.
- **Residual Heat Indicator:** Lights up to warn you if a cooking zone is still hot after use, even if it's turned off.
- **Automatic Shut-off:** If a cooking zone is left on for an extended period without adjustment, it will automatically switch off.

5. Maintenance and Care

To maintain the appearance and functionality of your induction hob, follow these care instructions:

- **Cleaning:** Always ensure the hob is cool before cleaning. Use a soft cloth and a mild, non-abrasive cleaner specifically designed for ceramic or induction surfaces. Wipe spills immediately to prevent staining.
- **Avoid Harsh Chemicals:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners as these can damage the glass surface.
- **Prevent Scratches:** Avoid dragging pots and pans across the surface. Lift them when moving.

6. Troubleshooting

If you encounter any issues with your induction hob, refer to the following common troubleshooting tips. For more complex problems, contact customer support.

- **Hob Not Turning On:** Check if the appliance is properly connected to the power supply. Ensure the safety lock is not activated.
- **No Heat from Cooking Zone:** Verify that the cookware is suitable for induction hobs (magnetic base). Ensure the pan is centered on the cooking zone.
- **Error Codes:** If an error code appears on the display, consult the comprehensive user manual for specific code meanings and solutions.

7. Specifications

Feature	Specification
Brand	Teka
Model Number	IZF 32400 MSP (112510021)
Color	Black

Material	Glass
Dimensions (L x W x H)	51 x 30 x 5.3 cm
Weight	4.96 Kilograms
Cooking Zones	3 (2 x 235x189mm, 1 Flex 235x395mm)
Control Type	Touch Control Multislider
Special Features	Safety Lock, Touch Control, Power Plus, Timer
Country of Origin	Spain

8. Warranty and Support

This Teka appliance comes with a manufacturer's warranty. For detailed information regarding warranty terms, registration, or to obtain technical support, please refer to the warranty card included with your product or visit the official Teka website. Keep your purchase receipt as proof of purchase.

For any inquiries or assistance, please contact Teka customer service.

- **Online Support:** Visit the Teka Brand Store for product information and support resources.
- **Service Centers:** Information on authorized service centers can be found on the Teka website.

© 2024 Teka. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question