RecZone CS 2010

RecZone Mega Screen 7 in 1 Poker Electronic Game

Model: CS 2010

Introduction

The RecZone Mega Screen 7 in 1 Poker Electronic Game offers a portable and engaging way to enjoy various poker games. This compact device is designed for easy viewing and provides hours of entertainment. It features seven distinct poker variations, ensuring a diverse gaming experience.

This manual provides essential information for setting up, operating, and maintaining your electronic poker game. Please read it thoroughly to ensure optimal performance and enjoyment.

Product Overview

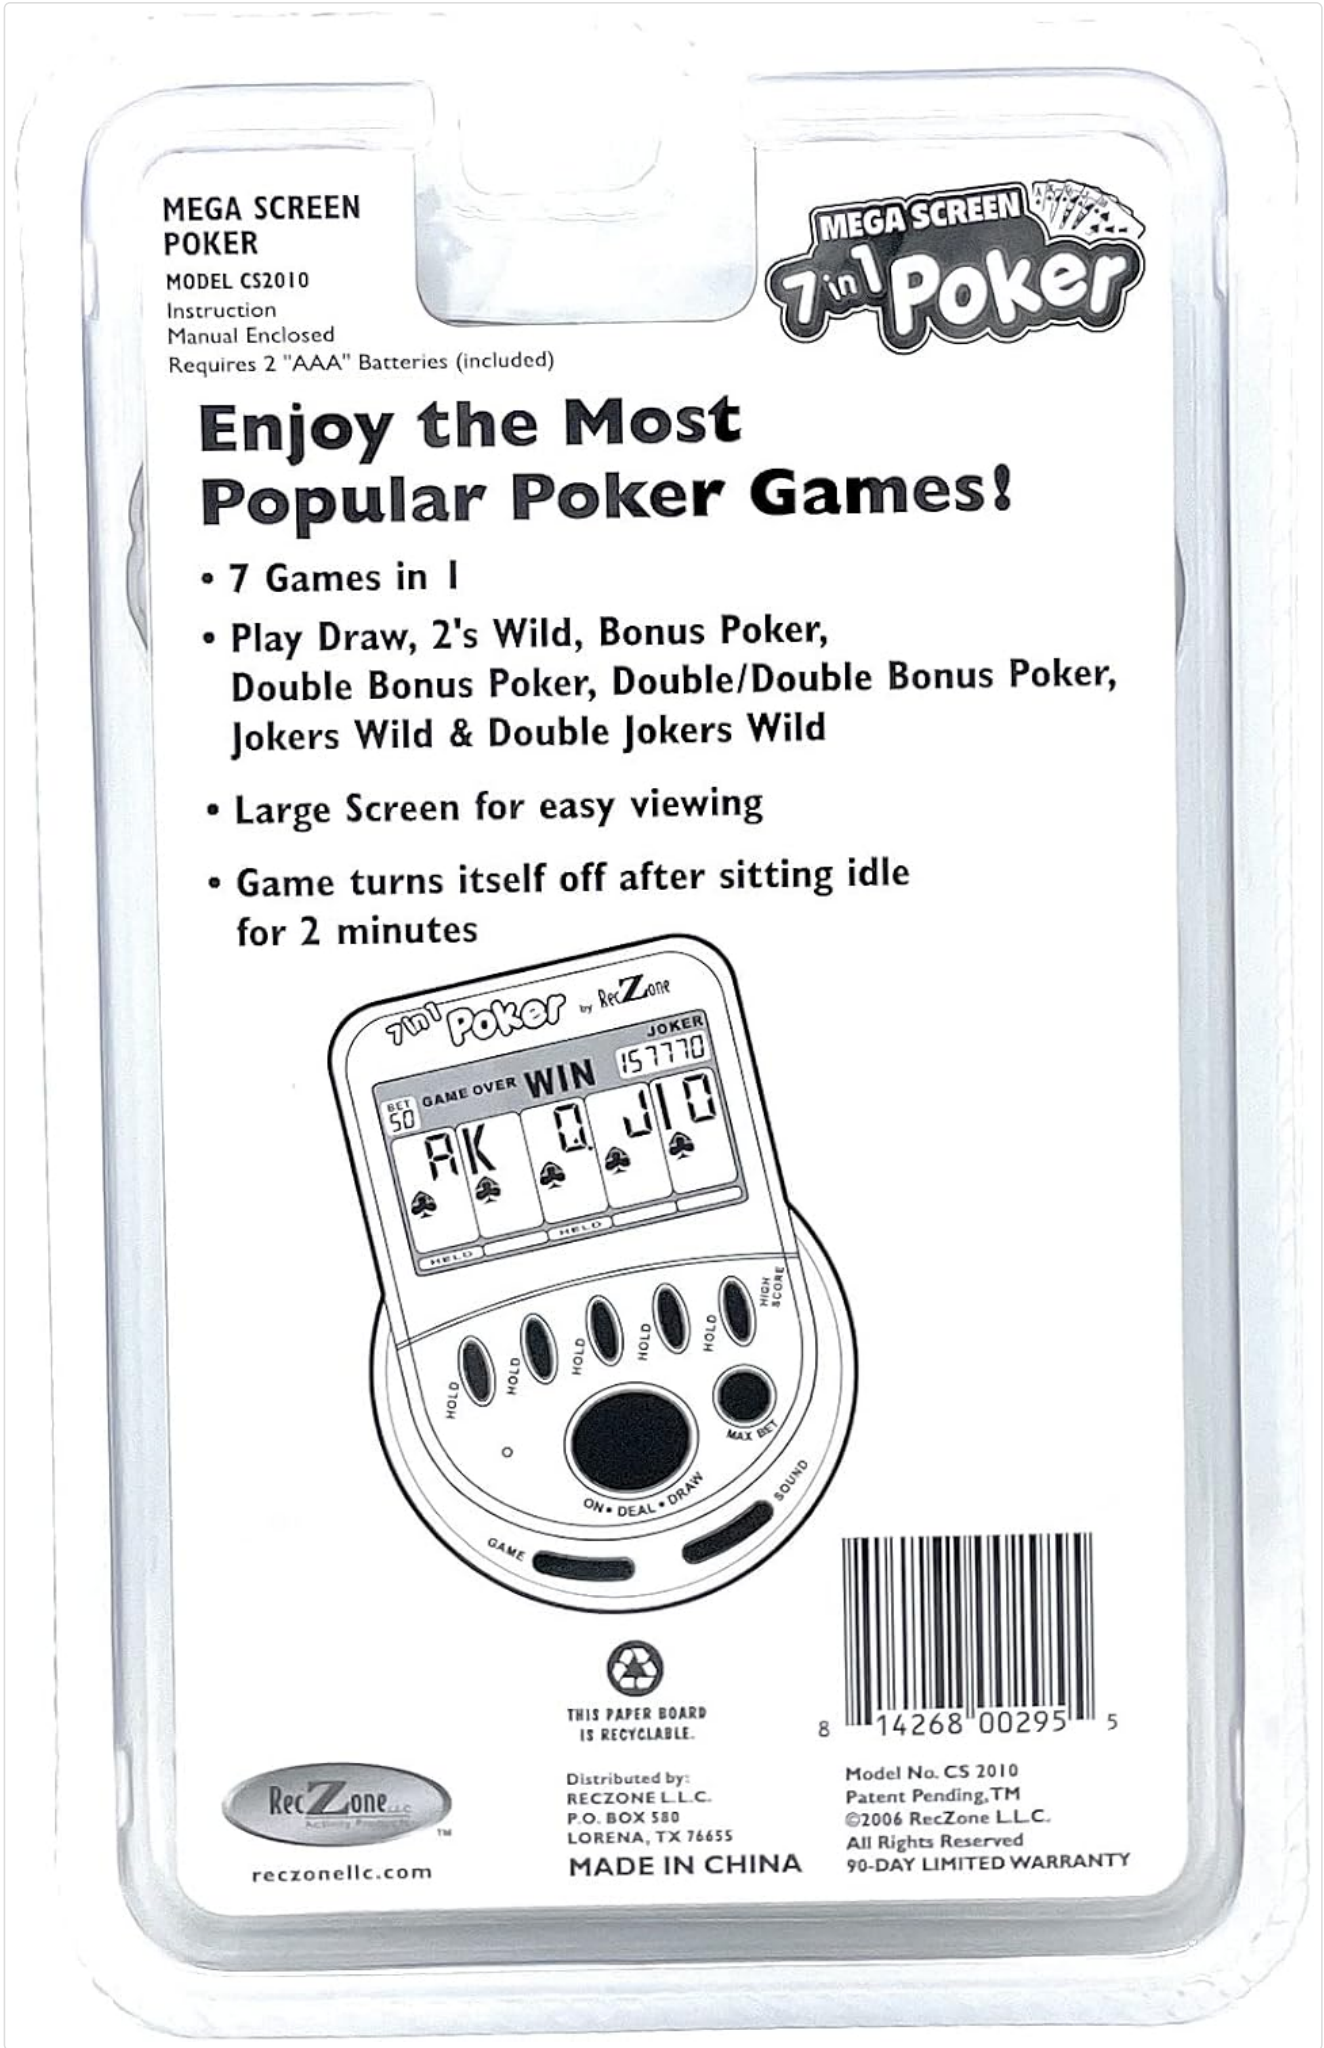


Figure 1: Front view of the RecZone Mega Screen 7 in 1 Poker Electronic Game.

The RecZone Mega Screen 7 in 1 Poker Electronic Game is a compact, handheld device featuring a large screen for clear visibility. It includes dedicated buttons for game control, sound adjustment, and score tracking. The device is powered by two AAA batteries.



Figure 2: Back view of the RecZone Mega Screen 7 in 1 Poker Electronic Game, illustrating the battery compartment.



Figure 3: Product packaging, detailing the 7 games included and other features.

Setup

Battery Installation

1. Locate the battery compartment on the back of the device.
2. Open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Note: Two AAA batteries are included with the product.

Operating Instructions

Power On/Off

Press the **ON/OFF** button to turn the game on or off. The game will automatically turn off after sitting idle for 2 minutes to conserve battery life.

Game Selection

Use the **GAME** button to cycle through the available poker games. The selected game will be displayed on the screen.

Playing a Hand

1. Once a game is selected, use the **BET U** and **BET D** buttons to adjust your wager.
2. Press the **DEAL/DRAW** button to receive your initial cards.
3. Review your cards. Use the individual **HOLD** buttons (typically corresponding to each card) to select which cards you wish to keep.
4. Press **DEAL/DRAW** again to discard unheld cards and draw new ones.
5. The game will then display your hand's outcome and any winnings.

Sound Control

Press the **SOUND** button to toggle game sounds on or off.

High Score

Press the **HOLD H.SCORE** button to view the highest score achieved.

Game Modes

The RecZone Mega Screen 7 in 1 Poker Electronic Game includes the following poker variations:

- **Draw Poker:** A classic poker game where players receive five cards and can discard and draw new cards once to improve their hand.
- **2's Wild:** A variation where all '2' cards act as wild cards, substituting for any other card to form the best possible hand.
- **Bonus Poker:** Offers higher payouts for certain four-of-a-kind hands compared to standard Jacks or Better.
- **Double Bonus Poker:** An enhanced version of Bonus Poker with even higher payouts for specific four-of-a-kind

combinations, particularly those involving aces.

- **Double/Double Bonus Poker:** Further increases the bonus payouts for various four-of-a-kind hands, often with different kickers.
- **Jokers Wild:** A game where one or more Joker cards are added to the deck, acting as wild cards to complete winning hands.
- **Double Jokers Wild:** Features two Joker cards in the deck, significantly increasing the chances of forming strong hands.

Maintenance

Cleaning

To clean the device, use a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the screen or casing.

Storage

When not in use for extended periods, remove the batteries to prevent leakage and potential damage to the device. Store the game in a cool, dry place away from direct sunlight.

Troubleshooting

Device Not Powering On

- Ensure batteries are correctly installed with proper polarity.
- Replace old batteries with new AAA batteries.

Screen Issues

- If the screen is dim or flickering, replace the batteries.
- If the screen is unresponsive, try resetting the device by removing and reinserting the batteries.

Specifications

- **Product Dimensions:** 5.75 x 4.12 x 1 inches
- **Item Weight:** 7.5 ounces
- **Model Number:** CS 2010
- **Manufacturer Recommended Age:** 13 years and up
- **Batteries:** 2 AAA batteries required (included)
- **Gender:** Unisex

Warranty and Support

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official RecZone website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question