Feikeer Fingerprint Keypad Door Lock with Handle

Feikeer Fingerprint Keypad Door Lock with Handle Instruction Manual

Model: Fingerprint Keypad Door Lock with Handle

Introduction

The Feikeer Fingerprint Keypad Door Lock with Handle offers a secure and convenient keyless entry solution for your home or office. This manual provides detailed instructions for installation, operation, and maintenance to ensure optimal performance and longevity of your lock.

Product Overview

The Feikeer Fingerprint Keypad Door Lock with Handle combines advanced security features with a modern design. Key components include the exterior keypad unit, interior battery unit, and the handle set.


1 2 3
4 5 6 0
7 8 9

Image: All components of the Feikeer Fingerprint Keypad Door Lock with Handle, including the exterior keypad, interior unit, and handle set.

Key Features:

- Fingerprint Unlock: Provides quick and secure access.
- Keypad Entry: Supports up to 50 user codes.
- Anti-Peeking Password: Allows entry of random digits before and after your code to prevent unauthorized viewing.
- Auto-Lock Function: Automatically locks the door after a set time (20-900 seconds).
- One-Touch Locking: Conveniently lock the door with a single touch.
- Low Battery Alarm: Notifies you when batteries are low.
- Backup Keys: Includes 2 physical keys for emergency access.
- Reversible Handle: Designed for both right and left-handed doors.
- Durable Construction: Made from high-quality zinc alloy and stainless steel with IP54 waterproof rating.

Setup and Installation

Before beginning installation, ensure your door meets the compatibility requirements. The lock fits most standard-sized doors ranging from 1-3/8 inch to 1-3/4 inch in thickness. The adjustable latch and handle hole drill (200mm/7.87in to 228mm/9in) allow it to fit most pre-existing door setups.

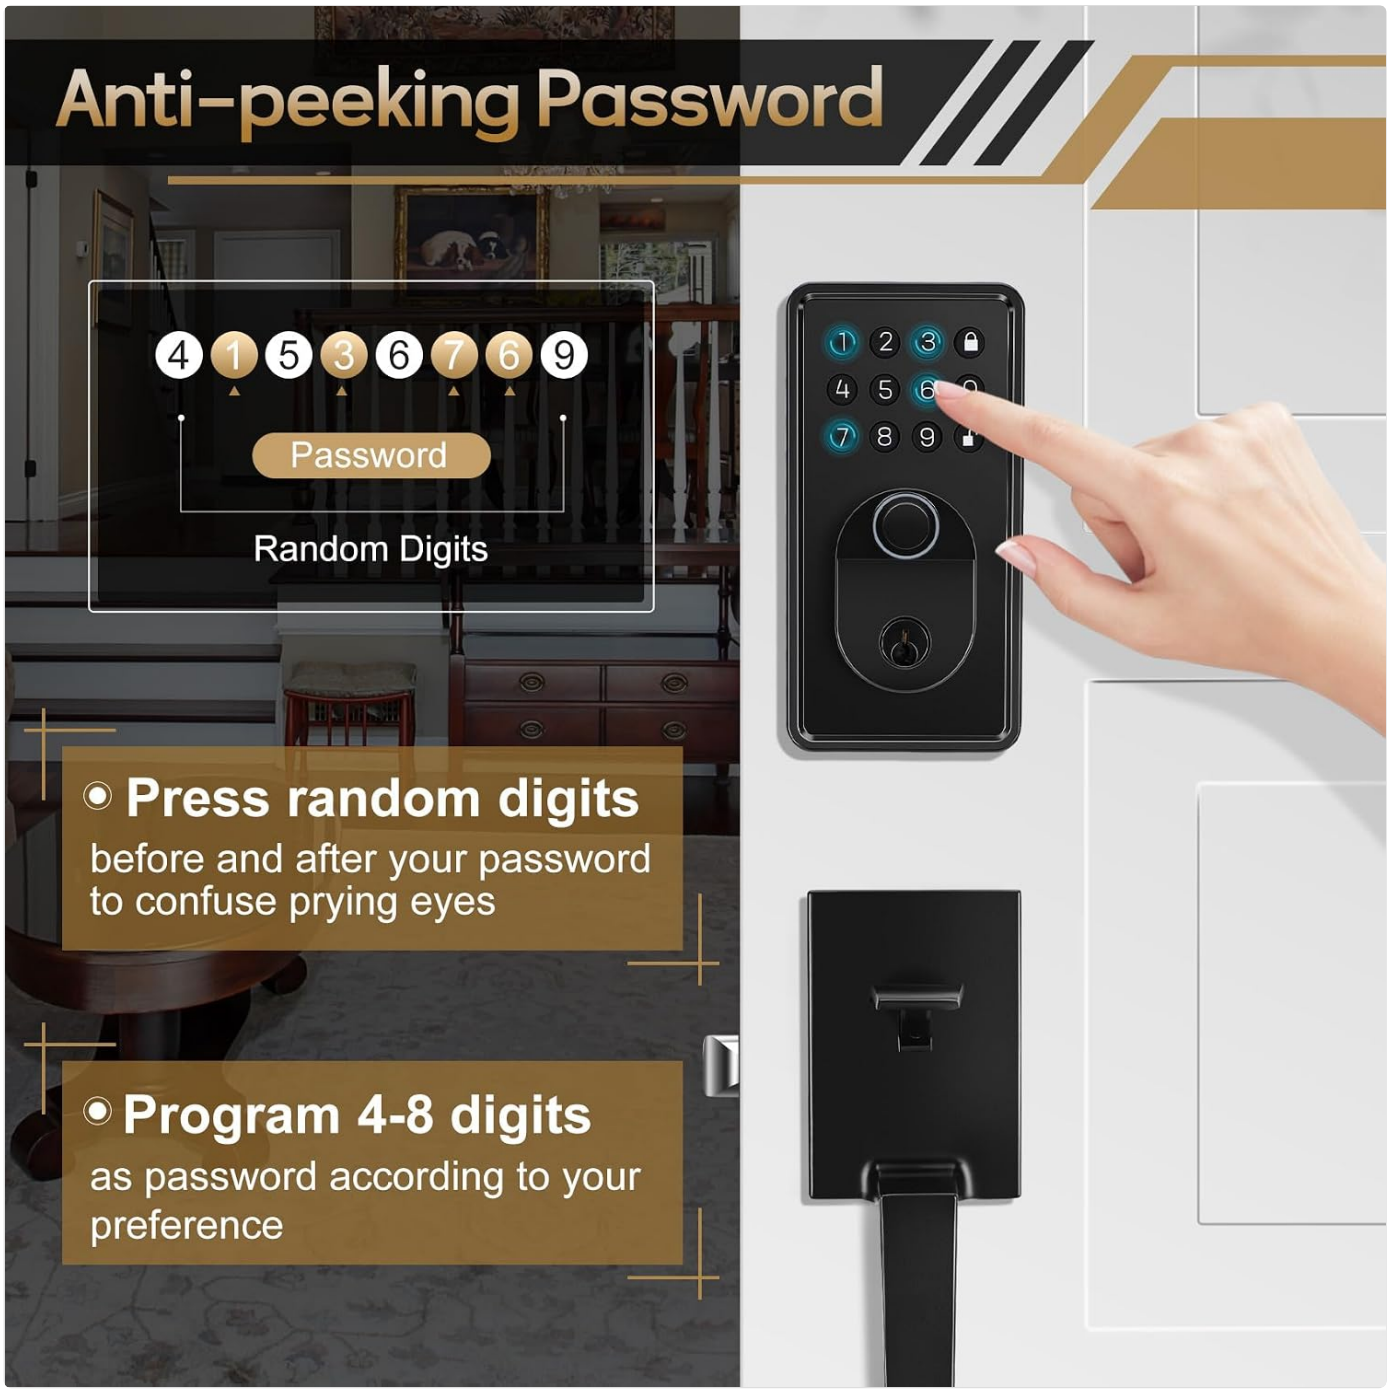


Image: Diagram illustrating door dimensions and compatibility for installation.

A detailed installation manual and programming instructions are included with your purchase. Installation can typically be completed with a screwdriver. For a comprehensive guide, please refer to the official PDF manual available here.

Operating Instructions

Keypad Operation:

- **Setting User Codes:** The lock supports up to 50 unique access codes. Refer to the programming instructions in the included manual for steps on how to set and manage these codes.
- **Anti-Peeking Password:** To enhance security, you can enter any random digits before or after your actual password. The lock will still recognize your correct code within the sequence.



Image: Demonstration of the anti-peeking password feature, showing random digits entered before and after the actual code.

Auto-Lock and One-Touch Locking:

- **Auto-Lock:** This feature allows the door to automatically lock after a user-defined period, ranging from 20 to 900 seconds. This prevents accidental unlocking or forgetting to lock the door.
- **One-Touch Locking:** Simply press the lock button on the keypad to instantly secure the door.



Image: Visual representation of the auto-lock feature, showing the lock engaging after a set time.

Temporary Access Codes:

- The lock supports one-time temporary PIN codes, ideal for visitors or service personnel.



Image: A person receiving a one-time user code for entry, demonstrating the temporary access feature.

Maintenance

- **Battery Replacement:** The lock requires four AA batteries. When the battery level is low, the lock will provide a low battery alarm. Replace all four batteries simultaneously to ensure optimal performance.
- **Cleaning:** Use a soft, dry cloth to clean the exterior of the lock. Avoid abrasive cleaners or solvents that could damage the finish.
- **Waterproof Rating:** The lock has an IP54 waterproof rating, providing protection against splashes and dust. While durable, avoid submerging the lock in water.



Image: The keypad unit with water droplets, illustrating its IP54 waterproof capability.

Troubleshooting

If you encounter issues with your Feikeer Fingerprint Keypad Door Lock, consider the following common solutions:

- **Lock Not Responding:** Check the batteries. If the low battery alarm has sounded or the keypad is unresponsive, replace all four AA batteries.
- **Incorrect Code Entry:** Ensure you are entering the correct user code. Remember that the anti-peeking feature allows for random digits before or after, but the core code must be accurate.
- **Fingerprint Recognition Issues:** Ensure your finger is clean and dry. Re-enroll your fingerprint if issues persist.
- **Mechanical Key Not Working:** Ensure the key is fully inserted and turned correctly. Check for any obstructions in the keyhole.
- **Door Not Locking/Unlocking Properly:** Verify that the lock is correctly aligned with the strike plate on the door frame. Ensure there are no obstructions preventing the deadbolt from extending or retracting fully.

For more detailed troubleshooting or persistent issues, please contact customer support.

Specifications

Feature	Detail
Brand	Feikeer
Model Name	Keyless Front Door Keypad Lock and Handle set
Lock Type	Biometric, Combination Lock, Key Lock, Keypad
Material	Brass, Stainless Steel, Zinc Alloy
Color	Matte Black
Item Dimensions (L x W x H)	12.87 x 8.11 x 8.11 inches
Item Weight	4.77 pounds
Door Thickness Compatibility	1-3/8 inch to 1-3/4 inch
User Codes Capacity	50
Power Source	4 x AA Batteries (not included)

Waterproof Rating	IP54

Warranty and Support

Feikeer provides a lifetime warranty for this front door handle with keypad lock. If you have any questions or encounter issues during usage, please feel free to contact us. We are committed to responding within 12 hours and providing a satisfactory answer. For customer support, please visit the Feikeer Store on Amazon.

© 2024 Feikeer. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question