Innsky IS-AF008

Innsky 8QT Dual Basket Air Fryer Oven

Instruction Manual

Model: IS-AF008

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please read all instructions carefully before operating this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use. Do not block air vents.
- The appliance generates heat during operation. Maintain a safe distance from walls and other appliances.

Product Overview

The Innsky 8QT Dual Basket Air Fryer Oven is designed for versatile and efficient cooking, featuring two independent baskets for preparing different foods simultaneously. Below are the main components of your air fryer:

- **Main Unit:** Houses the heating elements, fans, and control panel.

- **Control Panel:** Digital display with touch controls for temperature, time, presets, and special functions.
- **Dual 4-Quart Cooking Baskets:** Two separate non-stick baskets for independent cooking.
- **Non-stick Frying Plates:** Removable plates that fit into each basket, allowing for air circulation and easy cleaning.



Image: Front view of the Innsky 8QT Dual Basket Air Fryer Oven, showcasing its two independent cooking baskets.



Image: Internal view illustrating the independent heating and air circulation within each basket.

Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels from the appliance.
2. **Initial Cleaning:** Before first use, wash the cooking baskets and non-stick frying plates with warm, soapy water.

Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.

3. **Eliminating Manufacturing Odor:** To remove any residual manufacturing odor, place the empty baskets and frying plates back into the unit. Run the air fryer at its highest temperature (400°F / 200°C) for approximately 20 minutes. Ensure the area is well-ventilated during this process.
4. **Placement:** Place the air fryer on a stable, heat-resistant surface. Ensure there is sufficient space (at least 6 inches) around the back and sides of the unit for proper air circulation, as hot air vents from the rear. Avoid placing it near flammable materials or other appliances that could be affected by heat.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Operating Instructions

Control Panel Overview



Image: Close-up of the digital control panel, showing various function buttons and display.

The digital control panel allows you to manage cooking settings for both baskets. Key buttons include:

- **Power Button:** Turns the unit on/off.
- **Temperature Controls (°F/°C):** Adjust cooking temperature.
- **Time Controls:** Adjust cooking time.

- **Basket Selectors (L/R):** Choose which basket to program.
- **Preset Menus:** Icons for various food types (Bread, Vegetables, Steak, Bacon, Shrimp, Fish, Chicken, French Fries).
- **Sync Finish:** Synchronizes the finish time for both baskets, even if they have different cooking settings.
- **Dual Cook:** Copies the settings from one basket to the other for cooking identical items.
- **Shake Reminder:** Activates an audible reminder to shake the basket during cooking.

Basic Operation

1. Place food into the desired basket(s). Do not overfill.
2. Insert the basket(s) firmly into the main unit.
3. Press the Power button to turn on the air fryer.
4. Select the basket (L or R) you wish to program.
5. Adjust the temperature and time using the respective controls, or select a preset menu.
6. Press the Start/Pause button to begin cooking.

Dual Cooking Technology

This air fryer features advanced dual cooking capabilities:

- **Sync Finish:** Allows you to cook two different foods with different settings, ensuring they both finish cooking at the same time. Program each basket individually, then press the "Sync Finish" button. The air fryer will automatically adjust the start times to synchronize completion.

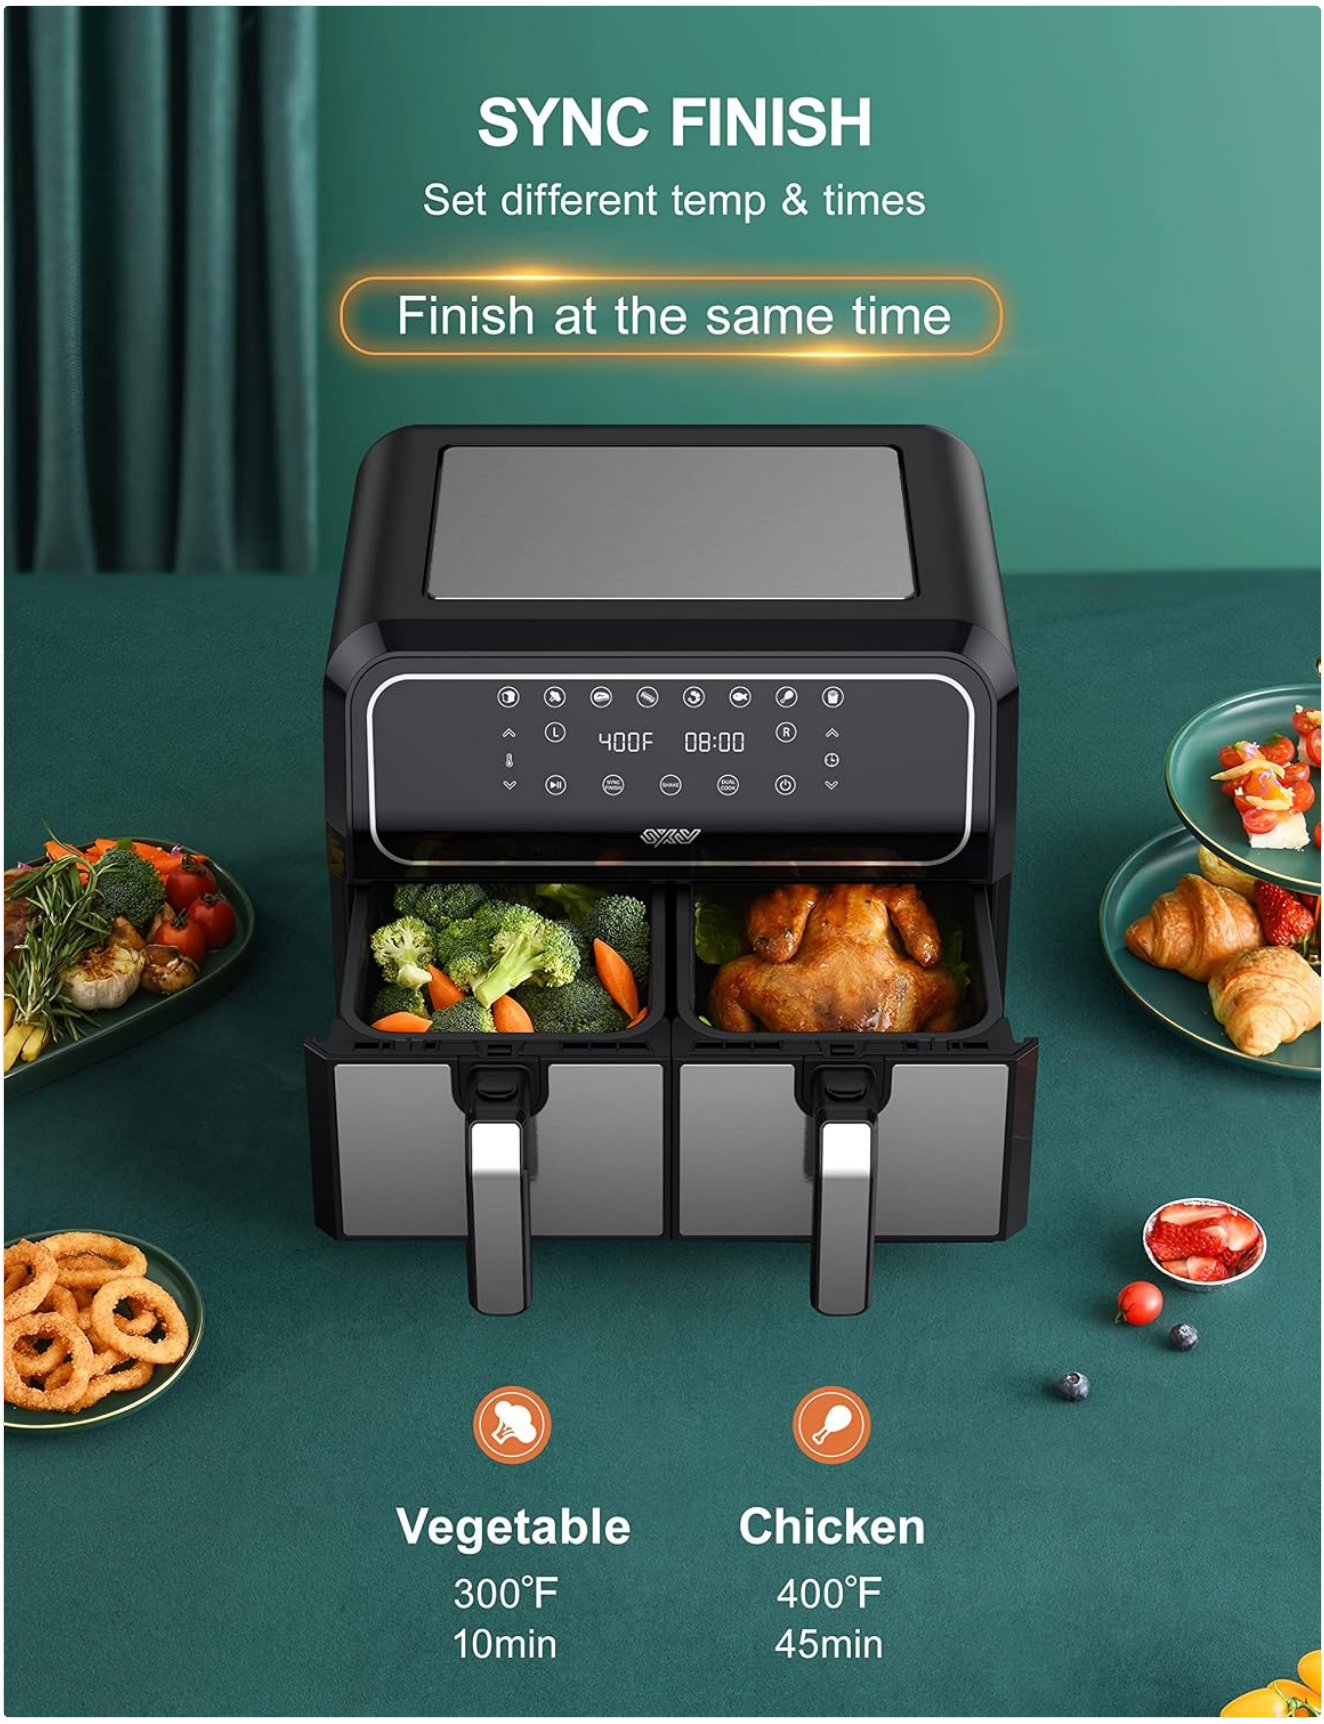


Image: Illustration of the Sync Finish function, allowing different foods to complete cooking simultaneously.

- **Dual Cook:** Easily duplicates the cooking settings from one basket to the other. Program one basket, then press the "Dual Cook" button to apply the same settings to the second basket. This is ideal for cooking larger quantities of the same food.



Image: Demonstrating the Dual Cook button, which copies settings from one basket to the other.

Preset Menus

The air fryer comes with 8 convenient preset menus for common dishes:



Image: Visual representation of the 8 preset cooking functions available on the control panel.

- Bread
- Vegetables
- Steak
- Bacon

- Shrimp
- Fish
- Chicken
- French Fries

Simply select the desired preset, and the air fryer will automatically set the optimal temperature and time. You can adjust these settings manually if needed.

Shake Reminder

For certain foods, the air fryer will provide an audible reminder to shake the basket. This ensures even cooking and crispiness. When the reminder sounds, carefully remove the basket, shake its contents, and reinsert it to resume cooking.



Image: Depiction of the Shake Reminder function, prompting users to shake the food for even cooking.

Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

2. **Baskets and Frying Plates:** The cooking baskets and non-stick frying plates are dishwasher safe for easy cleaning. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. For stubborn residue, soak them in warm water for a few minutes before cleaning.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth. For baked-on food, use a mild detergent and a soft brush. Do not use abrasive cleaners or scouring pads.
4. **Exterior:** Clean the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer. Store it in a cool, dry place.

Troubleshooting

If you encounter any issues with your Innsky Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the baskets are fully inserted.
Food is not cooked evenly.	Baskets overcrowded; food not shaken; incorrect temperature/time.	Do not overcrowd baskets; cook in smaller batches if necessary. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food being cooked.	Clean the baskets and frying plates thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.
Appliance emits a plastic smell during first use.	New product manufacturing residue.	This is normal for first use. Run the empty air fryer at high temperature for 20 minutes in a well-ventilated area to burn off the smell.

If the problem persists after attempting these solutions, please contact Innsky customer support for further assistance.

Product Specifications

Feature	Specification
Brand	Innsky
Model Number	IS-AF008
Colour	Sliver
Product Dimensions	37 x 38 x 30 cm (14.5 x 15 x 11.8 inches)
Capacity	8 quarts (7.6L) total (2 x 4-quart baskets)
Power/Wattage	1700 watts
Voltage	120 Volts (AC)

Feature	Specification
Material	Stainless Steel
Noise Level	65 dB
Special Features	Sync Finish, Easy to Clean, 2 Independent Baskets, Dual Cooking Tech
Item Weight	7.4 kg (16.3 lbs)

Warranty and Customer Support

Innsky products are manufactured with quality and reliability in mind. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Innsky website.

If you require technical assistance, have questions about your product, or need to report an issue, please contact Innsky customer support through their official channels. Contact information can typically be found on the Innsky website or within the product packaging.

Please have your model number (IS-AF008) and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question