Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bellemave B09PZ14JG8

Bellemave Twin XL Over Queen Metal Bunk Bed

Model: B09PZ14JG8

Instruction Manual

1. Introduction

Thank you for purchasing the Bellemave Twin XL Over Queen Metal Bunk Bed. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new bunk bed. Please read these instructions carefully before assembly and retain them for future reference.
This bunk bed features a sturdy metal construction with a gunmetal finish, designed to provide a space-saving sleeping solution. The top bunk accommodates a Twin XL mattress, and the bottom bunk accommodates a Queen mattress. An integrated ladder provides access to the upper bunk, and safety guardrails are included for user protection.

2. Safety Information

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- **STRANGULATION HAZARD:** Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts, and jump ropes.
- **FALL HAZARD:** Always use the ladder for entering and exiting the upper bunk. Do not jump on the bed.
- **TOP BUNK AGE RESTRICTION:** The top bunk is not suitable for children under six years of age.
- **MAXIMUM WEIGHT CAPACITY:** The maximum weight capacity for the top bunk is 175 lbs. The maximum weight capacity for the bottom bunk is 350 lbs. Do not exceed these limits.
- **MATTRESS REQUIREMENTS:** The top bunk requires a Twin XL mattress (39"W x 80"L) with a maximum height of 6 inches. Ensure the mattress is at least 5 inches below the top edge of the guardrails. The bottom bunk accommodates a Queen mattress.
- **GUARDRAILS:** Always use the guardrails on both sides of the upper bunk.
- **ASSEMBLY:** Ensure all connections are tight and secure before use. Periodically check and tighten all fasteners.
- **VENTILATION:** Provide adequate ventilation around the bed.

3. Package Contents

Your Bellemave Twin XL Over Queen Metal Bunk Bed comes in two boxes. Please ensure you have received both packages before beginning assembly. Carefully unpack all components and check against the parts list (typically included in the physical manual) to ensure all items are present and undamaged. If any parts are missing or damaged, please contact customer support immediately.
Expected components include:

- Bed frame sections (headboards, footboards, side rails)
- Ladder
- Metal slats for both bunks
- Support legs for the bottom bunk
- Hardware pack (screws, bolts, washers, Allen wrench)

4. Setup and Assembly Instructions

Assembly of the Bellemave bunk bed is designed to be straightforward, requiring no additional tools beyond what is provided. It is recommended that two adults assemble this product.

1. **Preparation:** Clear a spacious area for assembly. Lay out all parts on a soft, clean surface to prevent scratches. Identify all components using the parts list.
2. **Assemble Lower Bunk:** Begin by connecting the headboard and footboard of the lower (Queen) bunk to the side rails using the provided hardware. Hand-tighten all screws initially.
3. **Install Lower Slats:** Place the metal slats onto the support rails of the lower bunk. Ensure they are evenly spaced and securely fastened if applicable. Install any central support legs for the lower bunk.
4. **Assemble Upper Bunk:** Connect the headboard and footboard of the upper (Twin XL) bunk to its side rails.
5. **Attach Upper Bunk to Lower Bunk:** Carefully lift the assembled upper bunk and align its support posts with the designated connection points on the lower bunk frame. Secure with the appropriate hardware.
6. **Install Upper Slats:** Place the metal slats onto the support rails of the upper bunk, ensuring they are evenly spaced and secure.
7. **Attach Ladder:** Securely attach the integrated ladder to the designated points on the bunk bed frame.
8. **Final Tightening:** Once all components are in place and aligned, go back and fully tighten all screws and bolts using the provided Allen wrench. Do not overtighten.

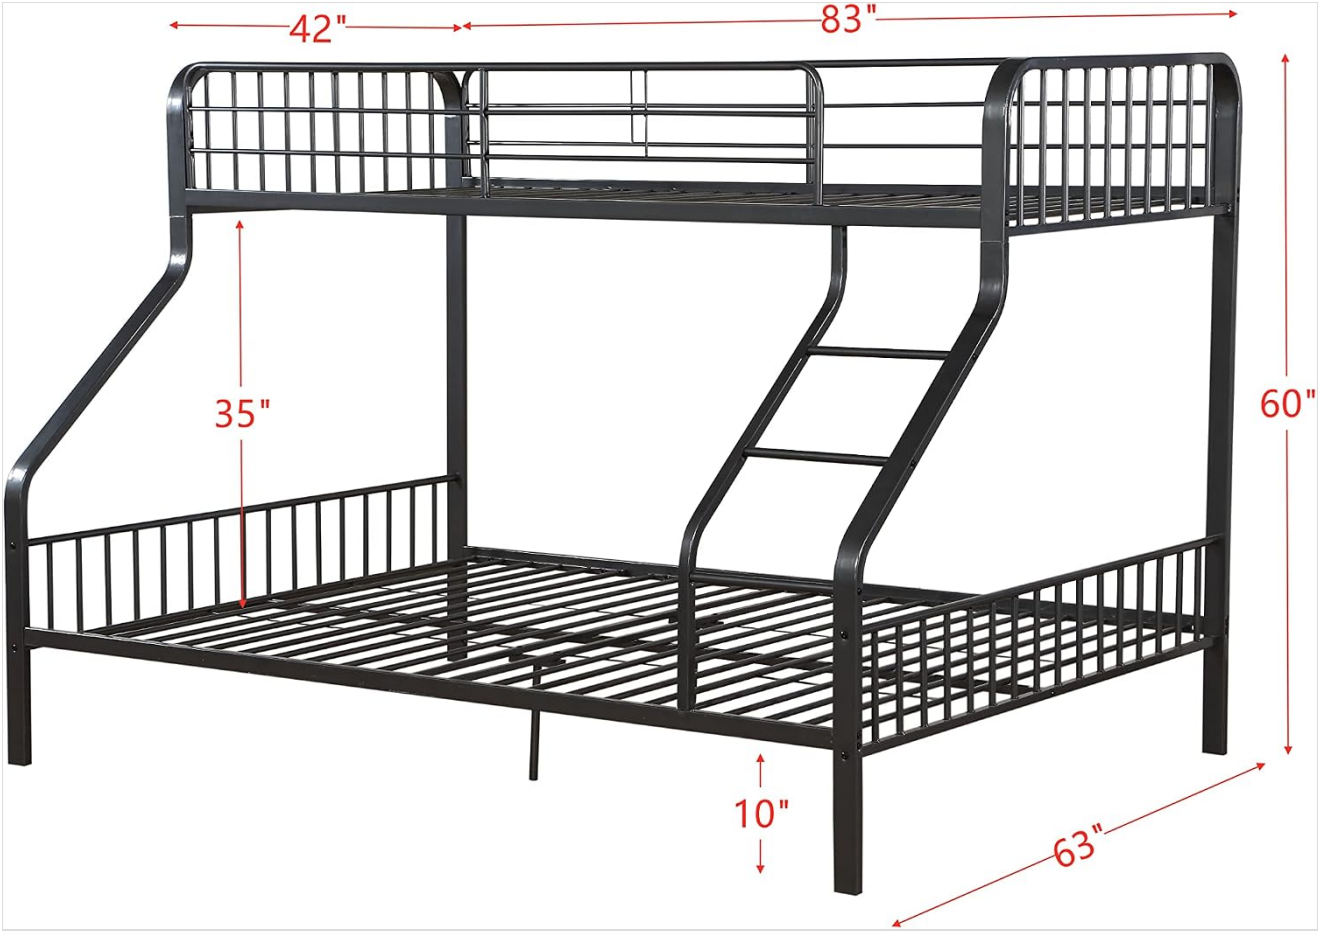


Figure 4.1: Overall dimensions of the assembled bunk bed.



Figure 4.2: Assembled bunk bed from a side perspective.

5. Operating Instructions (Usage)

To ensure safe and proper use of your Bellemave bunk bed, please adhere to the following guidelines:

- **Mattress Placement:** Place a Twin XL mattress (39"W x 80"L, max 6" height) on the top bunk. Place a Queen mattress on the bottom bunk. Ensure mattresses fit snugly within the frame.
- **Ladder Use:** Always use the integrated ladder to access the top bunk. Face the ladder when climbing up or down.
- **Weight Distribution:** Distribute weight evenly on both bunks. Avoid concentrating weight in one small area.
- **No Horseplay:** Prohibit jumping on the bed or engaging in rough play on or around the bunk bed.
- **Clearance:** Ensure there is adequate overhead clearance for the top bunk user.



Figure 5.1: Example of the bunk bed in use with mattresses.

6. Maintenance

Regular maintenance will help prolong the life and safety of your bunk bed.

- **Cleaning:** Wipe down the metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the gunmetal finish.
- **Fastener Check:** Periodically (e.g., every 3-6 months) inspect all bolts, screws, and connections to ensure they are tight. Re-tighten any loose fasteners. Do not overtighten.
- **Structural Integrity:** Check for any signs of wear, damage, or bending in the metal frame or slats. If any damage is found, discontinue use and contact customer support for replacement parts or advice.
- **Slat Inspection:** Ensure all bed slats are properly seated and not bent or broken.



Figure 6.1: Detail of the metal slats and frame for inspection.

7. Troubleshooting

If you encounter any issues with your Bellemave bunk bed, please refer to the following common solutions:

- **Missing Parts:** If you find that parts are missing upon delivery, first check all packaging thoroughly. The product ships in two boxes, which may arrive separately. If parts are still missing, contact customer support immediately with your purchase details.
- **Damaged Parts:** If any components are damaged during shipping or assembly, do not attempt to force them. Contact customer support for replacement parts.
- **Bed Squeaks:** Squeaking often indicates loose fasteners. Re-tighten all bolts and screws on the entire frame. Ensure all slats are properly seated.
- **Instability/Wobbling:** Ensure all connections are fully tightened. Check that the bed is placed on a level surface.
- **Difficulty Assembling:** Review the assembly steps carefully. Ensure you are using the correct hardware for each connection. Do not fully tighten screws until all parts are loosely assembled.

8. Specifications

Model Number	B09PZ14JG8
Material	Metal, Steel
Finish Type	Gunmetal Finish
Overall Dimensions (L x W x H)	83" x 63" x 60"
Top Bunk Mattress Size	Twin XL (39"W x 80"L)
Top Bunk Max Mattress Height	6 inches

Bottom Bunk Mattress Size	Queen
Top Bunk Weight Capacity	175 lbs
Bottom Bunk Weight Capacity	350 lbs
Clearance between Floor & Rail	10 inches
Clearance between Rails	35 inches
Included Components	Slat system

9. Warranty Information

The Bellemave Twin XL Over Queen Metal Bunk Bed comes with a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper assembly, misuse, abuse, accidents, or normal wear and tear.
Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please contact customer support.

10. Customer Support

For any questions, assistance with assembly, missing parts, or warranty claims, please contact our customer service team. We are committed to responding to your inquiries within 24 hours.

- **Website:** Visit the Bellemave Store on Amazon
- **Email:** [Manufacturer/Seller Email Address - Please refer to your purchase documentation]
- **Phone:** [Manufacturer/Seller Phone Number - Please refer to your purchase documentation]

When contacting support, please have your model number (B09PZ14JG8) and proof of purchase readily available.

© 2026 Bellemave. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09PZ14JG8

More documents and user manuals: **https://manuals.plus/**