Hatteker JM-69503

Hatteker Adjustable Beard Trimmer Hair Cutting Kit User Manual

Model: JM-69503
Brand: Hatteker

Product Overview

The Hatteker 3-in-1 Hair Clipper Kit is designed for versatile grooming needs, including haircutting, body hair shaving, retouching, sculpting, and beard/sideburn design. It features durable steel blades, adjustable cutting lengths, multiple speed settings, and a washable body for easy maintenance.



Figure 1: Hatteker 3-in-1 Hair Clipper Kit and included accessories.

Package Contents

Your Hatteker Hair Clipper Kit includes the following components:

- Main Hair Clipper Unit
- 3 Blade Head Attachments (Full-size trimmer, Precision trimmer, Body hair trimmer)
- 8 Guide Combs (3mm, 4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm, Thinning hair, Precision dial comb)
- USB Charging Cable
- Cleaning Brush
- Comb



Figure 2: Contents of the Hatteker Hair Clipper Kit.

Setup and Charging

Initial Charge

Before first use, fully charge the hair clipper. Connect the USB charging cable to the charging port at the bottom of the unit and plug the other end into a compatible USB power source (e.g., computer, USB wall adapter). The LED display will indicate the charging status and battery percentage.



Figure 3: USB charging connection.

A full charge takes approximately 1.5 hours and provides up to 2.5 hours of cordless trimming time.



Figure 4: Detail of the charging port.

Attaching and Removing Blade Heads/Combs

To change blade heads, gently pull the current head upwards to detach it. Align the desired blade head with the main unit and press down until it clicks into place. To attach a guide comb, slide it onto the blade head until it securely locks. To remove, gently pull the comb away from the blade.



Figure 5: Interchangeable blade heads.



Figure 6: Attaching a guide comb.



Figure 7: Securing the guide comb.



Figure 8: Removing a guide comb.



Figure 9: Detaching the guide comb.

Operating Instructions

Power On/Off and Speed Adjustment

Press the power button to turn the clipper on or off. The LED display will show the current battery percentage and speed mode. The clipper features three adjustable speeds. Press the "Turbo" button to cycle through the speed settings (5000, 6000, 7000 RPM) to suit different hair types and cutting needs.



Figure 10: LED Digital Display and controls.

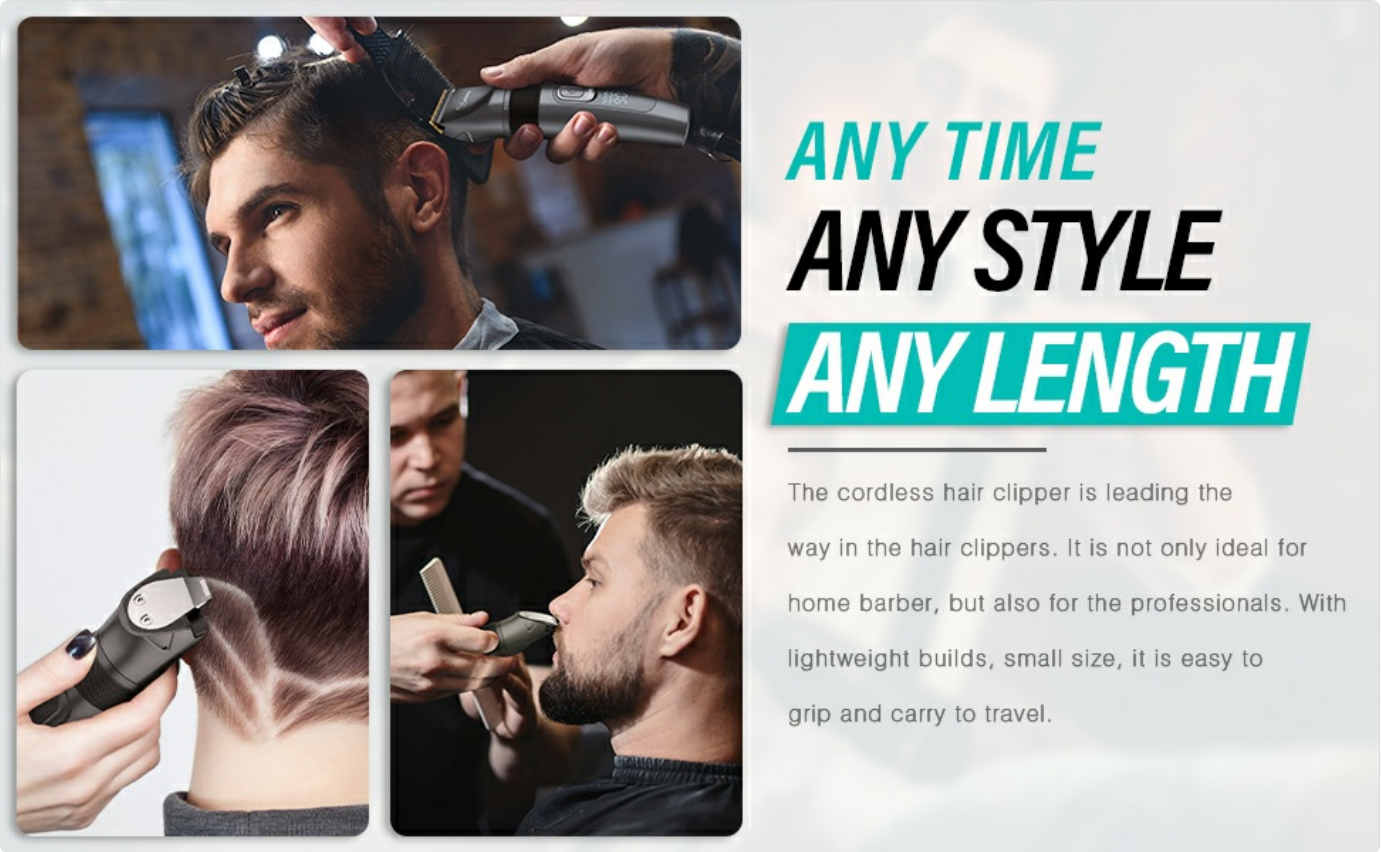


Figure 11: Detailed view of LED indicators including power, speed, lubricant, charging, clean, and lock-key.

Your browser does not support the video tag.

Video 1: Demonstrates the Hatteker Beard Trimmer's features, including speed adjustment and waterproof design.

Adjusting Cutting Length

The main hair clipper features an adjustable blade from 0.5mm to 2.5mm. Rotate the precision dial located on the body of the clipper to select your desired cutting length. For longer lengths, attach one of the 7 guide combs (3mm, 4-6mm, 7-9mm, 10-12mm, 16-18mm, 22-24mm, thinning hair) or use the precision dial with the precision trimmer head.



Figure 12: Adjustable blade and guide comb options.



Figure 13: Precision dial for fine-tuning cutting length.



Figure 14: Guide combs for different hair and beard lengths.

Maintenance

Cleaning

The Hatteker hair clipper is designed with a washable body. After each use, remove the blade head and rinse it under running water to remove hair clippings. The main unit can also be rinsed under the faucet. Ensure the unit is completely dry before storage or next use.



Figure 15: Whole body washable design for easy cleaning.

Use the included cleaning brush to remove any stubborn hair particles from the blades and internal components before rinsing.

Lubrication

The LED display includes a "reminder lubricant" indicator. When this icon appears, apply a small amount of clipper oil (not included) to the blades to ensure smooth operation and prolong blade life. Run the clipper for a few seconds to distribute the oil evenly.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Clipper does not turn on.	Low battery or unit is locked.	Charge the clipper fully. If the lock-key icon is displayed, hold down the power button for 5 seconds to unlock.
Blades are pulling hair or cutting poorly.	Blades are dull, dirty, or require lubrication.	Clean the blades thoroughly. Apply clipper oil if the lubricant reminder is active. Consider replacing blade heads if dullness persists.
Clipper makes unusual noise.	Blades are not properly aligned or unit needs lubrication.	Ensure blade heads are securely attached. Lubricate the blades. If the issue persists, contact customer support.

Specifications

Model: JM-69503

Input: 5V, 1000mA

Charge Time: 1.5 hours

Runtime: Up to 2.5 hours

Battery Type: Lithium-Ion

Product Dimensions: 2.64 x 8.98 x 10.67 inches

Weight: 1.3 Pounds

Waterproof: Yes, whole body washable

Warranty and Support

Hatteker products are manufactured with quality and performance in mind. For warranty information, technical support, or any inquiries regarding your product, please refer to the contact information provided on the product packaging or visit the official Hatteker website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact Hatteker Customer Service.

© 2024 Hatteker. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question