Ufree 1668

Ufree Foil Shaver (Model 1668) User Manual

Your guide to a precise and comfortable shave.

Introduction

The Ufree Foil Shaver (Model 1668) is designed to provide a professional and close shaving experience for men. Featuring sharp titanium blades, three adjustable speeds, and a powerful linear motor, this electric razor is suitable for face, neck, jaw, and even bald head shaving. Its ergonomic design and long-lasting battery ensure convenience and efficiency.

What's in the Box

Upon unpacking your Ufree Foil Shaver, please ensure all the following components are present:

- Ufree Foil Shaver (Model 1668)
- Storage Bag
- Charging Cables (USB-A to USB-C)
- Cleaning Brush
- Protective Cap

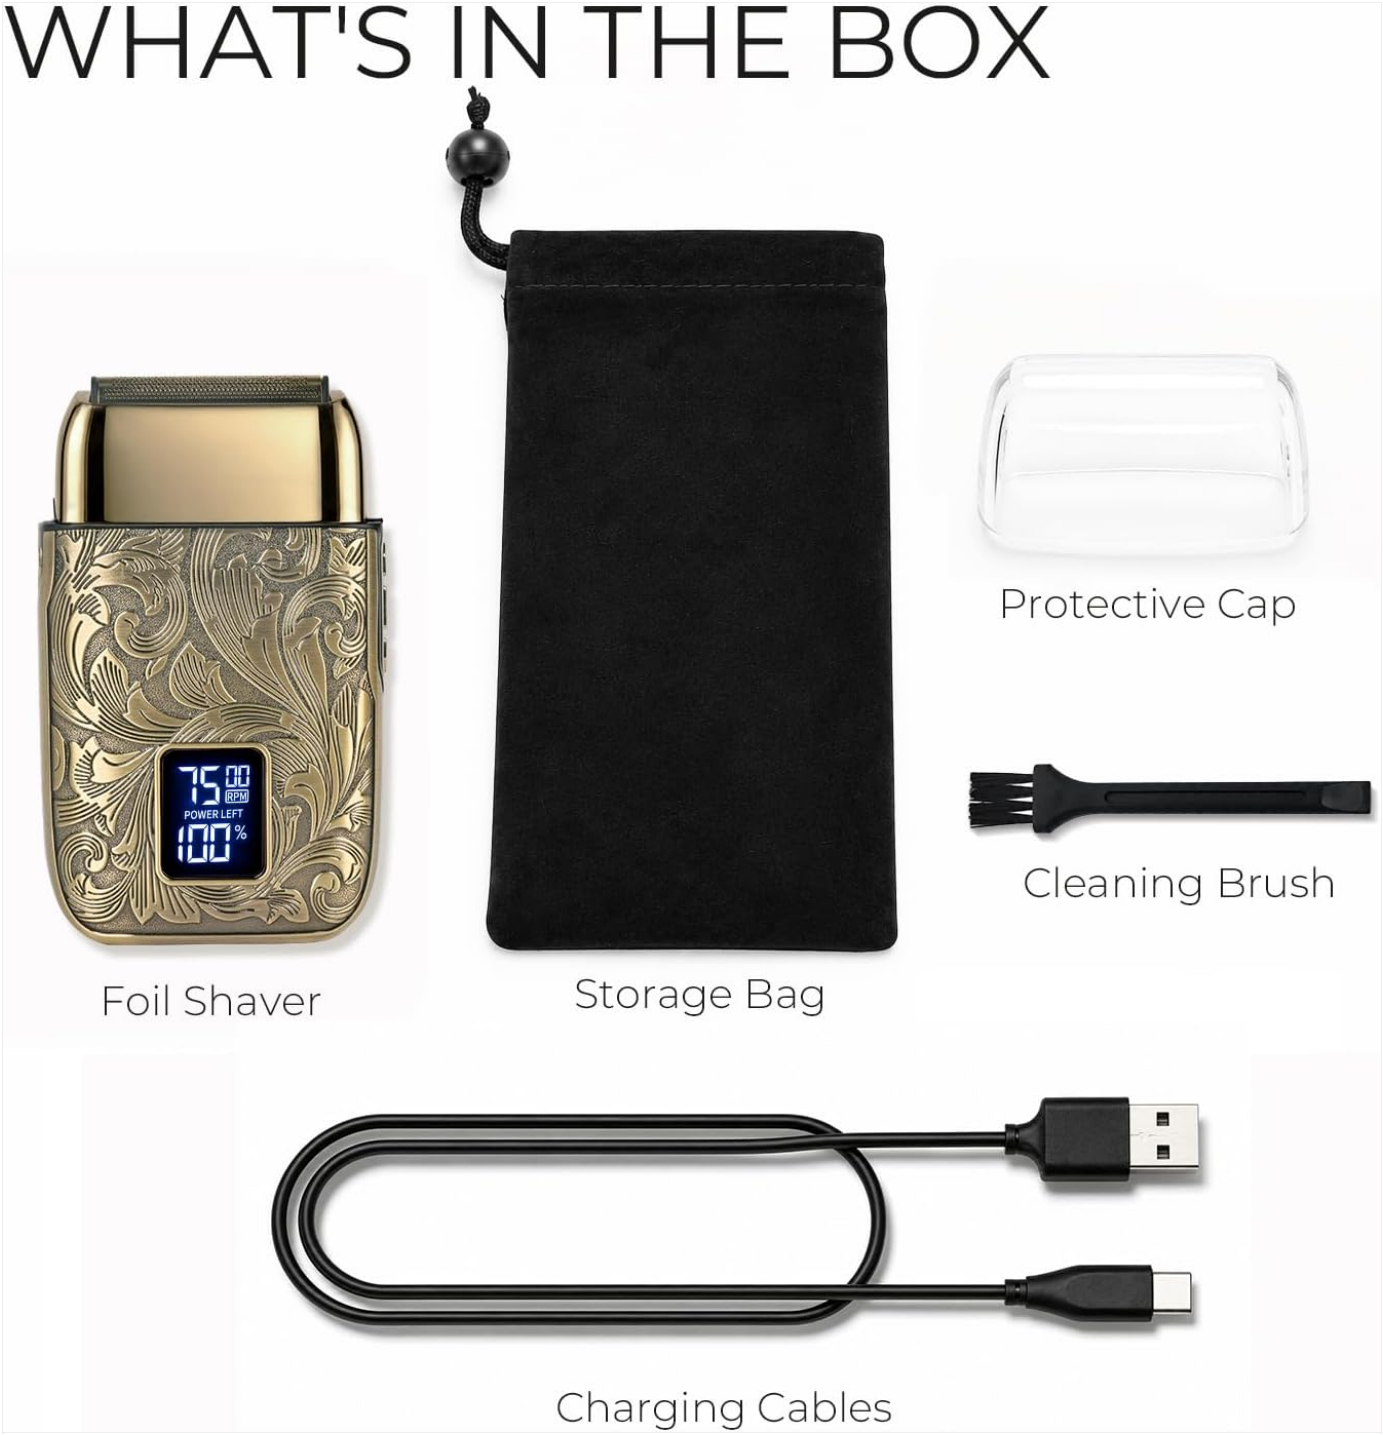


Image: All components included in the Ufree Foil Shaver package.

Safety Information

Please read and adhere to the following safety guidelines to ensure safe operation and prevent injury or damage:

- Always trim longer hair before using the shaver to prevent pulling and ensure optimal performance.
- Avoid using the shaver near water to prevent electrical shock.
- Follow proper cleaning and care instructions to prevent bacterial growth and maintain hygiene.
- Keep the charging cord away from water to prevent electrical shock.

Setup

Initial Charging

Before first use, fully charge your Ufree Foil Shaver. Connect the provided USB-C charging cable to the shaver's charging port and plug the other end into a compatible USB power source (e.g., computer, wall adapter). A full charge takes approximately 2 hours and provides up to 150 minutes of working time. The LED display will indicate the battery percentage.



Image: The shaver connected to its USB-C charging cable, showing the battery level on the LED display.

Operating Instructions

Power On/Off and Speed Adjustment

Press the power button to turn the shaver on or off. The shaver features three adjustable speeds: 6500 RPM, 7000 RPM, and 7500 RPM. Cycle through these speeds by pressing the speed adjustment button to select the desired intensity for your shave.



Image: The shaver displaying its speed settings and a user demonstrating shaving.

Shaving Technique

For optimal results, ensure your stubble is shorter than 1/25 inch (approximately 1mm). If your hair is longer, coarse, or thick, it is recommended to trim it with another razor or clipper first.

1. Lay the shaver blades flat against your skin.
2. Gently glide the dual-action foil shaver up and down, or in circular motions, against the direction of hair growth.
3. Repeat as needed until a smooth, close shave is achieved. The trimmer will cut longer stubble, and the foil will provide the close finish.



Image: A man using the Ufree Foil Shaver to achieve a comfortable and close shave on his face.



Image: The shaver is versatile for use on both facial hair and a bald head.

Maintenance

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene. After each use:

1. Ensure the shaver is turned off.
2. Gently remove the foil cover.
3. Use the provided cleaning brush to remove any trapped hair from the foil and cutter blades.
4. Reattach the foil cover securely.

Foil and Blade Replacement

The Ufree Foil Shaver features replaceable foil and cutter blades. Over time, these components may wear down, affecting shaving performance. Replacement parts can be purchased separately. Refer to the diagram below for installation notes.



Image: Step-by-step guide for removing the foil cover, installing cutter blades, and replacing the foil head.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver not cutting effectively	Stubble too long; blades/foil clogged or dull.	Trim longer hair before shaving. Clean blades and foil. Consider replacing foil and blades if dull.
Shaver not charging	Charging cable not connected properly; faulty cable/port.	Ensure cable is securely connected. Try a different USB power source or cable. Contact support if issue persists.
Skin irritation/razor burn	Excessive pressure; shaving against grain on sensitive skin.	Use light pressure. Shave in the direction of hair growth. Ensure skin is clean and dry.

Specifications

Feature	Detail
Product Dimensions	7.87 x 4.5 x 1.57 inches
Item Model Number	1668
Manufacturer	Ufree
Brand Name	Ufree
Recommended Uses	Mustache, Beard, Bald men, Fine hair, Stubble, Face Hair
Model Name	Ufree 3-Speed
Included Components	Cleaning Brush, Charging Cables, Protective Cap, Storage Bag
Additional Features	Cordless, LED Display, Replaceable Foil
Power Source	Corded Electric (via USB-C)
Battery Average Life	150 minutes (after 2 hours charge)
Head Type	Foil
Number of Blades	2
Item Weight	0.4 kg (14.11 ounces)
Color	Gold
Blade Material	Titanium

Warranty and Support

Manufacturer's Warranty

The Ufree Foil Shaver (Model 1668) comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or technical assistance regarding your Ufree Foil Shaver, please contact Ufree customer service. We offer 24-hour customer service support to assist you.
Contact information can typically be found on the product packaging or the official Ufree website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question