COTINSE 4 Receivers + 2 Buttons

COTINSE Wireless Doorbell Kit Instruction Manual

Model: 4 Receivers + 2 Buttons

Brand: COTINSE

Product Overview

The COTINSE Wireless Doorbell Kit provides a reliable and convenient solution for your home, office, or garden. Featuring an extended range, easy installation, and customizable settings, this system ensures you never miss a visitor.

- **Extended Range:** Operates normally within a 300m (1000ft) range, ensuring stable signal transmission even across multiple rooms.
- **Easy Installation:** No hardwiring, electrical work, or drilling required. Simply plug and play.
- **Customizable Chimes:** Choose from 58 distinct ringtones and 5 adjustable volume levels (0-110dB).
- **Weatherproof Design:** The outdoor push button is IP55 waterproof, designed to withstand rain and extreme temperatures (-20°C to 60°C / -4°F to 140°F).
- **Memory Function:** All settings for volume and chime are saved even after a power outage.

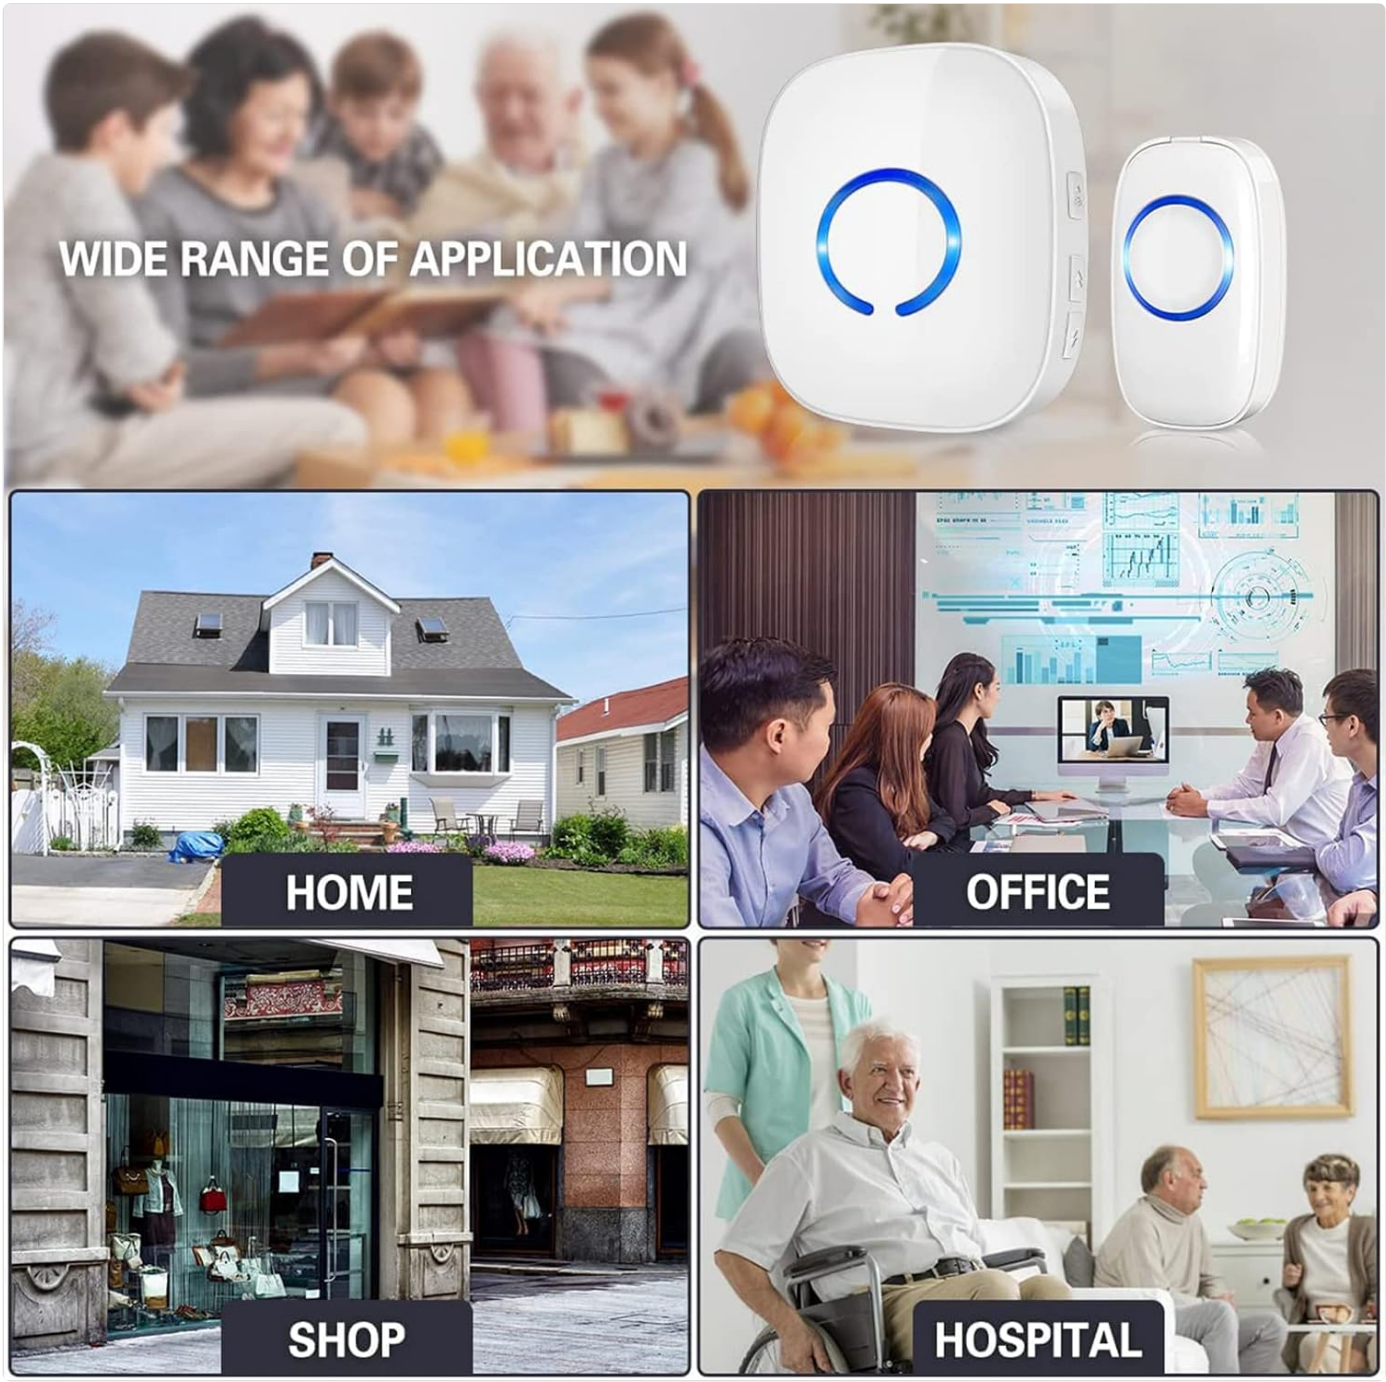


Image: The wireless doorbell kit is suitable for a wide range of applications, including residential homes, offices, retail shops, and hospitals.

Setup and Installation

Follow these steps to install and pair your COTINSE Wireless Doorbell Kit:

1. Physical Installation

1. **Receiver Placement:** Plug each receiver into a standard electrical outlet in your desired locations. Ensure they are within the 300m range of the push button.
2. **Push Button Placement:**
    - Remove the protective strip from the push button's battery compartment (if applicable, for initial activation).
    - Choose a suitable location for the push button, typically near your entrance.
    - Clean the surface thoroughly.

- Attach the push button to the wall using the provided adhesive tape or screws. For adhesive, press firmly for 30 seconds. For screws, mark the positions, drill pilot holes, and secure the button.



Image: The outdoor push button is designed to be weatherproof, featuring IP55 waterproofing and resistance to temperatures from -4°F to 140°F, ensuring durability and a long 3-year battery life.

2. Pairing the Push Button with Receivers

It is recommended to pair the doorbell components before final installation.

1. Plug a receiver into an electrical outlet.
2. Press the "Forward" or "Back" button on the receiver to cycle through and select your desired ringtone.
3. Once the desired ringtone is selected, press and hold both the "Volume" button and the "Back" button simultaneously on the receiver. The receiver will emit a "ding" sound, and its indicator light will flash rapidly. This indicates the receiver is in pairing mode. It will automatically exit pairing mode if no signal is received from the transmitter within 5 seconds.
4. Within 5 seconds of entering pairing mode, quickly press the push button (transmitter). The receiver will play the

selected ringtone, confirming successful pairing.

5. Repeat this process for each additional receiver you wish to pair with the push button. You can program different ringtones for different push buttons if you have multiple.



Image: Labeled diagram of the doorbell receiver and push button, highlighting the LED light, volume control, chime selection buttons, power plug, and speaker.

Operating Instructions

Adjusting Volume

The receiver offers 5 adjustable volume levels, ranging from 0dB (silent) to 110dB. Press the "Volume" button on the receiver repeatedly to cycle through the volume levels until your desired setting is reached. The silent mode will only activate the LED indicator light without sound.



Image: Visual representation of the 5 volume levels (0-110dB) and their application in various settings, from silent for sleeping to loud for parties, ensuring you never miss a visitor or delivery.

Changing Ringtones

To change the ringtone for a specific receiver, press the "Forward" or "Back" button on the receiver to browse through the 58 available melodies. Once you hear a chime you like, it will be set for that receiver. If you wish to change the ringtone for a paired push button, you will need to re-enter pairing mode for that specific receiver and select a new chime before pressing the push button again.



Image: Key features of the doorbell receiver, including IP55 waterproofing, memory function, 58 ringtones, LED display, mute option, and 5 adjustable volume levels.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the push button and receivers. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** The outdoor push button typically has a 3-year battery life. When the push button's LED indicator no longer lights up or the signal becomes weak, it's time to replace the battery. Refer to the push button's design for battery access (usually a small screw or clip on the back). Use the specified battery type (e.g., 12V 23A alkaline battery).
- **Weather Protection:** While the push button is IP55 waterproof, avoid submerging it in water. Ensure the battery compartment is securely sealed after replacement to maintain its waterproof rating.

Troubleshooting

Problem	Possible Cause	Solution
Doorbell does not ring.	• Receiver unplugged or no power. • Push button battery is dead. • Not paired correctly. • Out of range.	• Ensure receiver is plugged in and power outlet is active. • Replace push button battery. • Re-pair the push button and receiver following the "Pairing" instructions. • Move receiver closer to the push button.
Short range or intermittent signal.	• Obstructions (thick walls, metal structures). • Interference from other electronic devices. • Low push button battery.	• Relocate receiver or push button to minimize obstructions. • Ensure doorbell is not too close to other wireless devices. • Replace push button battery. • Check for strong electromagnetic interference sources nearby.
Receiver indicator light flashes but no sound.	Volume set to silent (0dB).	Press the "Volume" button to increase the volume level.

Specifications

Model	4 Receivers + 2 Buttons
Brand	COTINSE
Wireless Range	Up to 300 meters (1000 feet) in open area
Ringtones	58 melodies
Volume Levels	5 levels (0dB to 110dB)
Waterproof Rating (Push Button)	IP55
Operating Temperature	-20°C to 60°C (-4°F to 140°F)
Push Button Battery Life	Approximately 3 years
Control Method	Push Button
Mounting Type	Wall Mount
Package Dimensions	18.7 x 11 x 9.4 cm; 500 grams

Customer Support

For any questions regarding the use, installation, or maintenance of your COTINSE Wireless Doorbell Kit, or if you encounter any product damage, please contact our customer service team. We are committed to providing professional support to ensure your satisfaction.

Please refer to your purchase documentation or the retailer's website for specific contact information.

© 2026 COTINSE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question