Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EUARY XQF-598D-2

EUARY 7.5 Liter Air Fryer XXL User Manual

Model: XQF-598D-2

1. Introduction

Thank you for choosing the EUARY 7.5 Liter Air Fryer XXL. This appliance is designed to cook your favorite foods with little to no oil, providing a healthier alternative to traditional frying methods. Utilizing 360° hot air circulation, it cooks food efficiently and evenly, often up to four times faster than a conventional oven, while reducing fat content by up to 85%.
This manual provides essential information for the safe and effective use of your air fryer. Please read it thoroughly before first use and keep it for future reference.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

3. Package Contents

Upon unpacking, please ensure all items are present and in good condition:

- EUARY 7.5 Liter Air Fryer XXL Unit
- Removable Frying Basket
- User Manual (this document)
- Recipe Book (32 recipes in multiple languages)
- Silicone-tipped Tongs



Image: The EUARY Air Fryer unit, showing its dimensions, alongside the included user guide, recipe book, and silicone-tipped tongs.

4. Product Overview

The EUARY Air Fryer features a sleek design with a user-friendly LED touch screen interface. Its 7.5-liter square

basket maximizes cooking space, allowing for larger portions compared to traditional round baskets.



Image: Front view of the EUARY Air Fryer with its cooking basket partially open, revealing a batch of golden-brown fries. A recipe book is visible next to the unit.

Key Features:

- **Visible Window and Internal Light:** Monitor cooking progress without opening the basket, preserving heat and ensuring consistent results.
- **Large Capacity:** 7.5-liter capacity suitable for 6-10 portions, optimizing countertop space.
- **Efficient Cooking:** 1700W power for rapid heating and cooking.
- **LED Touch Screen:** Intuitive digital interface for easy control.
- **Square Basket Design:** Maximizes cooking area for more food.



Image: A visual comparison illustrating how the square basket design of the EUARY Air Fryer offers more usable cooking space than a traditional round basket, demonstrated with four pieces of food.



Image: The EUARY Air Fryer positioned next to a standard microwave oven, demonstrating its relative size and compact footprint on a kitchen countertop.

5. Initial Setup

1. **Unpack:** Carefully remove all packaging materials and check for any damage.
2. **Clean:** Before first use, clean the frying basket and any removable parts with warm soapy water. Wipe the

main unit with a damp cloth. Ensure all parts are completely dry before assembly.

3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **First Use (Burn-in):** It is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) before cooking food for the first time. This helps to eliminate any manufacturing odors. A slight odor or smoke may be present during this initial use; this is normal. Ensure the area is well-ventilated.

6. Operating Instructions

Control Panel Overview:



Image: A detailed view of the air fryer's LED touch screen, showing various icons for pre-set programs, temperature and time adjustments, and the preheat and illumination buttons.

Basic Operation:

1. **Plug In:** Connect the power cord to a grounded wall outlet. The display will illuminate.

2. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
3. **Insert Basket:** Slide the frying basket firmly back into the air fryer until it clicks into place. The appliance will not operate if the basket is not correctly inserted.
4. **Power On:** Press the Power button to turn on the appliance.
5. **Select Program or Manual Settings:**
    - **Pre-set Programs:** The air fryer features 17 pre-configured programs for various food types. Select the desired program by tapping the corresponding icon on the touch screen. The default time and temperature for that program will be displayed.
    - **Manual Settings:** Alternatively, you can manually set the temperature and time. Use the temperature adjustment buttons (80°C to 200°C) and time adjustment buttons (0 to 60 minutes) to customize your cooking.
6. **Preheat (Optional):** For best results, some recipes may require preheating. Press the "Preheat" button if desired.
7. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
8. **Monitor Cooking:** Use the visible window and internal illumination button to check on your food without opening the basket.
9. **Shake/Flip Reminder:** For certain programs or longer cooking times, the air fryer may beep to remind you to shake or flip the food for even browning. Pull out the basket, shake/flip, and reinsert. The cooking will resume automatically.
10. **End of Cooking:** Once the timer reaches zero, the air fryer will beep and automatically shut off. Carefully pull out the basket and transfer the cooked food to a plate.



Image: A hand using silicone-tipped tongs to carefully remove cooked food, including fries and nuggets, from the air fryer basket.



Image: A visual demonstrating the efficiency of the air fryer, showing a whole chicken cooking in 50-60 minutes compared to 1 hour 25 minutes - 1 hour 40 minutes in a traditional oven.

7. Cooking Tips

- **Oil Usage:** While the air fryer cooks without oil, a small amount of oil (1-2 tablespoons) can be added to some foods to enhance crispiness and flavor.
- **Even Cooking:** For best results, shake the basket or flip food halfway through the cooking process, especially for smaller items like fries or nuggets.
- **Batch Cooking:** If cooking large quantities, cook in smaller batches to ensure even air circulation and crispiness.
- **Frozen Foods:** Most frozen foods can be cooked directly in the air fryer. Refer to the food packaging for recommended temperatures and times, or use a pre-set program.
- **Baking:** The air fryer can also be used for baking small cakes, muffins, or other baked goods. Use oven-safe bakeware that fits inside the basket.



Image: A side-by-side comparison showing traditional deep-fried french fries on the left, submerged in oil, and air-fried french fries on the right, appearing golden and crispy without excess oil.

Recipe Book:

The included recipe book contains 32 recipes in multiple languages to help you get started and explore various dishes suitable for your air fryer.

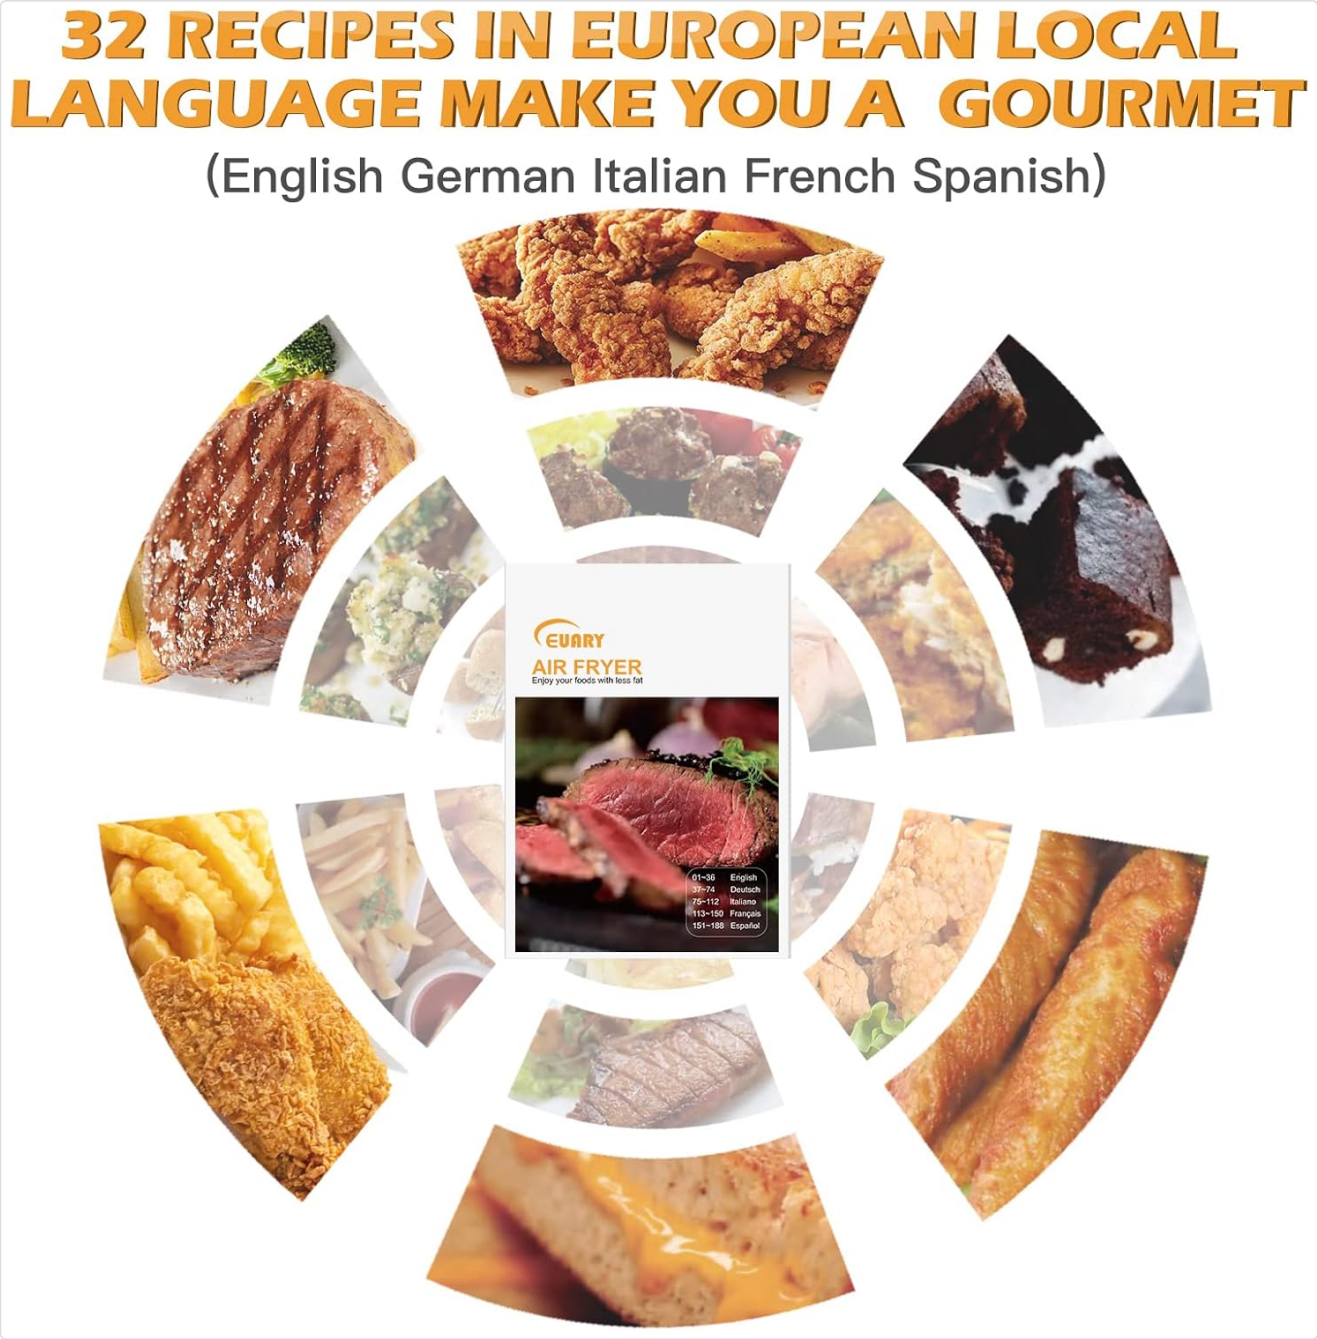


Image: The cover of the EUARY Air Fryer recipe book, featuring a cooked steak and indicating content in English, German, Italian, French, and Spanish.

8. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Basket and Pan:** The frying basket and pan are non-stick and can be cleaned with warm soapy water and a non-abrasive sponge. They are also dishwasher safe. Ensure no water gets trapped between the visible window panels during washing.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Clean Heating Element:** Gently clean the heating element with a cleaning brush to remove any food residue.
5. **Clean Exterior:** Wipe the exterior with a damp cloth.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Image: The removable air fryer basket being rinsed with water, illustrating the ease of cleaning.

9. Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Basket not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Push the basket firmly into the appliance until it clicks.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.
Food is not crispy.	Too much moisture in food. Not enough oil (for some foods).	Pat food dry before air frying. Lightly brush or spray food with a small amount of oil.
White smoke coming from appliance.	Fat residue from previous use. High-fat food being cooked.	Clean the basket and heating element thoroughly after each use. For high-fat foods, place a piece of aluminum foil at the bottom of the basket to catch excess oil.
Appliance smells like plastic during first use.	Normal for new appliances.	Run the air fryer empty for 10-15 minutes at 200°C (390°F) in a well-ventilated area before first use.

10. Specifications

- **Brand:** EUARY
- **Model:** XQF-598D-2
- **Capacity:** 7.5 Liters
- **Power:** 1700 Watts
- **Voltage:** 220 Volts
- **Temperature Range:** 80°C - 200°C (176°F - 390°F)
- **Timer Range:** 0 - 60 minutes
- **Material:** Aluminum, Plastic
- **Color:** Black
- **Product Dimensions:** 28.97 x 39.66 x 32.85 cm (Width x Depth x Height)

- **Item Weight:** 6.58 Kilograms
- **Special Features:** Temperature Control, Programmable, Visible Window, Internal Illumination

11. Warranty and Support

The EUARY Air Fryer comes with a 2-year product warranty and a 5-year repairability guarantee. For any questions regarding your product, please do not hesitate to contact EUARY customer support. Contact information can typically be found on the EUARY official website or through your purchase platform.
Please retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question