AEG FSK53617Z

AEG FSK53617Z Dishwasher User Manual

Model: FSK53617Z

Introduction

This user manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your new AEG FSK53617Z fully integrated dishwasher. Please read this manual carefully before using the appliance to ensure safe and efficient operation.

Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. Keep this manual for future reference.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher during operation.
- Only use detergents and rinse aids specifically designed for dishwashers.

Setup and Installation

The AEG FSK53617Z is a fully integrated dishwasher designed for built-in installation. Proper installation is crucial for optimal performance and safety.

Dimensions and Placement

Refer to the diagram below for detailed dimensions and installation requirements. The appliance dimensions are approximately 55 x 60 x 81.8 cm (L x W x H) and it weighs 39.6 kg. It is designed for a worktop height of 85-91 cm.

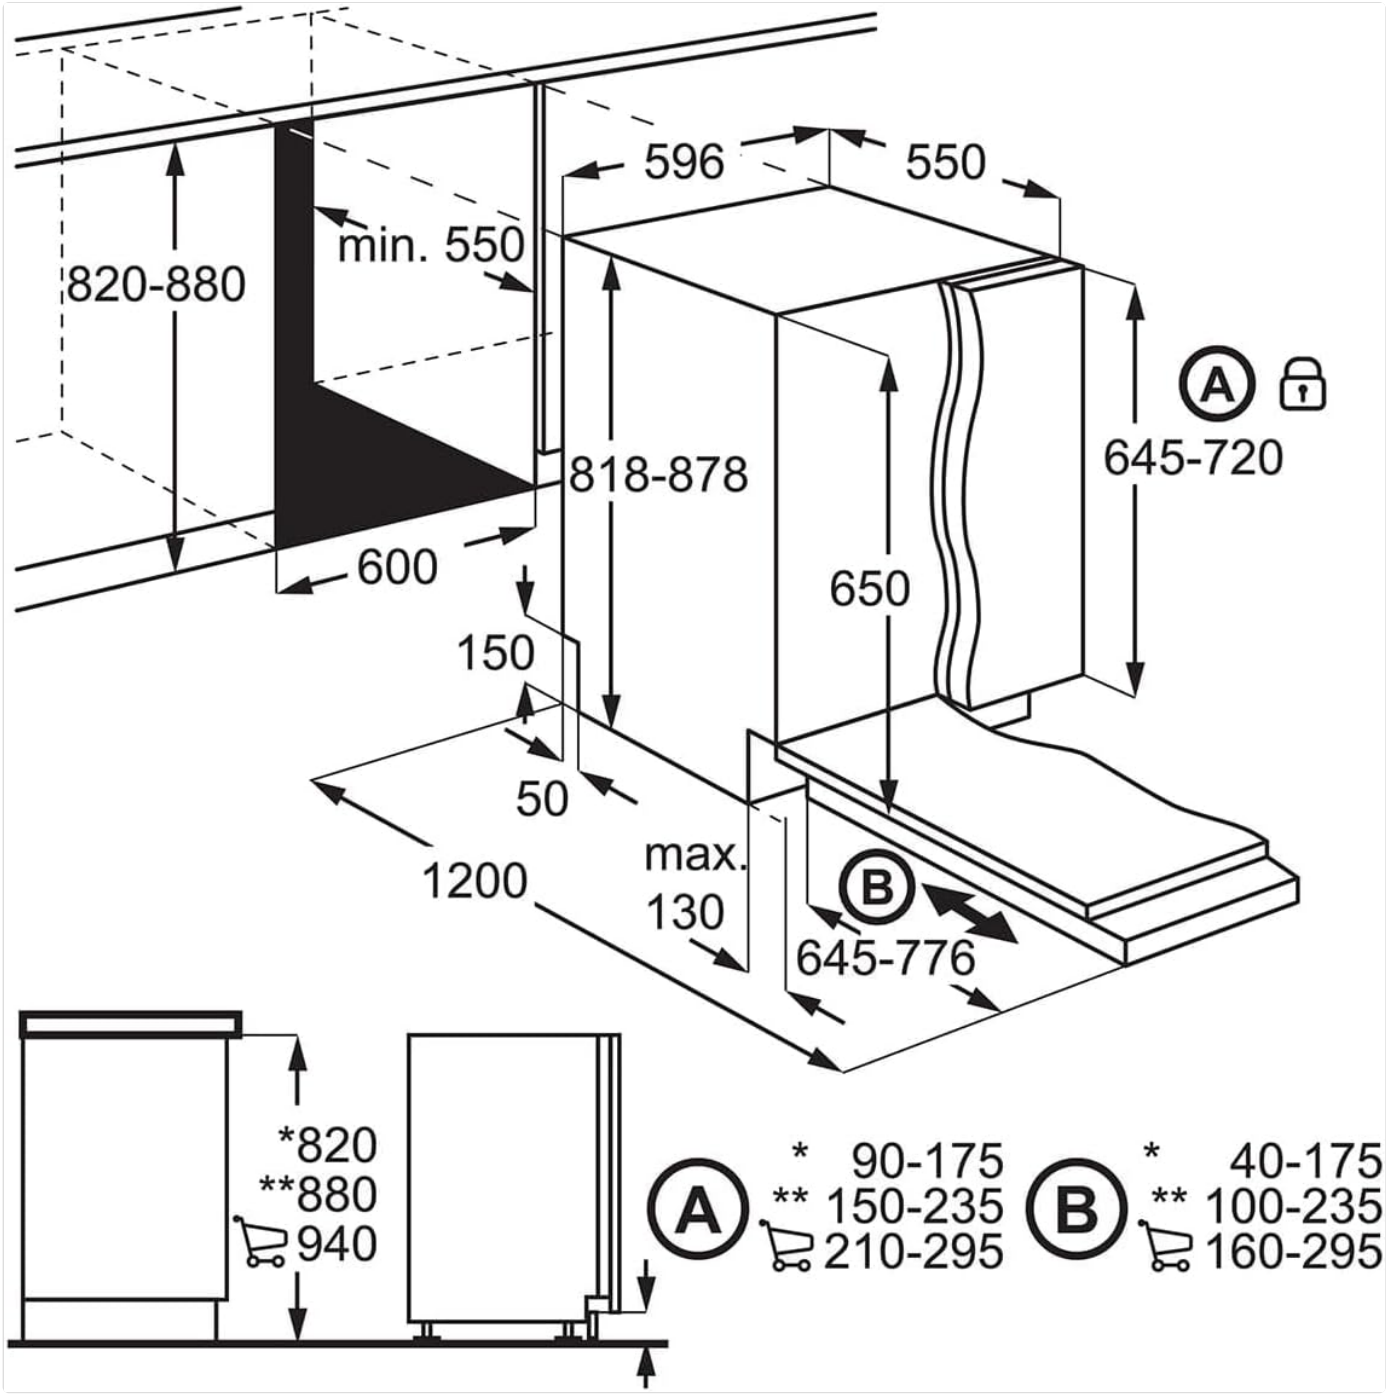


Figure 1: Installation dimensions for the AEG FSK53617Z dishwasher. This diagram illustrates the required cabinet space and clearances for proper integration.

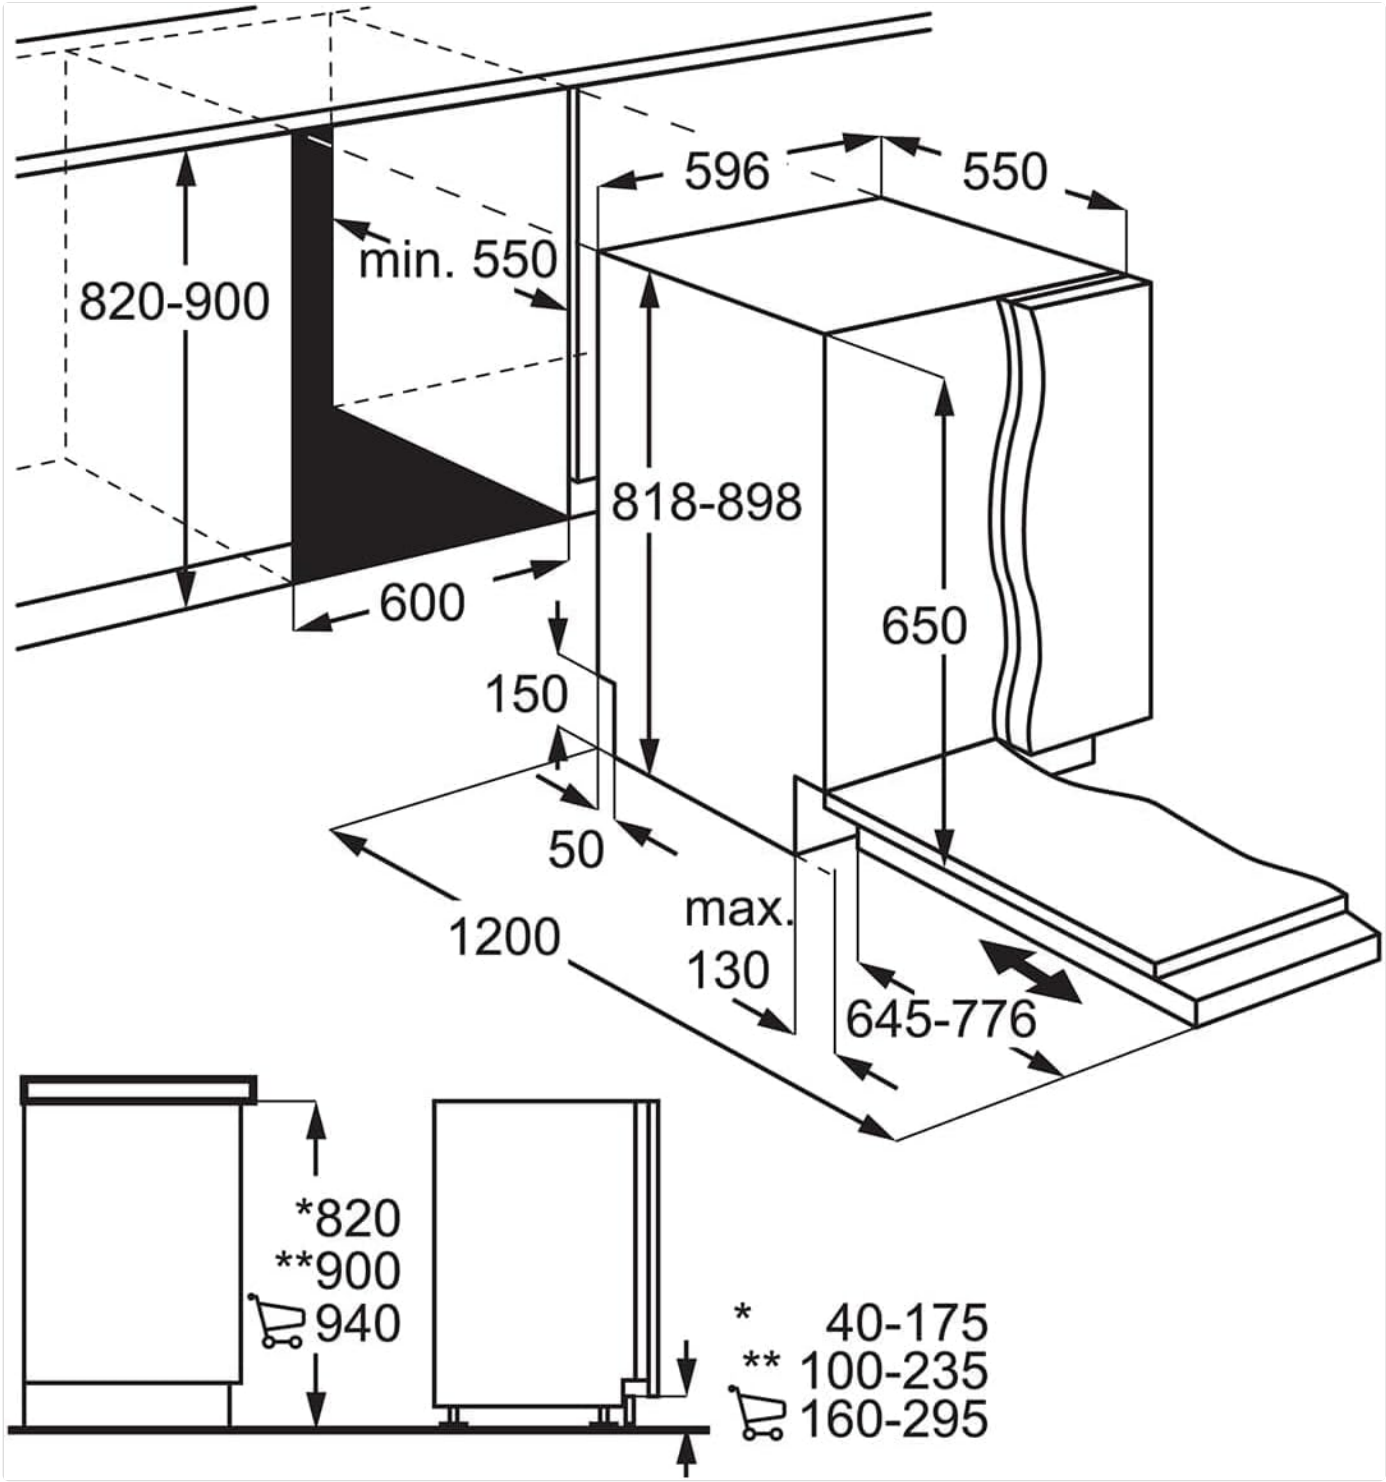


Figure 2: Additional installation dimension diagram, providing further details for cabinet integration.

Connecting the Appliance

Ensure all water inlet and outlet hoses are securely connected and free from kinks. The appliance operates on 230 Volts.



Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Figure 3: Rear view of the AEG FSK53617Z dishwasher, showing the water inlet and drain hoses, and electrical connection point. Ensure these are properly connected during installation.

Operating Instructions

This section guides you through the daily operation of your AEG dishwasher.

Control Panel Overview

The dishwasher features a basic push-button control panel. Familiarize yourself with the buttons and indicators.

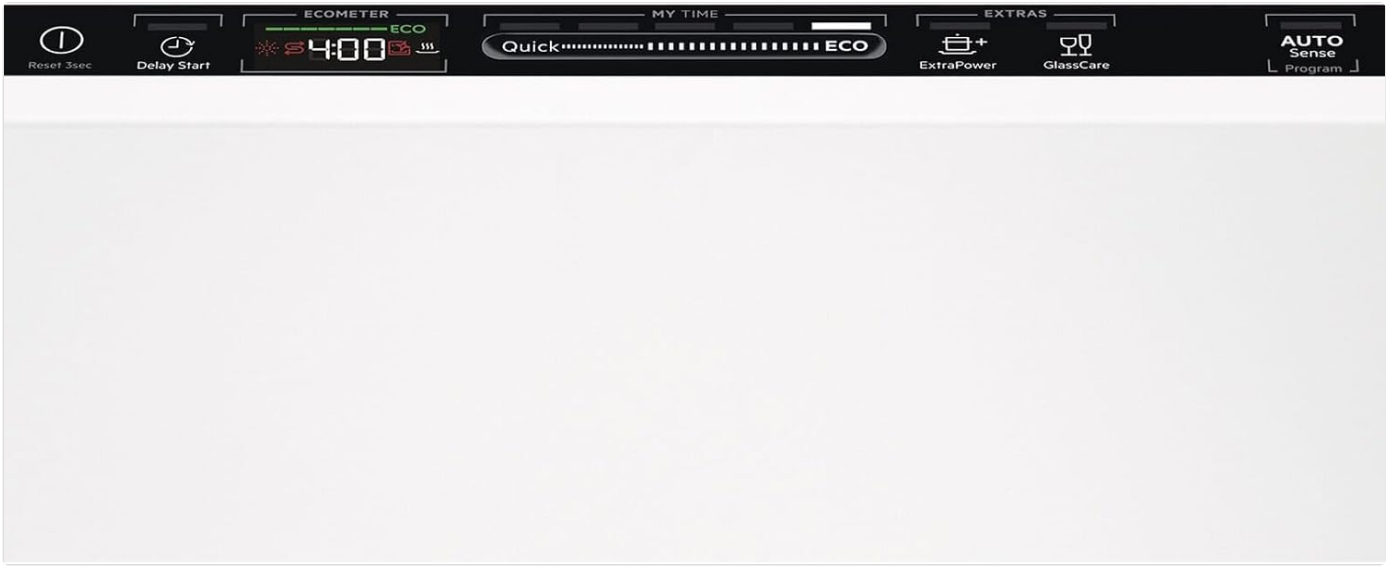


Figure 4: Close-up view of the control panel, displaying program options such as ECO, Quick, ExtraPower, GlassCare, and Auto Sense. It also shows the delay start and reset functions.

Loading the Dishwasher

Proper loading ensures optimal cleaning results. Place larger items in the lower basket and delicate items in the upper basket. Ensure spray arms can rotate freely.



Figure 5: Interior view of the dishwasher, showing the lower rack, upper rack, and the central spray arm. This image helps visualize how to load dishes effectively.

Program Selection

The dishwasher offers 5 cycle options and 7 settings. Recommended uses include everyday dishes and glassware. Available cycle options include:

- **Normal:** For regularly soiled dishes.
- **Intensive:** For heavily soiled pots and pans.
- **Quick Wash:** For lightly soiled items needing a fast clean.
- **Heavy:** For very dirty loads.
- **Delicate:** For sensitive items like glassware.

Special features include an extra drying function and fully integrated towing door technology.

Maintenance and Care

Regular maintenance ensures the longevity and efficiency of your dishwasher.

Cleaning the Filters

The dishwasher filter system should be cleaned regularly to prevent blockages and ensure proper drainage. Remove the filter assembly and rinse it under running water.



Figure 6: Illustration of cleaning the dishwasher filter. The filter components are shown being rinsed under a faucet, demonstrating the ease of maintenance.

Adding Salt and Rinse Aid

The dishwasher comes with a user manual and a salt filling funnel. Ensure you regularly check and refill the salt and rinse

aid dispensers as needed for optimal washing and drying performance.

Troubleshooting

If your dishwasher is not functioning correctly, refer to the following common issues and solutions before contacting service.

- **Dishes not clean:** Check filter, spray arms, and ensure proper loading.
- **Water not draining:** Inspect drain hose for kinks and clean the filter.
- **Dishwasher not starting:** Ensure door is fully closed and power supply is connected.
- **Excessive noise:** Check for foreign objects in the pump area or loose items in the racks.

For more complex issues, please contact AEG customer support.

Technical Specifications

Feature	Specification
Model Name	FSK53617Z
Brand	AEG
Installation Type	Integrated
Dimensions (L x W x H)	55 x 60 x 81.8 cm
Weight	39.6 kg
Voltage	230 Volts
Noise Level	48 dB
Number of Settings	7
Cycle Options	5 (Normal, Intensive, Quick Wash, Heavy, Delicate)
Control Type	Push-button
Material	Stainless Steel
Special Features	Extra drying function, Fully integrated towing door technology
Included Components	User manual, Salt filling funnel

Warranty Information

Specific warranty details are typically provided with your purchase documentation. Please refer to the warranty card or contact your retailer for information regarding the warranty period and terms for your AEG FSK53617Z dishwasher.

Customer Support

For technical assistance, spare parts, or service requests, please visit the official AEG website or contact their customer service department. You can often find support contact information on the manufacturer's website or in your purchase

documents.
Visit the AEG Store on Amazon for more product information.

© 2024 AEG. All rights reserved.