Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Miko My Companion Miko 3

Miko 3 AI Robot for Kids - Educational and Interactive Learning Companion

Brand: Miko My Companion | **Model:** Miko 3

Introduction

The Miko 3 AI Robot is designed to engage children aged 5-10 in STEAM learning, emotional development, and interactive play. Featuring a built-in touchscreen, Miko 3 offers a comprehensive platform for educational content, games, and activities without requiring additional devices.



Image: Front view of the Miko 3 AI Robot in Martian Red, showcasing its screen and compact design.

Setup Guide

1. **Unboxing:** Carefully remove Miko 3 from its packaging. Ensure all components, including the charging cable, are present.
2. **Initial Charge:** Connect Miko 3 to a power source using the provided charging cable. Allow approximately 4 hours for a full charge. The robot indicates charging status on its screen.
3. **Power On:** Press and hold the power button (located on the back of Miko's head) until the screen illuminates and the Miko logo appears.
4. **Wi-Fi Connection:** Follow the on-screen prompts to connect Miko 3 to a stable Wi-Fi network. A strong connection is essential for content updates and interactive features.
5. **Miko App Setup:** Download the Miko App on a parent's smartphone. Create an account and pair the Miko 3 robot with the app. This allows for parental controls, content customization, and progress monitoring.

6. **Personalization:** Complete the initial setup by entering your child's name and preferences. Miko 3 uses deep-learning AI to adapt to individual interests over time.



Image: A child sitting at a table, interacting with the Miko 3 AI Robot, which displays a friendly face on its screen.

Operating Instructions

Miko 3 offers various modes of interaction and content. The touchscreen interface and voice commands are primary methods for navigation.

1. Interactive Learning & Play

- **Voice Commands:** Speak clearly to Miko 3 to ask questions, initiate games, or request stories. Miko's AI is designed to understand and respond.
- **Touchscreen Navigation:** Swipe and tap the screen to browse through available apps, games, and content categories.

- **Story Maker:** Engage in co-creative storytelling with Miko. These stories can be saved and revisited.
- **STEAM Content:** Access educational modules covering science, technology, engineering, arts, and mathematics.
- **Movement-Based Games:** Participate in activities like yoga, dance, and other movement games that encourage physical activity. Miko 3 can track movements for interactive play.



Image: A child and an adult smiling while looking at the Miko 3 AI Robot, which displays a storybook image on its screen, illustrating the Story Maker feature.

2. Parental Controls (via Miko App)

- **Content Customization:** Select age-appropriate content and manage access to various apps and features.
- **Progress Monitoring:** Track your child's learning progress and engagement with different activities.
- **Screen Time Management:** Set daily limits and schedule breaks to promote balanced usage.
- **Video Calls:** Utilize the Miko App for secure video calls with your child through Miko 3.

Image: A family sitting on a couch, with a child interacting with the Miko 3 AI Robot, demonstrating the family-friendly and safe environment.

3. Miko Max Subscription

Miko Max is an optional subscription service that unlocks over 30 premium apps, games, and learning experiences. A 30-day free trial is typically available, followed by a flexible one-year plan managed through the Miko App.

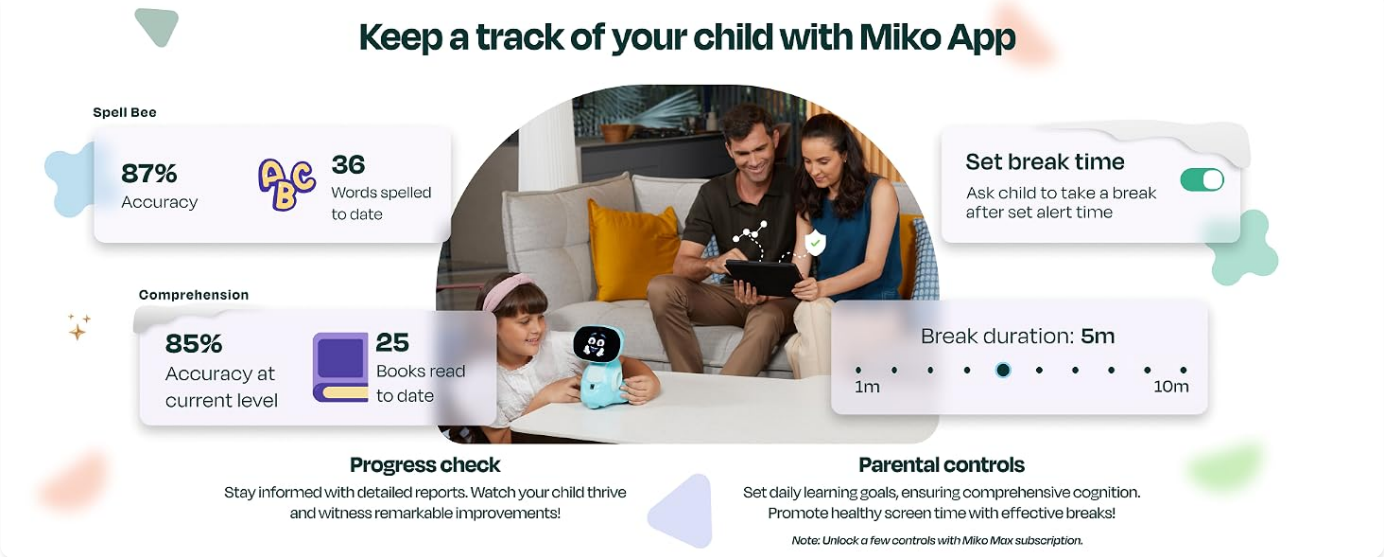


Image: Miko 3 AI Robot with a collage of various educational and entertainment app icons, highlighting the Miko Max content.

Maintenance

- **Charging:** Recharge Miko 3 when the battery indicator is low. A full charge provides approximately 6-7 hours of active play. Use the provided 15W adapter for optimal charging.
- **Cleaning:** Use a soft, dry cloth to clean the exterior of Miko 3 and its touchscreen. Avoid abrasive cleaners or liquids that could damage the device.
- **Software Updates:** Ensure Miko 3 is connected to Wi-Fi to receive automatic software updates, which provide new features and performance improvements.
- **Storage:** When not in use for extended periods, store Miko 3 in a cool, dry place.

Troubleshooting

Issue	Possible Cause	Solution
Miko 3 does not power on.	Low battery or power button not pressed correctly.	Charge Miko 3 for at least 30 minutes. Press and hold the power button for 5-10 seconds.
Cannot connect to Wi-Fi.	Incorrect password, weak signal, or network issue.	Double-check Wi-Fi password. Move Miko closer to the router. Restart Miko and the router.
Miko is unresponsive or frozen.	Software glitch or temporary error.	Perform a soft reset by holding the power button until it turns off, then restart.

Issue	Possible Cause	Solution
Poor battery life.	Frequent use, background apps, or aging battery.	Ensure Miko is fully charged. Close unused applications. Utilize sleep mode or power-off options when not in use.

Specifications

- **Product Dimensions:** 7.48 x 6.67 x 9.8 inches
- **Item Weight:** 3.87 pounds
- **Item Model Number:** Miko 3
- **Manufacturer Recommended Age:** 5 - 12 years
- **Batteries:** 1 Lithium Ion battery required (included)
- **Battery Life:** Approximately 6-7 hours of play on a full charge (with 15W adapter charging time of ~4 hours)
- **Safety Certification:** kidSAFE COPPA+ certified

Official Product Videos

Miko 3 AI Powered Smart Robot Honest Review

Your browser does not support the video tag.

Video: A detailed review of the Miko 3 AI Robot, showcasing its features and user experience. Creator: Hey It's David (Seller).

Why We Love Miko 3! Watch Before You Buy!

Your browser does not support the video tag.

Video: An overview highlighting the benefits and features of the Miko 3 AI Robot. Creator: FashionAveMom (Seller).

Worth It? Why We Love This Smart Learning Pal!

Your browser does not support the video tag.

Video: A review discussing the value and features of the Miko 3 AI Robot as a learning companion. Creator: Jade's A Natural (Seller).

Warranty and Support

For warranty information, technical support, or service inquiries, please refer to the official Miko My Companion website or contact their customer service directly. Details can typically be found in the product packaging or on the manufacturer's website.

Miko 3 is KidSAFE COPPA+ Certified, ensuring a secure and child-safe experience. The Miko App provides parents with tools to manage content and monitor usage.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09RWT3JK5

More documents and user manuals: **https://manuals.plus/**