Faber HOOD MIRROR PLUS BK TC LTW 90

Faber Wall Mounted Chimney User Manual

Model: HOOD MIRROR PLUS BK TC LTW 90

Brand: Faber

1. Introduction

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Faber HOOD MIRROR PLUS BK TC LTW 90 Wall Mounted Chimney. Please read this manual thoroughly before using the appliance and keep it for future reference.

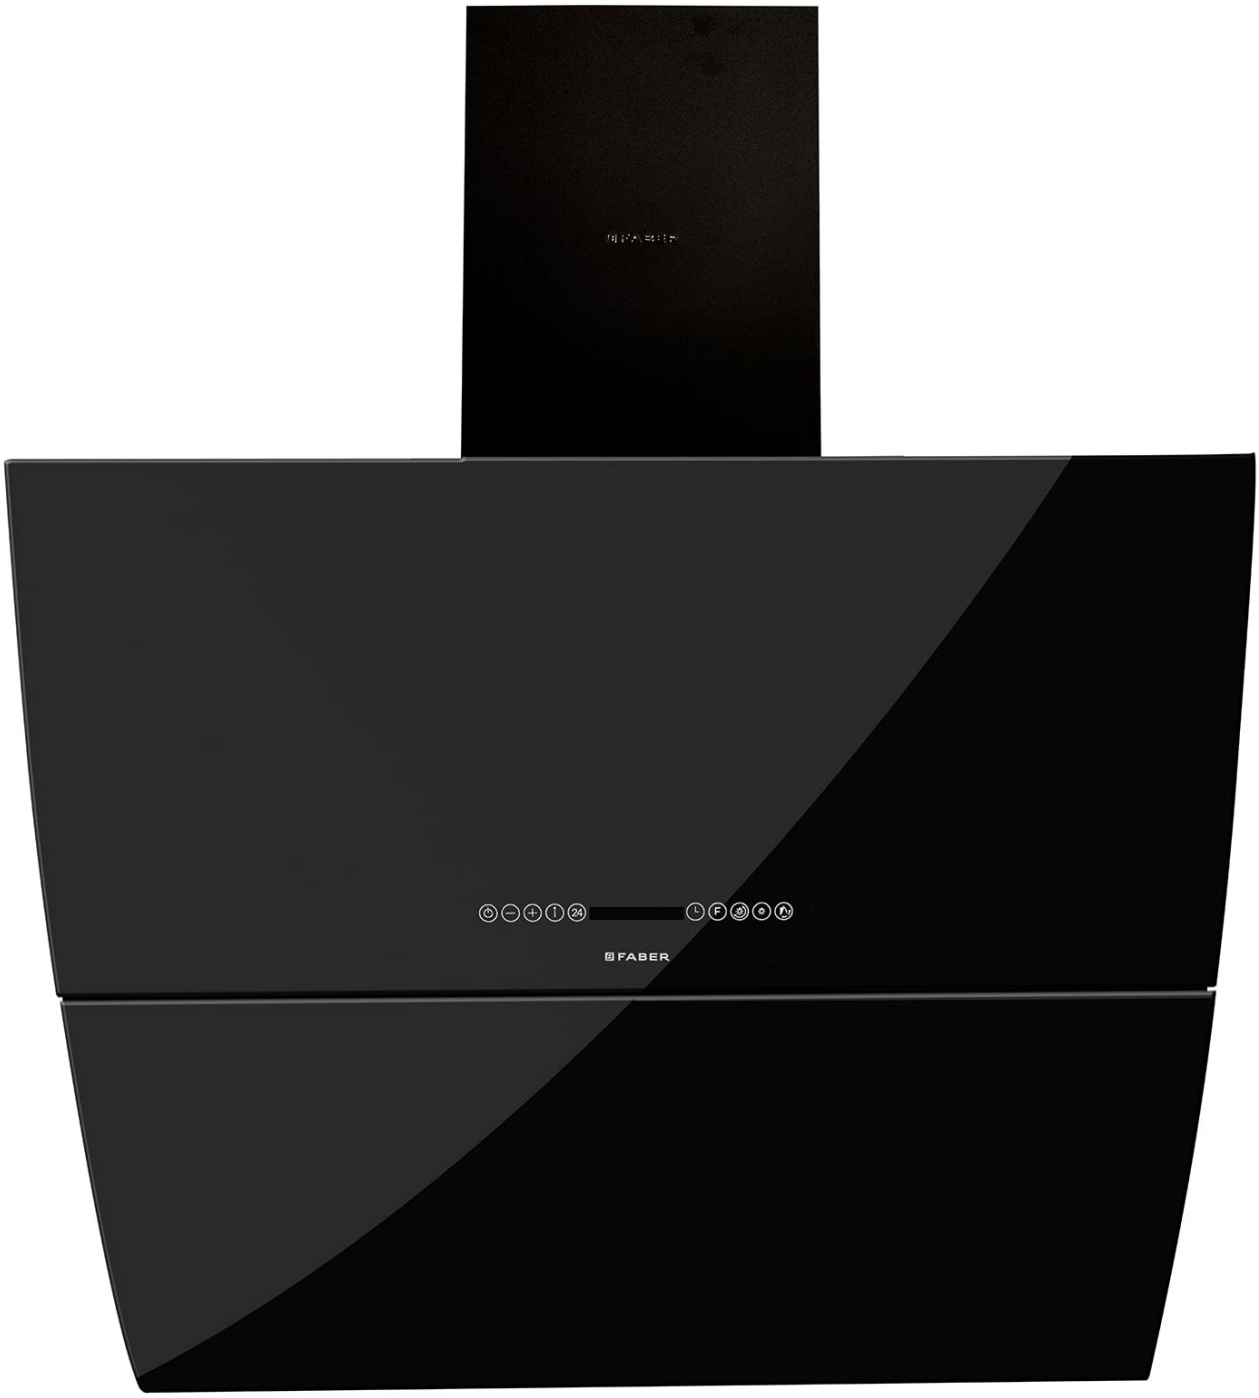


Figure 1.1: Front view of the Faber HOOD MIRROR PLUS BK TC LTW 90 Wall Mounted Chimney. This image shows the sleek black finish and the overall angular design of the chimney.

The Faber HOOD MIRROR PLUS BK TC LTW 90 is designed to effectively remove smoke and oil particles from your kitchen, ensuring a clean and fresh cooking environment. It features a powerful 1000 m3/hr suction capacity and convenient touch controls.

2. Safety Information

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Ensure the chimney is installed by a qualified technician.
- Do not operate the chimney without the filters properly installed.
- Regularly clean the filters to maintain optimal performance and prevent fire hazards.
- Do not flambé under the range hood.
- Keep children away from the appliance during operation.
- Disconnect power before performing any maintenance or cleaning.
- Ensure adequate ventilation in the room when the range hood is used simultaneously with appliances burning gas or other fuels.

3. What's in the Box

Upon unpacking, please verify that all components are present and undamaged:

- 1 x Faber Wall Mounted Chimney Unit
- 1 x User Manual

4. Setup and Installation

The Faber HOOD MIRROR PLUS BK TC LTW 90 is a wall-mounted chimney designed for kitchens with 2-4 burner stoves. Professional installation is highly recommended to ensure proper functioning and safety.



Figure 4.1: Side profile of the chimney, illustrating its wall-mounted design. This view highlights the depth and angle of the unit, crucial for installation planning.

4.1 Pre-Installation Checks

- Verify the wall structure can support the chimney's weight (17 kg).
- Ensure a suitable power outlet (220V) is available near the installation area.
- Confirm adequate space for ducting (if applicable for ducted installation, though the product description mentions "Ductless/Recirculating" as a ventilation type, it's common for chimneys to support both).

4.2 Mounting Guidelines

The chimney should be mounted at an appropriate height above the cooking surface, typically between 65-75 cm, to

ensure effective smoke extraction without obstructing cooking. Refer to the detailed installation diagram provided by the manufacturer (not included in this manual) for precise measurements and drilling points.

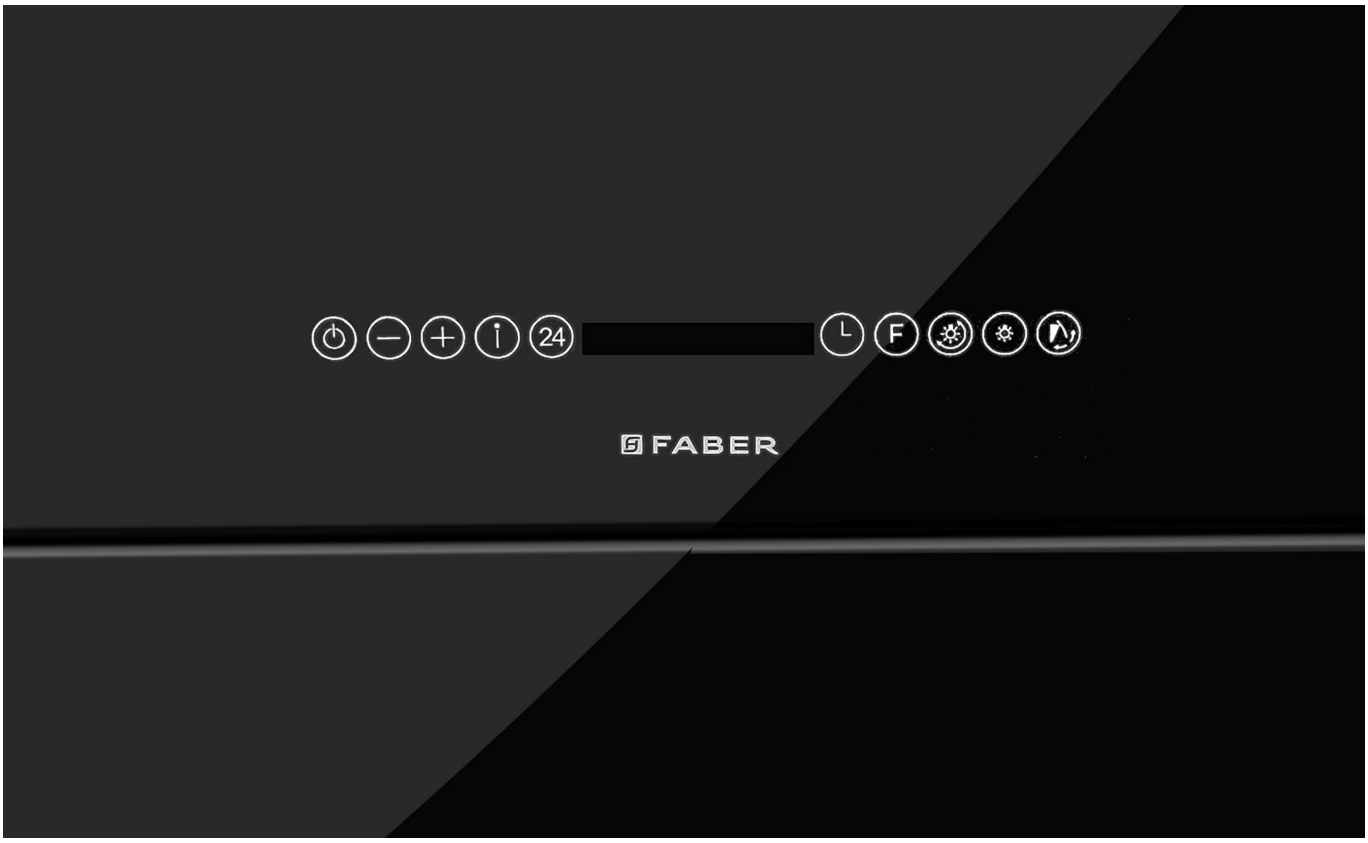


Figure 4.2: Another perspective of the chimney's side, emphasizing its compact design and how it would sit against a wall. This view helps visualize the space it occupies.

5. Operating Instructions

Your Faber chimney is equipped with intuitive touch controls for easy operation.



Figure 5.1: Detailed view of the touch control panel. The panel features clearly marked icons for power, fan speed adjustment, light control, and timer functions.

5.1 Power On/Off

Press the **Power** button (usually indicated by a circle with a vertical line) on the touch panel to turn the chimney on or off.

5.2 Adjusting Suction Speed

Use the **'+'** and **'-'** buttons to increase or decrease the suction speed. The chimney offers multiple speed settings to suit different cooking needs, with a maximum suction capacity of 1000 m3/hr.

5.3 Lighting Control

Press the **Light** button (often indicated by a light bulb icon) to turn the integrated 4x Spot LED lights on or off. These lights provide illumination over your cooking area.

5.4 Timer Function

Some models may include a timer function. Refer to the specific icons on your control panel for timer operation, typically allowing the chimney to run for a set period before automatically shutting off.

6. Maintenance and Cleaning

Regular maintenance is crucial for the longevity and efficient performance of your chimney. Always disconnect the power supply before cleaning.

6.1 Cleaning the Cassette Filters

Your chimney is equipped with cassette filters designed to trap grease. These filters require cleaning fortnightly, or more frequently depending on cooking habits.



Figure 6.1: View of the internal cassette filters and the LED lighting strips. The filters are visible, showing their mesh design, and the LED lights are positioned to illuminate the cooking surface.

1. Remove the filters by pulling the release latches.
2. Wash the filters with warm, soapy water or in a dishwasher. For stubborn grease, a degreasing agent can be used.
3. Rinse thoroughly and allow them to dry completely before re-installing.

6.2 Cleaning the Exterior

Wipe the exterior surfaces of the chimney with a soft cloth dampened with mild detergent. Avoid abrasive cleaners or scouring pads, as they can damage the finish.

6.3 LED Lamp Replacement

The chimney uses 4x Spot LED lamps. If a lamp needs replacement, contact authorized service personnel. Do not attempt to replace them yourself unless specifically instructed by the manufacturer.

7. Troubleshooting

Before contacting customer service, please refer to the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Chimney not turning on.	No power supply; loose connection; faulty switch.	Check power cord and circuit breaker. Ensure proper connection. Contact service if switch is faulty.
Low suction power.	Clogged filters; improper installation; motor issue.	Clean filters thoroughly. Verify installation. Contact service if motor is suspected.
Excessive noise during operation.	Loose parts; motor imbalance; clogged filters.	Check for loose components. Clean filters. Contact service for motor issues.
LED lights not working.	Faulty lamp; wiring issue.	Contact authorized service for lamp replacement or wiring inspection.

If the problem persists after attempting these solutions, please contact Faber customer support.

8. Specifications

Feature	Detail
Model	HOOD MIRROR PLUS BK TC LTW 90
Brand	Faber
Mounting Type	Wall Mount
Suction Capacity	1000 m3/hr
Control Type	Touch Control
Filter Type	Cassette Filter (Mesh)
Noise Level	59 dB
Lighting	4x Spot LED (1.1W each)
Material	Aluminium
Item Weight	17 Kilograms
Voltage	220V
Dimensions (LxWxH)	60 x 90 x 70 Centimeters (approximate, based on product info)
Annual Energy Consumption	180 Kilowatt Hours Per Year

9. Warranty and Support

9.1 Product Warranty

Your Faber HOOD MIRROR PLUS BK TC LTW 90 chimney comes with a comprehensive warranty:

- **1 year** on the product
- **12 years** on the motor

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects and does not cover damage due to improper installation, misuse, or lack of maintenance.

9.2 Customer Support

For any queries, technical assistance, or service requests, please contact Faber customer support:

- **Manufacturer:** Franke Faber India Pvt Ltd
- **Contact Number:** 1800-209-3484
- **Address:** 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA

You can also visit the official Faber Store on Amazon for more product information and support resources.

© 2025 Faber. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question