Ninja SS151

Ninja SS151 TWISTi Blender DUO User Manual

Model: SS151 | Brand: Ninja

Introduction

The Ninja TWISTi High-Speed Blender DUO is engineered to deliver exceptionally smooth purees and fine blends. Featuring a powerful 1600 Peak-Watt motor and innovative Hybrid-Edge high-speed blades, it handles tough ingredients with ease, eliminating the need for stalling, stirring, or shaking. Its unique built-in Twist Tamper actively pushes ingredients down towards the blades, ensuring consistent and thick results, ideal for creations like smoothie bowls and nut butters.



Figure 1: The Ninja SS151 TWISTi Blender DUO, showcasing the main blender pitcher, motor base, and two portable to-go cups. The pitcher is filled with berries and the to-go cup with a green smoothie, demonstrating its versatility.

Setup and Assembly

Before first use, ensure all components are clean. The Ninja TWISTi Blender DUO comes with a 1600 Peak-Watt Motor Base, a 34 Oz. Power Pitcher, and two Single Serve Cups (24 Oz. and 18 Oz.) with lids. The Hybrid-Edge Blades Assembly is designed for easy attachment.

Initial Cleaning

- Wash all containers, lids, and blade assemblies with warm, soapy water before initial use.
- Rinse thoroughly and dry all parts.
- The motor base should be wiped clean with a damp cloth only. Do not immerse the motor base in water.

Assembling the Blender

1. Place the motor base on a clean, dry, and level surface. Ensure the suction cups on the bottom firmly grip the counter for stability.

2. For the Power Pitcher: Place the pitcher onto the motor base, aligning the handle with the front of the base. Twist clockwise until it clicks into place.
3. For Single Serve Cups: Place the desired cup onto the motor base, aligning the tabs on the cup with the slots on the base. Twist clockwise until it locks securely.
4. Attach the Hybrid-Edge Blades Assembly to the bottom of the Power Pitcher or Single Serve Cup by twisting it clockwise until it is tightly sealed.
5. For the Power Pitcher, ensure the lid with the built-in Twist Tamper is securely placed on top and locked into position.



Figure 2: The Ninja SS151 TWISTi Blender DUO set up on a kitchen counter, showing the main pitcher, motor base, and two single-serve cups, ready for use.

Operating Instructions

The Ninja TWISTi Blender DUO offers versatile functions for various blending needs, controlled by its intuitive interface.

Control Panel Overview



Figure 3: Detailed view of the blender's control panel, highlighting the "Start/Stop" and "Pulse" buttons, along with five preset programs: "Extract," "Smoothie," "Frozen" (for drinkable textures), and "Spread," "Bowl" (for spoonable textures).

- **Start/Stop:** Manually start or stop any blending cycle.
- **Pulse:** Provides short bursts of power for chopping or quick blending.
- **Auto-IQ Programs:** Pre-set programs designed for specific textures and ingredients.
    - **Drinkable:**
        - **Extract:** For nutrient extractions from fruits and vegetables.
        - **Smoothie:** For smooth, drinkable smoothies.
        - **Frozen:** For frozen drinks and crushed ice.
    - **Spoonable:**
        - **Spread:** For nut butters and other thick spreads.

- **Bowl:** For thick smoothie bowls.

Using the Twist Tamper (Power Pitcher Only)

The built-in Twist Tamper is crucial for processing thick mixtures like nut butters and smoothie bowls. While blending, continuously twist the tamper counter-clockwise to push ingredients down towards the blades, ensuring no stalling and a perfectly smooth result.



Figure 4: Demonstrating the use of the Twist Tamper to process ingredients for nut butter, ensuring all contents are pushed towards the blades for optimal blending.

Adding Ingredients During Blending (Drizzle Cap)

The removable drizzle cap on the Power Pitcher lid allows you to add liquids or small ingredients while the blender is operating, enabling real-time customization of flavors and textures.

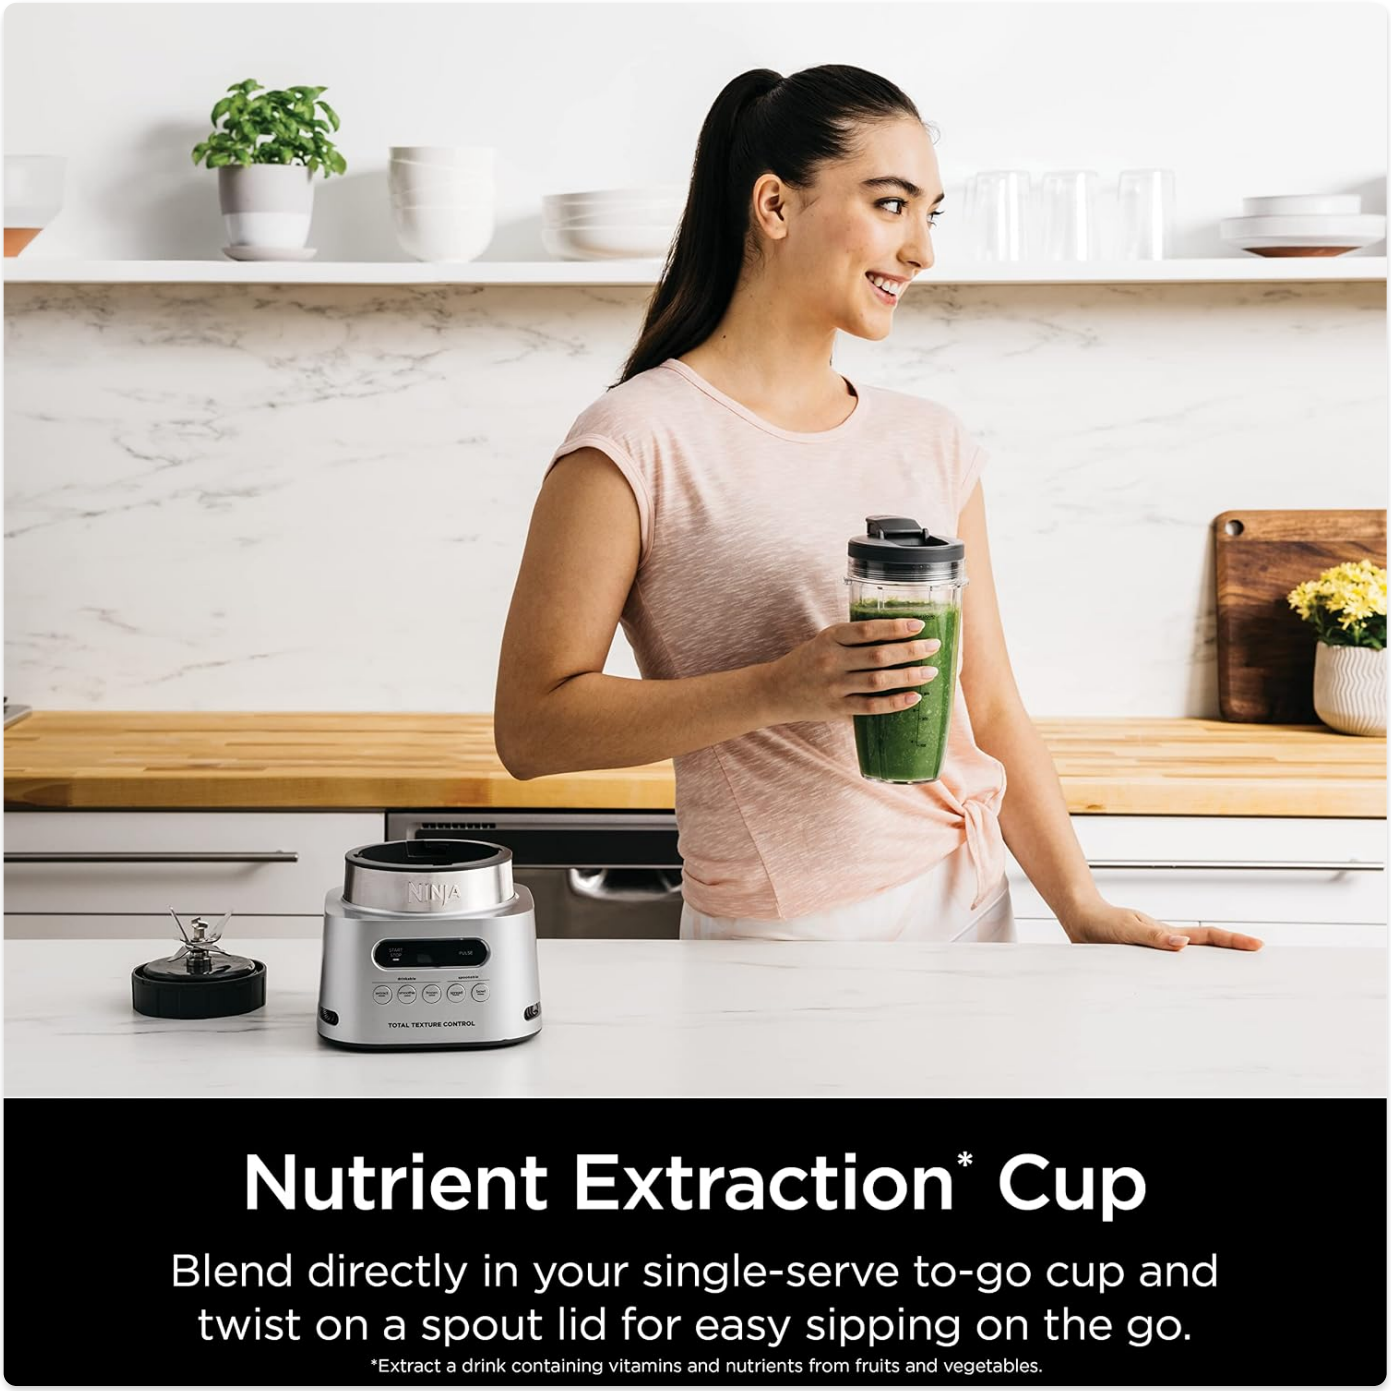


Figure 5: A user adding liquid ingredients through the drizzle cap on the Power Pitcher, allowing for adjustments during the blending process without stopping the machine.

Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your Ninja TWISTi Blender DUO.

Cleaning Instructions

- **Dishwasher Safe Parts:** All containers, lids, and blade assemblies are dishwasher safe. Place them on the top rack for best results.
- **Hand Washing:** For hand washing, use warm, soapy water and a non-abrasive sponge or brush. Exercise caution when handling the sharp blades.
- **Motor Base:** Wipe the motor base clean with a damp cloth. Do not submerge the motor base in water or spray it with water.

- **Stubborn Residue:** For stubborn residue, fill the container with warm water and a drop of dish soap. Run the blender on a low setting for a few seconds, then rinse thoroughly.



Figure 6: Various components of the Ninja TWISTi Blender DUO, including containers, lids, and blade assemblies, placed in a dishwasher rack, illustrating their dishwasher-safe design for convenient cleaning.

Troubleshooting

If you encounter issues with your Ninja TWISTi Blender DUO, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; container/lid not properly assembled.	Ensure unit is plugged into a working outlet. Verify container and lid are securely locked into place.
Ingredients are not blending smoothly.	Too many ingredients; insufficient liquid; ingredients stuck.	Reduce ingredient quantity. Add more liquid. For Power Pitcher, use the Twist Tamper. For cups, shake the cup.
Unit stops during operation.	Overheating due to heavy load.	Unplug the unit and allow it to cool for at least 15 minutes. Reduce load before restarting.
Leaking from container.	Lid or blade assembly not sealed properly.	Ensure lid and blade assembly are twisted on tightly and securely. Do not overfill past MAX FILL line.

Specifications

Feature	Detail
Brand	Ninja
Model Number	SS151
Power Source	Corded Electric
Voltage	120 Volts
Peak Wattage	1600 WP
Capacity (Power Pitcher)	34 Fluid Ounces
Included Components	Motor Base, 34 Oz. Power Pitcher, 24 Oz. Single Serve Cup, 18 Oz. Nutrient Extraction Single Serve Cup, Hybrid-Edge Blades Assembly, Lids, 10-Recipe Inspiration Guide
Special Feature	Dishwasher Safe, Built-in Twist Tamper, Auto-IQ Technology
Material Type Free	BPA Free
Blade Material	Stainless Steel
Product Dimensions	6.5"D x 8.3"W x 13.8"H
Item Weight	7.19 pounds

Feature	Detail
UPC	622356589246

Warranty and Support

The Ninja SS151 TWISTi Blender DUO comes with a Limited Warranty. For specific warranty details, including coverage period and terms, please refer to the warranty information provided in your product packaging or contact Ninja customer support.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please visit the official Ninja website or contact their customer service line. Keep your purchase receipt and product model number (SS151) readily available for faster service.
You can also find additional resources and recipes on the Ninja Store on Amazon.

© 2024 Ninja. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question