Amazon Basics 2804

Amazon Basics Wireless Presenter Model 2804 User Manual

Green Laser with Timer, 2.4GHz, Lithium Battery Operated

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Amazon Basics Wireless Presenter, Model 2804. This device is designed to enhance presentations with its wireless control, green laser pointer, and integrated timer function.

Image: The Amazon Basics Wireless Presenter, a sleek black device with a green laser emitting from the top.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Amazon Basics Wireless Presenter (Model 2804)
- USB Receiver (stored within the presenter)
- User Manual (this document)

SETUP

1. Charging the Presenter

The presenter is equipped with a built-in rechargeable 400mAh lithium battery. Before initial use, or if the battery indicator shows low power, charge the device using a standard USB charging port (e.g., computer USB port, USB wall adapter).

1. Locate the charging port on the side of the presenter.
2. Connect a micro-USB cable (not included) to the charging port and the other end to a power source.
3. The battery indicator on the presenter's display will show charging status.

4. Once fully charged, disconnect the cable.

Effective Presentations
1-touch control

For On/Off, laser pointer, navigation, display modes & battery level

Built-in rechargeable 400 mAh lithium battery

USB plug & play connector (no drivers needed)

Image: Diagram highlighting the built-in rechargeable 400 mAh lithium battery and the USB plug-and-play connector.

2. Connecting the USB Receiver

The wireless presenter uses a 2.4 GHz USB receiver for connection to your computer. The receiver is stored magnetically within the presenter for convenience.

1. Gently pull the USB receiver from its storage slot at the bottom of the presenter.
2. Insert the USB receiver into an available USB port on your computer.
3. The presenter is plug-and-play; no additional drivers are required for most operating systems.

3. Powering On the Presenter

Locate the ON/OFF slider switch on the side of the presenter and slide it to the "ON" position.

OPERATING INSTRUCTIONS

The Amazon Basics Wireless Presenter features intuitive one-touch controls for effective presentation management.

Image: Detailed diagram showing the layout of buttons and features on the wireless presenter, including the ON/OFF slider, battery indicator, timer display, progress bar, previous button, next button, laser button, full screen button, black screen/exit button, set timer button, start/pause button, and charging port.

Button Functions:

- **ON/OFF Slider:** Powers the presenter on or off.
- **Previous Button (<):** Navigates to the previous slide or page.
- **Next Button (>):** Navigates to the next slide or page.
- **Laser Button (Star icon):** Activates the green laser pointer. Release to turn off.
- **Full Screen Button (Play icon):** Initiates or exits full-screen presentation mode.
- **Black Screen/Exit Button (Square icon):** Toggles a black screen during a presentation or exits the presentation.
- **Set Timer Button:** Used to set the presentation timer.
- **Start/Pause Button:** Starts, pauses, or resets the presentation timer.

Using the Timer Function:

The integrated timer helps you manage your presentation time effectively.

1. Press the **Set Timer Button** to enter timer setting mode.
2. Use the **Previous (<)** and **Next (>)** buttons to adjust the desired presentation time.

3. Press the **Set Timer Button** again to confirm the time.

4. Press the **Start/Pause Button** to begin the countdown during your presentation.

5. The presenter may provide vibrational feedback when the timer expires (refer to display for specific indications).

MAINTENANCE

Charging the Battery:

To ensure optimal performance, regularly charge the built-in lithium battery. The battery indicator on the display will show the current charge level. A full charge provides extended use.

Cleaning:

Wipe the presenter with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

Storage:

When not in use, store the USB receiver inside the presenter's magnetic slot to prevent loss. Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Presenter not responding.	• Presenter is off. • Low battery. • USB receiver not properly connected. • Out of range.	• Ensure the ON/OFF slider is in the "ON" position. • Charge the presenter's battery. • Ensure the USB receiver is fully inserted into a working USB port. Try a different USB port. • Move closer to the computer (within 2.4 GHz wireless range).
Green laser not working.	• Presenter is off. • Laser button not pressed. • Low battery.	• Ensure the presenter is powered on. • Press and hold the Laser Button (star icon). • Charge the presenter's battery.
Timer function not working.	• Timer not set or started.	• Follow the "Using the Timer Function" steps in the Operating Instructions.
Presenter buttons do not control slides.	• Software not in presentation mode. • Compatibility issue.	• Ensure your presentation software (e.g., PowerPoint, Keynote) is in slideshow mode. • Verify your operating system is compatible (Windows 11, 10, 8, 7, Vista, XP, 2000; Mac OS 10.4X or later; Android 4.0).

SPECIFICATIONS

Feature	Detail
Model Number	2804

Feature	Detail
Wireless Technology	2.4 GHz RF
Laser Type	Green Laser
Battery Type	Built-in rechargeable 400mAh Lithium Battery
Dimensions (LxWxH)	4.9 x 1.7 x 1.1 inches (12.4 x 4.3 x 2.8 cm)
Weight	1.92 ounces (54.4 grams)
Compatibility	Microsoft Windows 11, 10, 8, 7, Vista, XP, 2000; Mac OS 10.4X or later; Android 4.0

4.9 in
12.4 cm

1.7 in
4.3 cm

Image: The wireless presenter shown with its length (4.9 inches / 12.4 cm) and width (1.7 inches / 4.3 cm) clearly indicated.
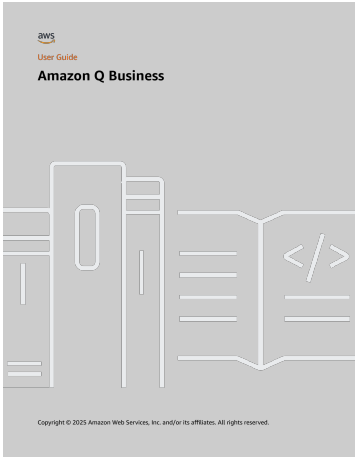
WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Amazon Basics website. You may also contact Amazon customer service directly for assistance with your product.

Related Documents - 2804

	[Amazon Basics CR123A Lithium 3 Volt Batteries - Safety and Disposal Guide](#) Comprehensive safety instructions, specifications, and disposal guidelines for Amazon Basics CR123A Lithium 3 Volt Batteries (Model B07RTWJ1T8).
	[Minoston MT10W Wi-Fi Countdown Timer Switch User Guide](#) Learn how to install and use the Minoston MT10W Wi-Fi Countdown Timer Switch for smart home automation. This guide covers app download, setup, voice control compatibility with Amazon Alexa and Google Assistant, and important safety instructions.
	[Amazon Basics CR2025 Lithium Coin Cell Battery Safety and Disposal Information](#) Concise safety precautions, handling, and disposal guidelines for Amazon Basics CR2025 Lithium Coin Cell Batteries, presented in English.
	[Amazon Basics CR2032 Lithium Button Cell Battery Safety and Handling Guide](#) Safety guidelines and handling instructions for Amazon Basics CR2032 3V lithium button cell batteries. Learn about safe usage, storage, disposal, and potential hazards to prevent injury.
	[Fitness Reality Bench Owner's Manual](#) Owner's manual for the Fitness Reality Bench, including assembly instructions, safety guidelines, adjustments, transportation, and warranty information.

Documents - Amazon Basics – 2804

[pdf] Guide

Amazon Q Business User Guide enterpriseq generative AI chat GPT enterprise RAG retrieval augmented generation LLM FM introduction What is in AWS Aug 8 2024 · All other trademarks not owned by are the property of their respective owners who may or be affiliated with connected to qbusiness ug docs aws amazon amazonq latest |||

User Guide Amazon Q Business Copyright 2025 Amazon Web Services, Inc. and/or its affiliates. All ri ... ions. 3. From the left navigation menu, choose Actions, and then choose Plugins. Built-in plugins **2804** Amazon Q Business 4. For Plugins, choose Add plugin. 5. For Add plugins, choose Atlassian Con...

lang:en score:10 filesize: 22.43 M page_count: 3079 document date: 2025-06-16