Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

saschedross Don02161055

saschedross AC Adapter Charger Instruction Manual

For VACLAB X11 PRO Cordless Lightweight Stick Vacuum Cleaner (Model: Don02161055)

Introduction

This manual provides essential instructions for the safe and effective use of your saschedross AC Adapter Charger, model Don02161055. This adapter is specifically designed as a replacement power supply for the VACLAB X11 PRO Cordless Lightweight Stick Vacuum Cleaner. Please read this manual thoroughly before using the product and retain it for future reference.

Safety Information

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Use this adapter only with the VACLAB X11 PRO Cordless Lightweight Stick Vacuum Cleaner or compatible devices as specified.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open, modify, or repair the adapter. Refer all servicing to qualified personnel.
- Ensure the power outlet voltage matches the adapter's input specifications (100-240VAC).
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep the adapter away from children and pets.
- If the adapter or cable appears damaged, discontinue use immediately.

Package Contents

- 1 x saschedross AC Adapter Charger (Model: Don02161055)

Setup

Follow these steps to set up your AC adapter:

1. **Inspect the Adapter:** Before first use, visually inspect the adapter and its cable for any signs of damage.
2. **Connect to Vacuum:** Locate the charging port on your VACLAB X11 PRO vacuum cleaner. Carefully insert the barrel connector of the AC adapter into the charging port. Ensure a snug fit.
3. **Plug into Power Outlet:** Plug the AC adapter's wall plug into a standard 100-240VAC electrical outlet.



Image: The saschedross AC Adapter Charger featuring a 6.5 ft cable, ready for connection.

Operating Instructions

Once connected, the adapter will begin charging your VACLAB X11 PRO vacuum cleaner. The charging indicator on your vacuum (if present) will typically illuminate or change color to indicate charging status. Refer to your vacuum cleaner's manual for specific charging indicator behavior.

- Allow the vacuum cleaner to charge fully before its first use or after prolonged storage.
- Do not leave the vacuum cleaner connected to the charger indefinitely after it is fully charged, although the adapter features over-current and over-voltage protection.
- The adapter is designed for indoor use only.

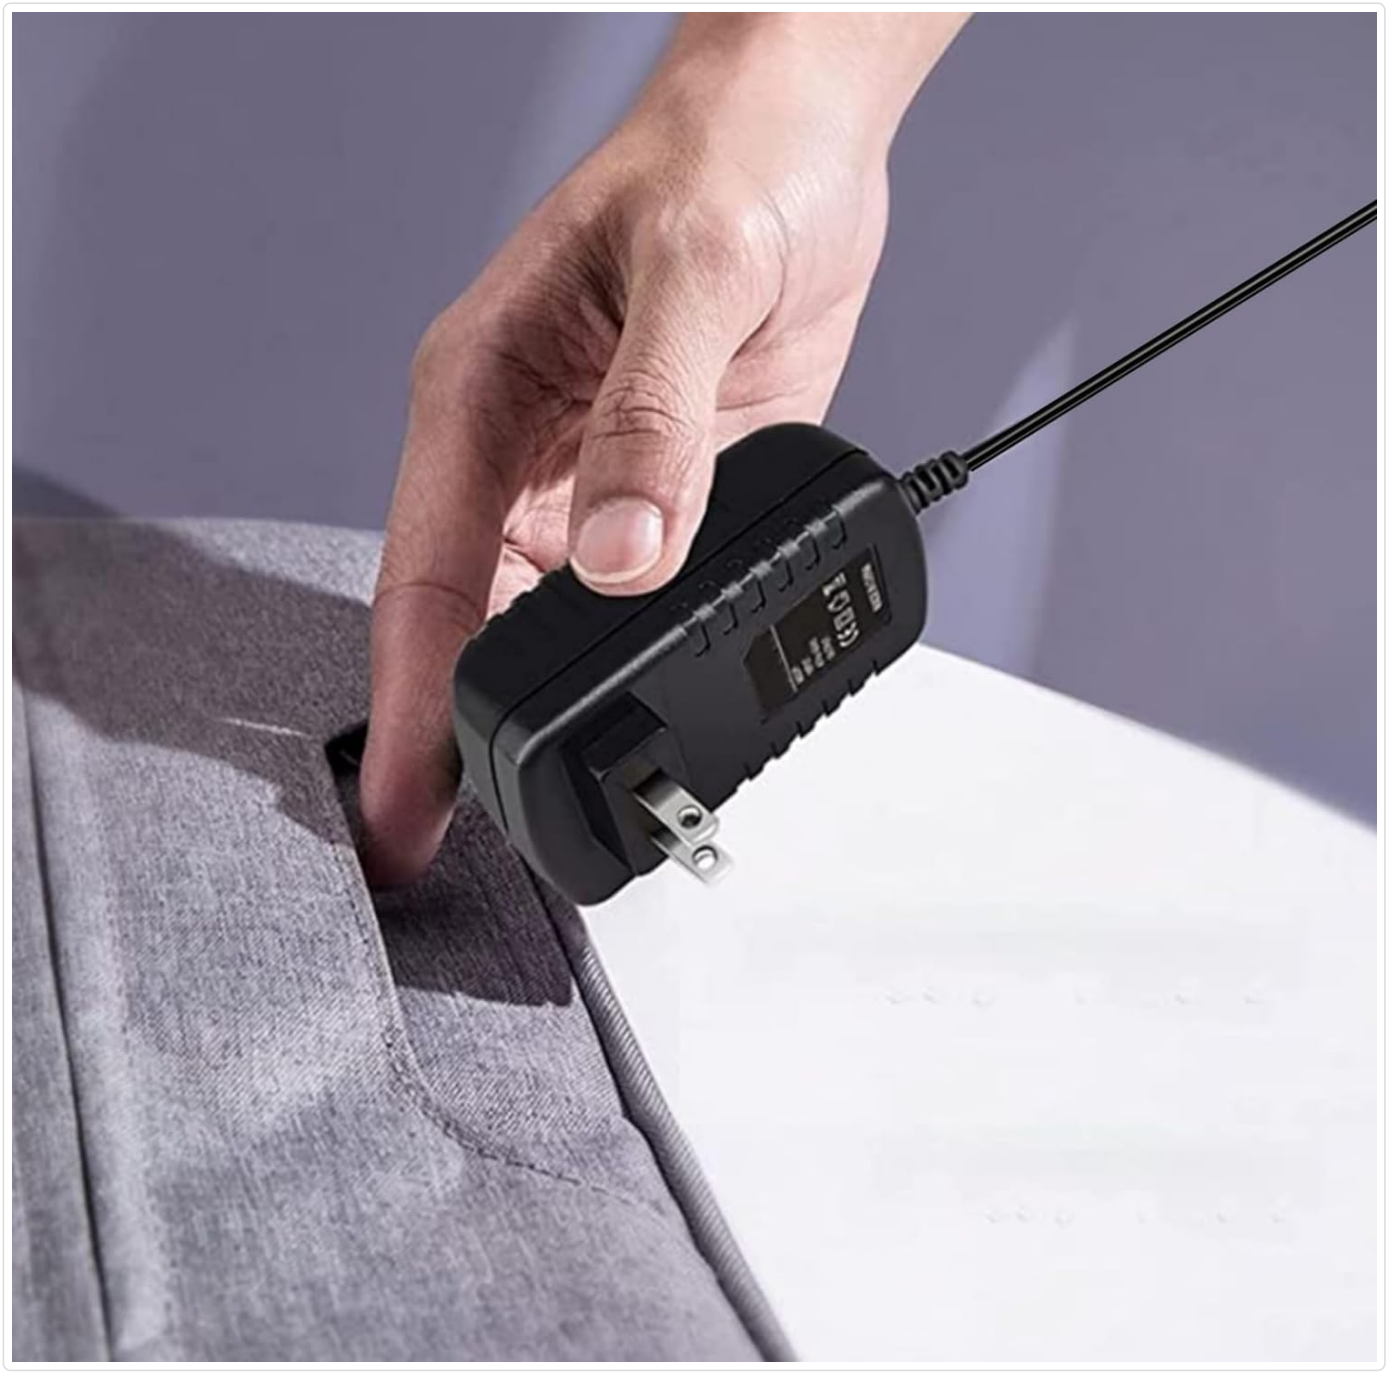


Image: The compact design of the AC adapter makes it easy to handle and store.

Maintenance

Proper care will extend the life of your AC adapter:

- **Cleaning:** Disconnect the adapter from the power outlet and the vacuum cleaner. Wipe the adapter with a soft, dry cloth. Do not use liquid cleaners or solvents.

- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly around the adapter to prevent damage to the wiring.
- **Inspection:** Periodically check the cable and connector for any signs of wear, cuts, or bends.

Troubleshooting

If you encounter issues with your AC adapter, refer to the following table:

Problem	Possible Cause	Solution
Vacuum not charging	Adapter not plugged in correctly Faulty power outlet Damaged adapter or cable Vacuum cleaner issue	Ensure adapter is securely plugged into both the vacuum and the wall outlet. Test the outlet with another device. Inspect adapter and cable for damage; replace if necessary. Consult your vacuum cleaner's manual for troubleshooting charging issues.
Adapter feels hot during use	Normal operation Overload or poor ventilation	A slight warmth is normal. Ensure the adapter is in a well-ventilated area. If excessively hot, unplug immediately and contact support.
Loose connection	Connector not fully inserted Worn connector or port	Ensure the barrel connector is fully inserted into the vacuum's charging port. If the connection remains loose, the connector or port may be worn.

Specifications

Detailed technical specifications for the saschedross AC Adapter Charger (Model: Don02161055):

Feature	Specification
Model Number	Don02161055
Input Voltage	100-240VAC
Input Frequency	50-60Hz
Output Voltage	21.6VDC
Wattage	200 Watts
Connector Type	Barrel Connector
Cable Length	Approximately 6.5 ft (2 meters)
Certifications	FCC, CE, RoHS
Protection Features	Over-current, Over-voltage, Over-heat protection
Compatible Devices	VACLAB X11 PRO Cordless Lightweight Stick Vacuum Cleaner



Image: Front and side views of the AC adapter, showing approximate dimensions: 2.7 inches in height, 1.2 inches in width, and 1.6 inches in depth.

Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

© 2023 saschedross. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09SLHND3M

More documents and user manuals: **https://manuals.plus/**