Hornady 98195WIFI

Hornady Rapid Safe Ready Vault with WiFi Instruction Manual

Model: 98195WIFI | Brand: Hornady

Figure 1: Hornady Rapid Safe Ready Vault with WiFi

INTRODUCTION

The Hornady Rapid Safe Ready Vault with WiFi (Model 98195WIFI) is designed to provide secure storage for firearms and valuables with convenient, rapid access. This safe incorporates patented RFID technology for touch-free entry and Wi-Fi connectivity to keep you informed about its status via your smartphone. Constructed from heavy-duty steel, it offers robust protection for your items.

Figure 2: Key Features of the RAPiD Safe

SAFETY INFORMATION

Always follow these safety guidelines to ensure proper use and prevent accidents:

- Keep the safe locked and keys/RFID tags secured away from children and unauthorized individuals.
- Do not store loaded firearms in the safe unless specifically designed for such storage and local laws permit.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Regularly check the battery level to ensure continuous operation.
- Do not force the safe open if it malfunctions; refer to the troubleshooting section or contact support.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

Figure 3: Included Items for Hornady RAPiD Safe

1. One (1) RAPiD Safe Ready Vault with WiFi (Model 98195WIFI)
2. One (1) Wall Power Supply
3. One (1) RFID Adjustable Wristband (No. 91866)
4. Two (2) RFID Adhesive Decals (No. 91868)
5. One (1) RFID Key Fob Tag (No. 91867)
6. Two (2) Circular Barrel Keys
7. Three (3) Gun Racks
8. One (1) Padded Floor Mat & one (1) shelf
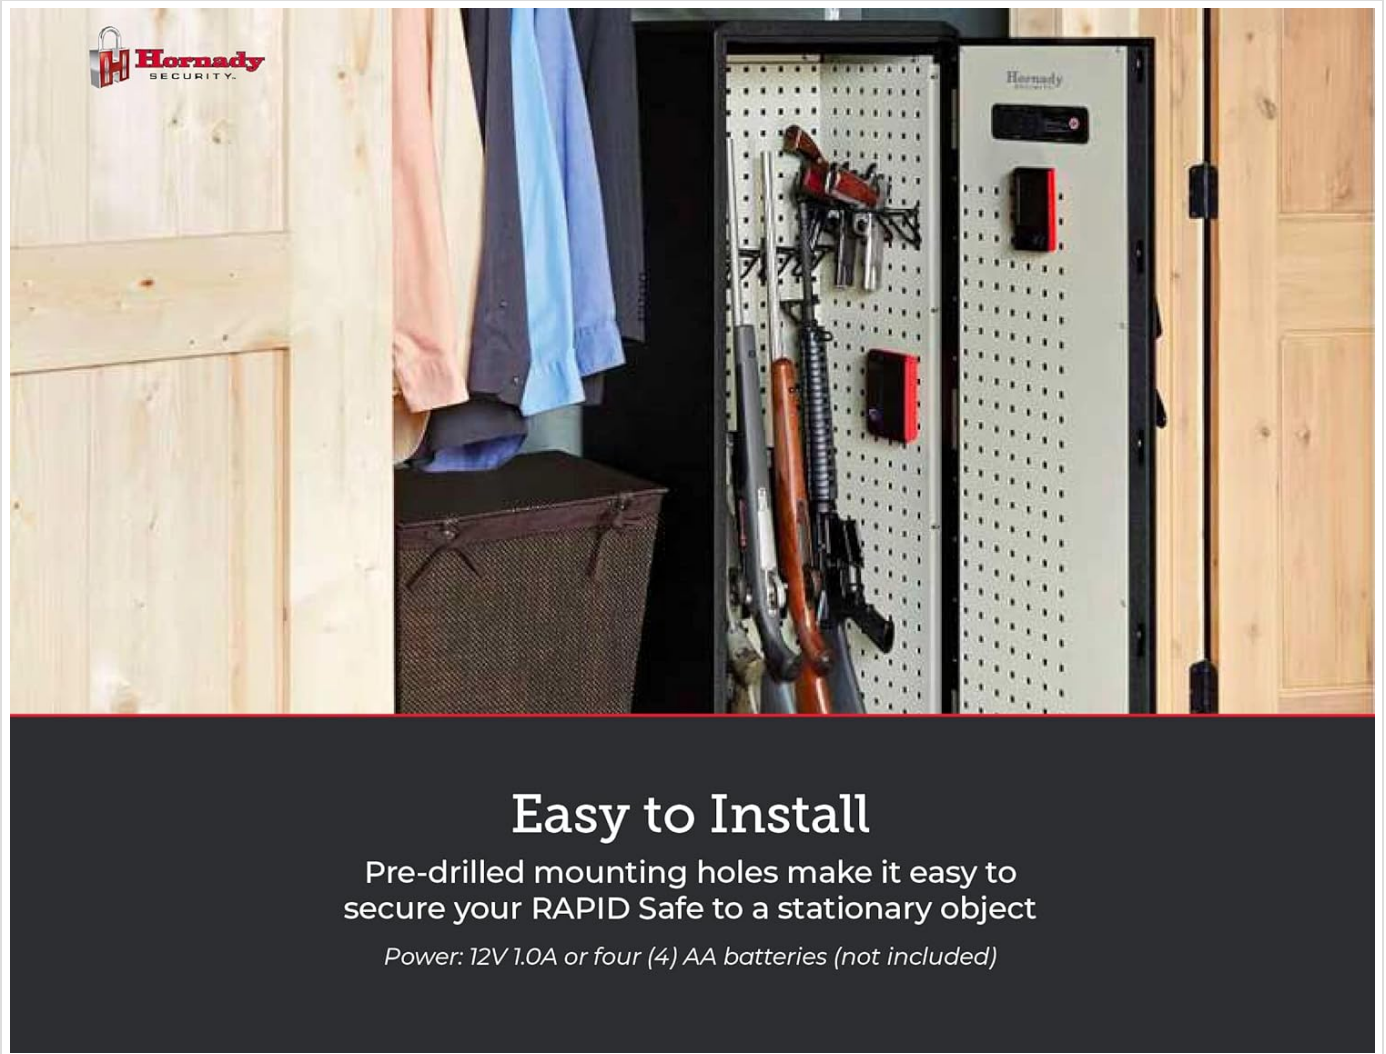
SETUP

1. Power Connection

The safe can be powered by either the included AC wall power supply or four (4) AA batteries (not included). It is recommended to use both for continuous operation and backup power.

- Connect the wall power supply to the safe's power input and a standard electrical outlet.
- Install four (4) AA batteries into the battery compartment, ensuring correct polarity.

2. Mounting the Safe

The Hornady Rapid Safe features pre-drilled mounting holes for securing it to a stationary object, enhancing security against unauthorized removal.

Figure 4: Easy Installation with Pre-drilled Mounting Holes

- Choose a secure location for the safe, such as a wall stud or floor.
- Use appropriate hardware (not included) to fasten the safe through the pre-drilled holes.

3. Hornady Security App Setup

Download the Hornady Security app to your smartphone to receive alerts when the safe is unlocked and monitor its status.

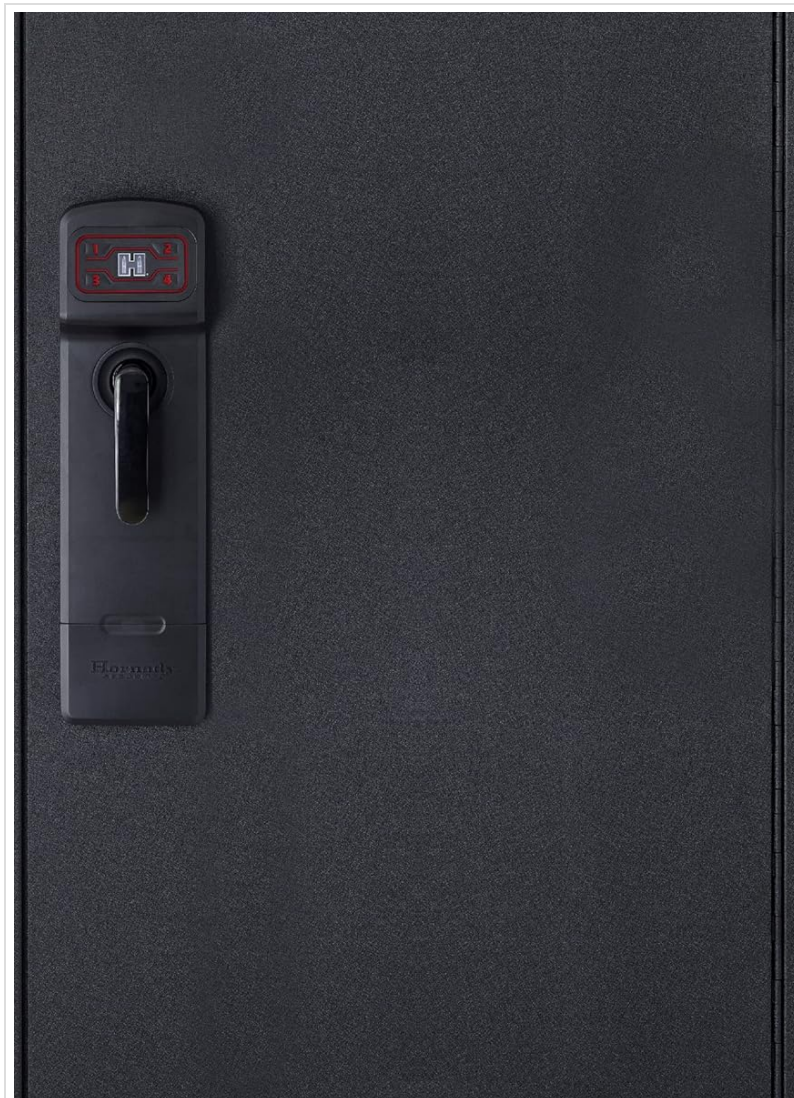Figure 5: WiFi Connectivity for Smartphone Alerts

- Search for "Hornady Security" in your device's app store.
- Install the app and follow the in-app instructions to connect your safe to your Wi-Fi network.

OPERATING INSTRUCTIONS

1. RFID Technology for Touch-Free Entry

The safe utilizes patented RFID technology for rapid, touch-free access. Up to five different RFID tags can be programmed for each safe.

Figure 6: RFID-Enabled Hornady Security Access

- To program an RFID tag (wristband, key fob, or decal), refer to the detailed instructions in the full user manual.
- To open the safe, simply place a programmed RFID tag near the sensor on the safe's lock. The safe will unlock instantly.

2. Digital Keypad Access

A digital keypad provides an alternative entry method.

- Enter your pre-set digital code on the keypad.
- The safe will unlock upon correct code entry.

3. Mechanical Key Access

For emergency access or in case of power failure, a backup mechanical key is provided.

- Insert the mechanical key into the keyhole located on the lock.
- Turn the key to unlock the safe.

MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Battery Replacement:** Replace AA batteries annually or when the low battery indicator appears.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If it becomes stiff, contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with RFID tag.	Tag not programmed, tag not placed correctly, or low battery.	Ensure tag is programmed and placed directly over the sensor. Check and replace batteries.
Keypad does not respond.	Low battery or incorrect code.	Replace batteries. Re-enter code carefully.
No Wi-Fi alerts received.	Safe not connected to Wi-Fi, app not configured, or network issue.	Verify safe's Wi-Fi connection in the app. Check app notification settings. Ensure stable home Wi-Fi.

SPECIFICATIONS

Figure 7: Available Sizes and Dimensions

Feature	Detail
Brand	Hornady
Model Number	98195WIFI

Feature	Detail
Product Dimensions (Exterior)	52.2"H x 20.0"W x 15.1"D (add 1.7" for handle)
Product Dimensions (Interior)	51.8"H x 19.0"W x 12.7"D
Item Weight	171 Pounds (approx. 165 lbs)
Lock Type	Electronic, Key, RFID
Material	Alloy Steel, Metal
Special Features	Wi-Fi Connectivity, RFID Technology, Fingerprint Sensor, Portable, Sensor Light
Mounting Type	Wall Mount (pre-drilled holes)
Power Source	AC and Battery Powered (4 AA batteries, not included)
Water Resistance Level	Not Water Resistant

PRODUCT OVERVIEW VIDEO

Watch this official video for a comprehensive overview of the Hornady Rapid Safe Ready Vault with WiFi, demonstrating its features and operation.

Video: Hornady Full-Sized Rapid Safe RFID WIFI (Duration: 0:30)

This video provides a visual guide to the Hornady Rapid Safe, highlighting its touch-free RFID entry, metal interior peg walls for flexible storage, heavy-duty construction, and compliance with safety standards. It also shows the items included and available sizes.

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the manufacturer's documentation included with your product or visit the official Hornady website. For technical support or service inquiries, contact Hornady customer service directly.

Manufacturer: Hornady
Warranty Description: SEE MANUF.

Related Documents - 98195WIFI

	Hornady RAPID Vehicle Safe Manual and Installation Guide User manual and installation guide for the Hornady RAPID Vehicle Safe, detailing setup, operation, RFID tag programming, key code programming, and vehicle mounting instructions.
	Hornady High Speed 3-in-1 Power Case Trimmer Instructions and Guide Comprehensive instructions and specifications for the Hornady High Speed 3-in-1 Power Case Trimmer (Item No. 050190), covering setup, operation, parts, and warranty.
	Hornady Sonic Cleaner Materials Cleaning Guide A comprehensive guide to cleaning various materials using Hornady's sonic cleaners and solutions, detailing recommended heat, duration, and cleaning agents for optimal results and material preservation.
	Hornady M2 Digital Bench Scale Instructions and Troubleshooting Comprehensive guide for the Hornady M2 Digital Bench Scale, covering setup, operation, troubleshooting, calibration, and warranty information. Features include a 1500 grain capacity, 0.1 grain accuracy, and a backlit display.
	Hornady Lock-N-Load Power Case Prep Center Owner's Manual Comprehensive owner's manual for the Hornady Lock-N-Load Power Case Prep Center. Includes product description, safety precautions, operating instructions, parts list, exploded view, and warranty information.
	Hornady Lock-N-Load Iron Press Owner's Manual and Instructions Official owner's manual for the Hornady Lock-N-Load Iron Press (Item No. 085520). This guide provides detailed instructions on setup, operation, parts lists, exploded views, warranty information, and how to use the Lock-N-Load system for efficient reloading. Includes information on the Auto Primer Feeder and die bushings.