Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lefant M210-Pro

Lefant M210-Pro Robot Vacuum Cleaner User Manual

Model: M210-Pro | Brand: Lefant

Product Overview

The Lefant M210-Pro is a slim, self-charging robot vacuum cleaner designed for efficient cleaning of hard floors and low-pile carpets. It features 2200Pa powerful suction, a tangle-free design, and multiple cleaning modes. Control is available via Wi-Fi, the Lefant app, or voice commands through Alexa and Google Home.



Image: The Lefant M210-Pro robot vacuum cleaner in a living room setting.

Setup Instructions

1. Unboxing and Initial Placement

Carefully remove all components from the packaging. Place the charging base against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the front and 0.5 meters (1.5 feet) to the sides.



Image: All included components of the Lefant M210-Pro package.

2. Charging the Robot Vacuum

Connect the power adapter to the charging base and plug it into a wall outlet. Place the robot vacuum onto the charging base, ensuring the charging contacts align. The indicator light on the robot will show charging status. Fully charge the

robot before first use (approximately 4-5 hours).



Image: The robot vacuum docked on its charging station.

3. App Connection (Bluetooth + Wi-Fi)

1. Download the "Lefant" App from your smartphone's app store.
2. Open the app and add model M210-Pro.
3. Turn on the red switch located under the robot's cover.

4. Press and hold the button on the robot's cover for 6 seconds.
5. Connect to a 2.4GHz Wi-Fi network and wait for the robot to pair with the app.

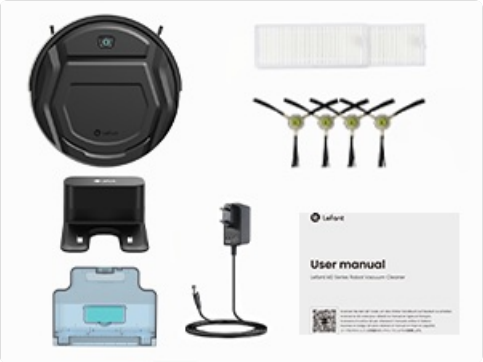


Image: Instructions for connecting the robot vacuum to the Lefant app.

4. Voice Control Setup

The M210-Pro supports voice control via Amazon Alexa and Google Home. Once connected to the Lefant app, follow the instructions within the Alexa or Google Home app to enable the Lefant skill and link your account. You can then use commands like "Alexa, turn on the M210P" or "Hey Google, turn on the M210P."

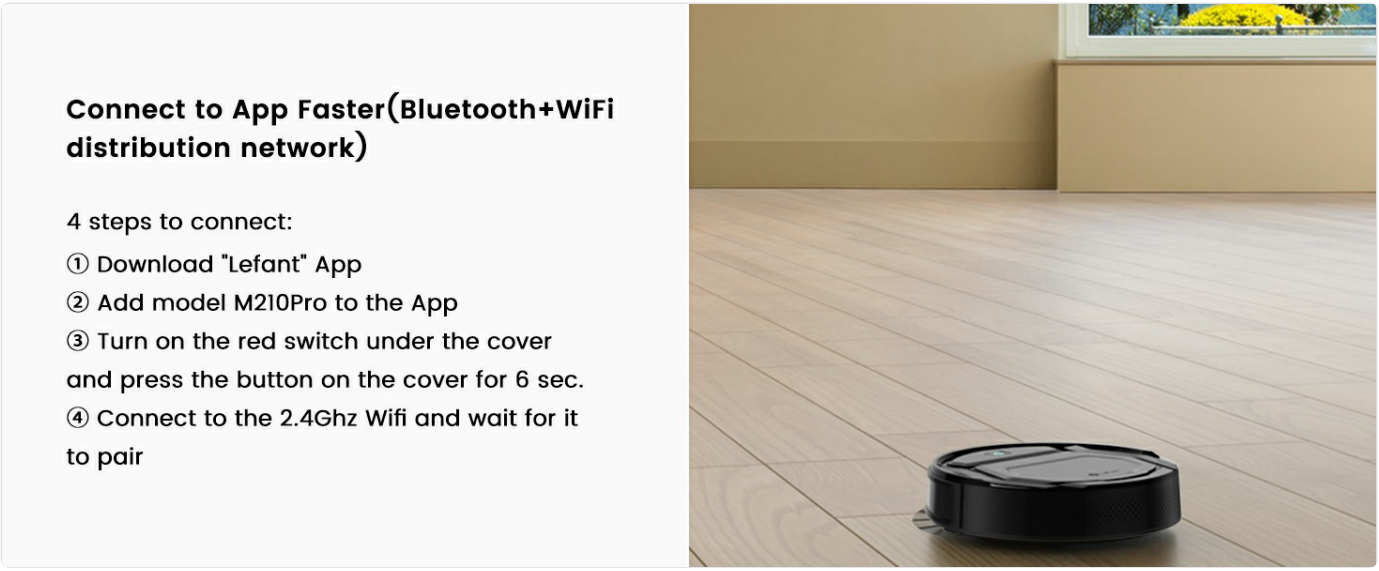


Image: Demonstrates voice control functionality with Amazon Alexa and Google Home.

Operating Instructions

1. Cleaning Modes

The M210-Pro offers 6 distinct cleaning modes to suit various needs, controllable via the app:

- **Manual Mode:** Control the robot's movement directly using the app.
- **Scheduled Clean Mode:** Set specific times for the robot to automatically clean.
- **Random Mode:** The robot cleans in a random pattern, suitable for general cleaning.
- **Zigzag Mode:** The robot cleans in a systematic zigzag pattern.
- **Edge Mode:** The robot cleans along walls and furniture edges.
- **Spot Mode:** The robot focuses on a specific dirty area, cleaning in a spiral pattern.



Image: Visual representation of the six cleaning modes and app control options.

2. Quiet Operation

The M210-Pro operates at a low noise level, typically around 56dB, allowing for cleaning without significant disturbance.

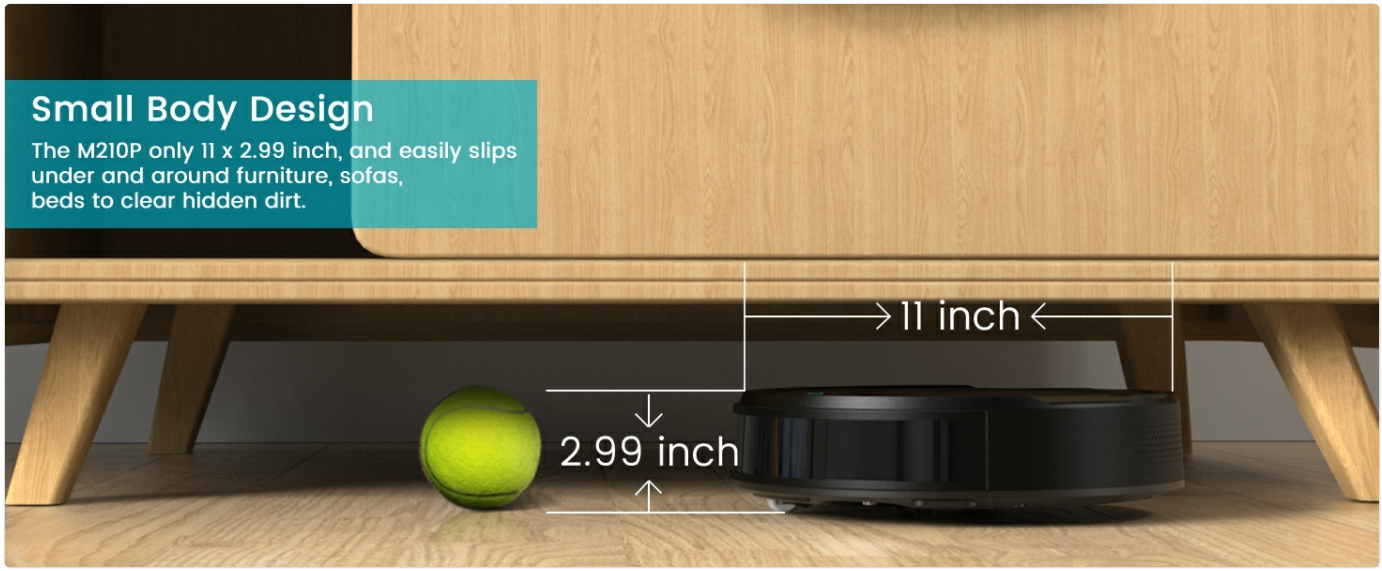


Image: Noise level comparison of the M210-Pro robot vacuum.

3. Boost Technology for Low-Pile Rugs

The robot can detect floor mats and automatically increase suction power when cleaning low-pile rugs to effectively remove dust and hair embedded in the fibers.



Image: The robot vacuum activating boost technology on a rug.

4. Obstacle Avoidance and Anti-Fall

Equipped with sensors, the M210-Pro can detect obstacles and avoid collisions. It also features anti-fall technology to prevent it from falling down stairs or ledges.



Image: The slim design of the robot vacuum allows it to clean under furniture.

5. Battery Life

The robot vacuum provides up to 120 minutes of runtime on a full charge, capable of cleaning areas up to 120 square meters.

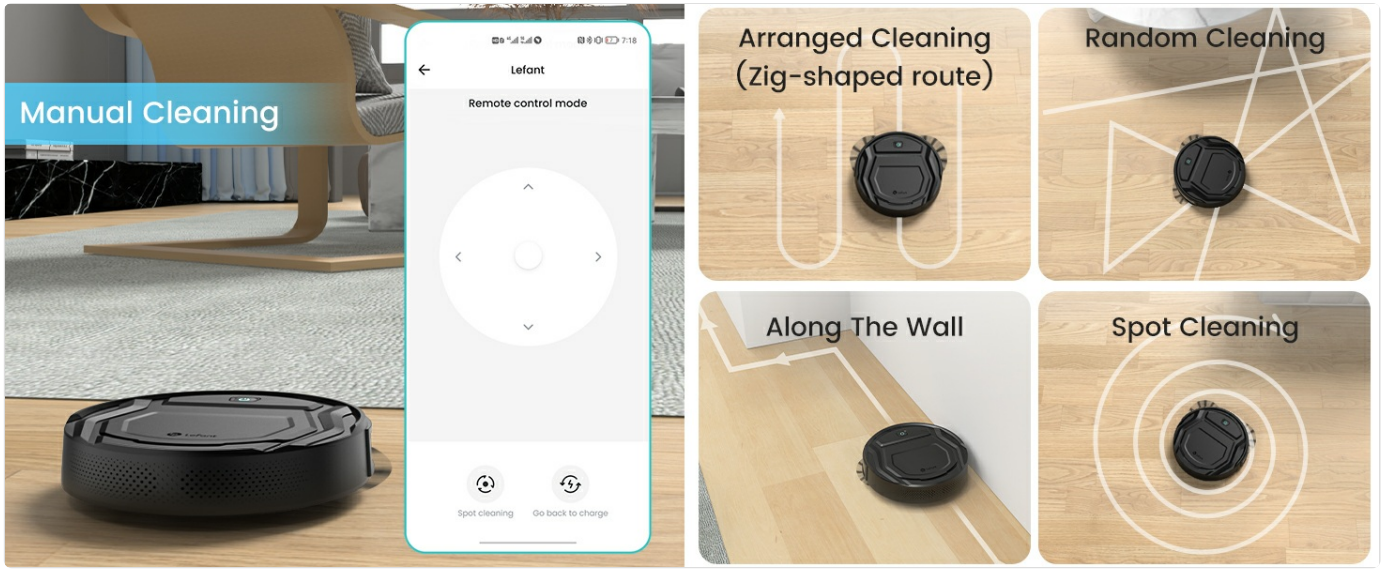


Image: Illustration of the robot vacuum's 120-minute runtime and 120m² coverage.

Video: Lefant M210 Pro Robot Vacuum Cleaner in action

Your browser does not support the video tag.

Video: An official demonstration of the Lefant M210 Pro Robot Vacuum Cleaner's cleaning capabilities and features.

Video: Robot Vacuum Cleaning Demonstration

Your browser does not support the video tag.

Video: A short demonstration of the robot vacuum cleaning a floor, showcasing its movement and effectiveness.

Maintenance

1. One-Click Dust Removal

The M210-Pro features a convenient one-click design for emptying the dustbin. Simply press the release button to detach the dustbin and empty its contents into a trash receptacle. The dustbin has a capacity of 500ml.



Image: Demonstrates the one-click dust removal process for the robot vacuum.

2. Filter Cleaning and Replacement

The robot uses a cloth filter. Regularly clean the filter by tapping out dust or using a small brush. Replace the filter every 1-3 months, depending on usage, to maintain optimal suction performance.



Image: The robot vacuum's dustbin and filter assembly.

3. Brush Cleaning

Periodically check and clean the side brushes for tangled hair or debris. Use a cleaning tool or scissors to remove any obstructions. Ensure the brushes are securely reattached after cleaning.

Troubleshooting

If your Lefant M210-Pro encounters an issue, please refer to the following general troubleshooting steps:

- **Robot not turning on:** Ensure the robot is fully charged and the main power switch (under the cover) is in the 'ON' position.
- **Robot not charging:** Verify the charging base is plugged in and the robot's charging contacts are aligned with the base. Clean contacts if necessary.

- **Poor suction:** Check if the dustbin is full and empty it. Clean or replace the filter. Ensure there are no blockages in the suction inlet.
- **Robot getting stuck frequently:** Clear obstacles from the cleaning path. Ensure the robot is not attempting to clean high-pile carpets it is not designed for.
- **App connection issues:** Ensure your Wi-Fi network is 2.4GHz. Restart your router, smartphone, and the robot vacuum. Follow the app connection steps carefully.

For more detailed troubleshooting, consult the full user manual (PDF) available for download or contact customer support.

Specifications

Feature	Detail
Brand	Lefant
Model Name	M210-Pro
Suction Power	2200Pa
Surface Recommendation	Hard Floor, Low-Pile Carpet
Special Features	Anti-Fall, Obstacle Avoidance, Tangle-Free
Color	Gray
Controller Type	App Control, Voice Control
Filter Type	Cloth
Battery Life	Up to 120 minutes
Battery Type	Lithium Ion
Power Source	Battery Powered
Compatible Devices	Amazon Echo, Google Home
Form Factor	Robotic
Indoor/Outdoor Usage	Indoor
Number of Power Levels	6
Item Dimensions (L x W x H)	11"L x 11"W x 2.99"H
Item Weight	2 kg

Warranty Information

Lefant products typically come with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official Lefant website for specific warranty terms and conditions applicable to your M210-Pro model. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or general inquiries regarding your Lefant M210-Pro Robot Vacuum Cleaner, please contact Lefant customer support. Contact information can usually be found on the official Lefant website or in the product's packaging materials.

You may also find helpful resources, FAQs, and additional support on theLefant Brand Store on Amazon.

© 2026 Lefant. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09VC5XNP8

More documents and user manuals: **https://manuals.plus/**