Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Whirlpool WP8053807

Whirlpool WP8053807 Range Oven Door Hinge Instruction Manual

Model: WP8053807

1. Introduction

This instruction manual provides essential information for the proper installation, maintenance, and safe operation of the Whirlpool WP8053807 OEM Range Oven Door Hinge. This component is designed to ensure your oven door closes correctly and remains safely open at an angle when required. Please read this manual thoroughly before proceeding with installation or any maintenance.

2. Product Overview

The Whirlpool WP8053807 is a genuine OEM replacement part for range oven doors. It is compatible with both gas and electric ranges, and can be installed on either the left or right side of painted oven doors. Two hinges are typically required per oven, and they are sold separately.

2.1 Key Features

- **Genuine OEM Part:** Designed by Whirlpool to meet specific engineering standards for your appliance.
- **Compatibility:** Replaces part numbers 3186068 and 8053807. Compatible with various Whirlpool models including GR396LXGQ, SF385PEEW, RF364PXPQ, RF364PXPT, and RF368LXKQ.
- **Versatile Installation:** Suitable for left or right side installation on painted oven doors.
- **Range Type:** Can be used in both gas and electric ranges.

2.2 What's in the Box

- One (1) Genuine OEM Range Oven Door Hinge Replacement Part (WP8053807)

3. Safety Information

WARNING: Risk of Electric Shock or Injury.

- Always unplug the appliance or shut off the house circuit breaker before attempting any repair or installation.
- Wear appropriate personal protective equipment, such as gloves and eye protection, during installation.
- Appliance repair requires basic hand tools and novice repair experience. If you are unsure about any step, consult a

qualified technician.

- Oven doors can be heavy. Exercise caution and consider seeking assistance when handling the oven door during removal or reinstallation.

4. Installation Instructions

Replacing the oven door hinge requires partial dismantling of the oven and basic hand tools, such as a multi-screwdriver. The following steps provide a general guide. Specific steps may vary slightly depending on your oven model. Always refer to your oven's specific service manual for detailed instructions.

4.1 Tools Required

- Multi-screwdriver (Phillips and flathead bits)
- Gloves (recommended)
- Eye protection (recommended)

4.2 Preparation

1. **Disconnect Power:** Unplug the oven from its power source or turn off the corresponding circuit breaker at your home's electrical panel.
2. **Access Oven Door:** Open the oven door fully. Depending on your model, you may need to remove the oven door for easier access to the hinges. Consult your oven's user manual for door removal instructions.

4.3 Hinge Replacement Steps

1. **Locate Hinges:** Identify the existing hinges on your oven door frame.
2. **Remove Old Hinge:** Carefully remove the screws or fasteners securing the old hinge. Note the orientation and position of the hinge for correct reinstallation.
3. **Install New Hinge:** Position the new Whirlpool WP8053807 hinge in the same location and orientation as the one removed. Secure it with the appropriate screws or fasteners.
4. **Repeat for Second Hinge:** If replacing both hinges, repeat the process for the second hinge. It is recommended to replace both hinges simultaneously for optimal door function.
5. **Reinstall Oven Door:** If the oven door was removed, carefully reattach it according to your oven's user manual.
6. **Test Door Function:** Gently open and close the oven door to ensure it operates smoothly, closes properly, and stays open at various angles.
7. **Reconnect Power:** Once installation is complete and the door functions correctly, reconnect power to the oven.

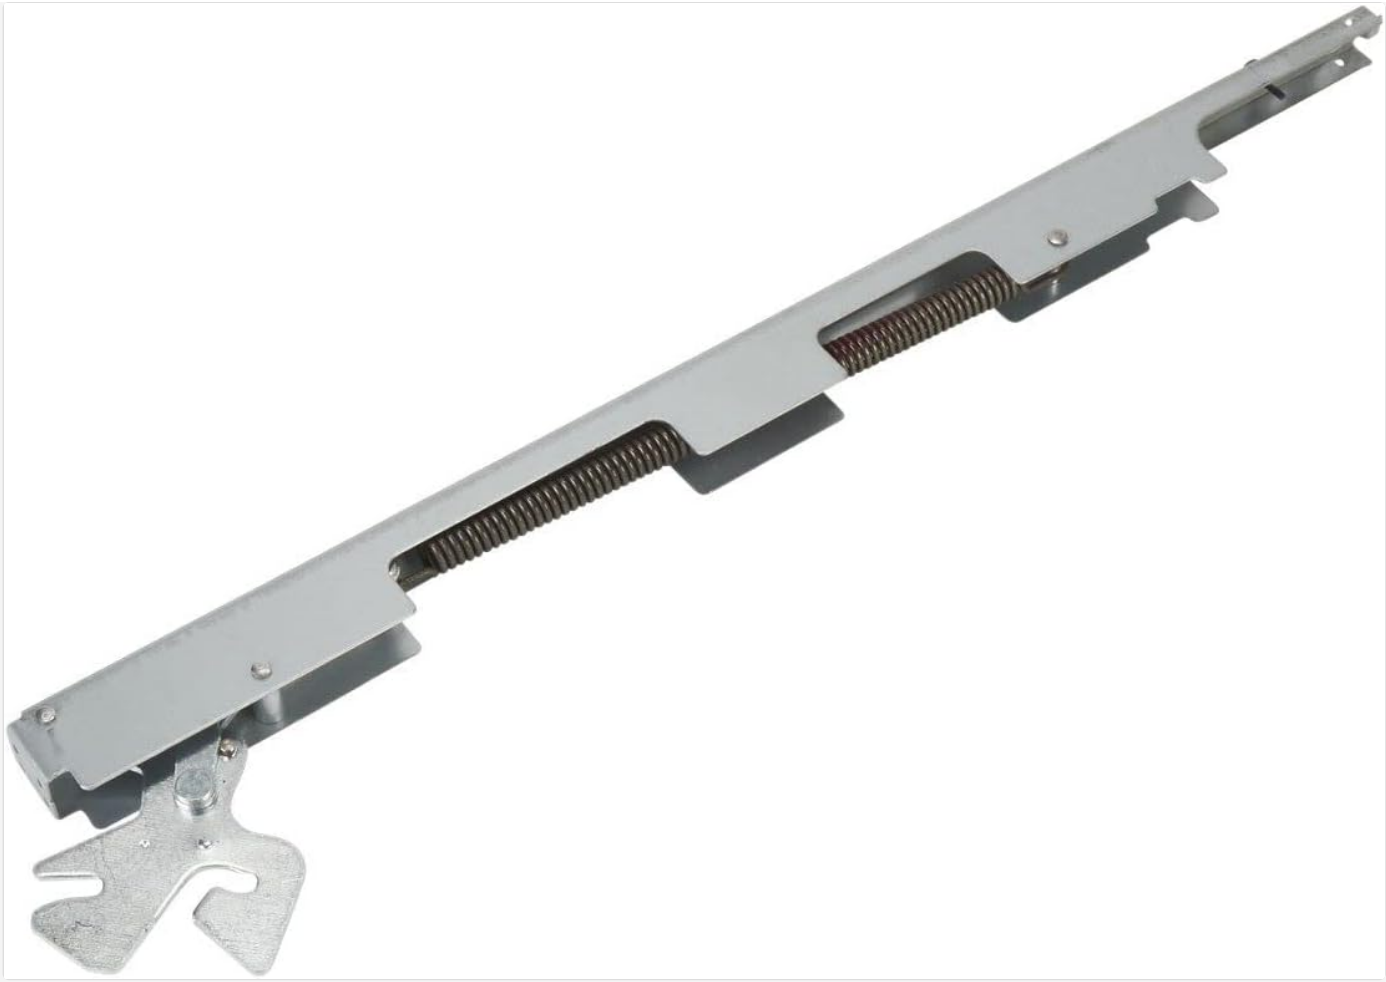


Figure 1: The Whirlpool WP8053807 OEM Range Oven Door Hinge. This image shows the full length of the hinge with its spring mechanism and mounting points.



Figure 2: Top view of the Whirlpool WP8053807 oven door hinge, illustrating its elongated design and the visible spring mechanism.

5. Maintenance

For proper maintenance and to ensure the longevity of your oven door's operation, it is strongly advised to replace the door hinge receptacle kit at the same time you replace the door hinge. This ensures that both components, which work in conjunction, are in optimal condition.
Regularly inspect the oven door hinges for any signs of wear, damage, or misalignment. If the oven door does not close properly or feels loose, inspect the hinges and consider replacement if necessary.

6. Troubleshooting

If your oven door is no longer closing properly or staying open at the desired angle, the door hinges are a likely cause. Replacing the WP8053807 hinge can resolve these issues.

- **Door Not Closing Fully:** Check if the new hinge is installed correctly and securely. Ensure no obstructions prevent

the door from closing.

- **Door Not Staying Open:** Verify that the hinge mechanism is functioning freely and is not obstructed. Ensure the hinge receptacle kit is also in good condition.
- **Uneven Door:** If the door appears uneven, check the alignment of both hinges. Minor adjustments may be possible, or one of the hinges might be faulty.

If problems persist after replacing the hinge, consult a qualified appliance technician.

7. Specifications

Attribute	Value
Brand	Whirlpool
Model Number	WP8053807
Item Weight	1.46 pounds
Product Dimensions	22 x 4.5 x 1 inches
Color	Silver
Included Components	Genuine OEM Range Oven Door Hinge Replacement Part
Batteries Required	No

8. Warranty Information

Whirlpool offers a **one-year warranty** on this genuine OEM replacement part. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

9. Support and Contact

For further assistance, technical support, or to inquire about other genuine Whirlpool parts, please visit the official Whirlpool website or contact their customer service department.
You can also visit the Whirlpool Store on Amazon for more information and products.

© 2025 Whirlpool Corporation. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09VCPVYYG

More documents and user manuals: **https://manuals.plus/**