Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

De'Longhi CM9LAN

De'Longhi CM9LAN Multifunction Electric Oven User Manual

Model: CM9LAN

1. Introduction

Thank you for choosing the De'Longhi CM9LAN Multifunction Electric Oven. This appliance is designed to provide efficient and versatile cooking performance for your kitchen.
Key features include:

- Analog programmer for start and end of cooking.
- Easy Steam and Idroclean functions for effortless cleaning.
- Booster function for rapid preheating.
- 3D thermoventilated function for even cooking.
- Tangential cooling ventilation.
- Automatic light activation upon door opening.
- Easily removable inner glass door for cleaning.



Figure 1.1: Front view of the De'Longhi CM9LAN oven, showcasing its black finish with antique brass knobs and handle, and a clear glass door.

2. Safety Instructions

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the oven is properly grounded and connected to a suitable power supply. Do not use extension cords. Disconnect power before any maintenance or cleaning.
- **Heat and Burns:** The oven and its accessible parts become very hot during use. Always use oven mitts when handling hot items or parts. Keep children and pets away from the appliance when it is operating.
- **Ventilation:** Ensure adequate ventilation around the oven as specified in the installation instructions. Do not block ventilation openings.
- **Cleaning:** Always allow the oven to cool down before cleaning. Use only recommended cleaning agents and methods.
- **General Use:** Do not store flammable materials in or near the oven. Do not use the oven for purposes other than cooking food.

3. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your oven. It is recommended that installation be performed by a qualified technician.

3.1. Unpacking

Carefully remove the oven from its packaging. Inspect for any damage incurred during transit. Keep packaging materials away from children.

3.2. Placement and Dimensions

The oven is designed for built-in installation. Ensure the cabinet opening meets the required dimensions for proper fit and ventilation. Refer to the diagram below for detailed measurements.

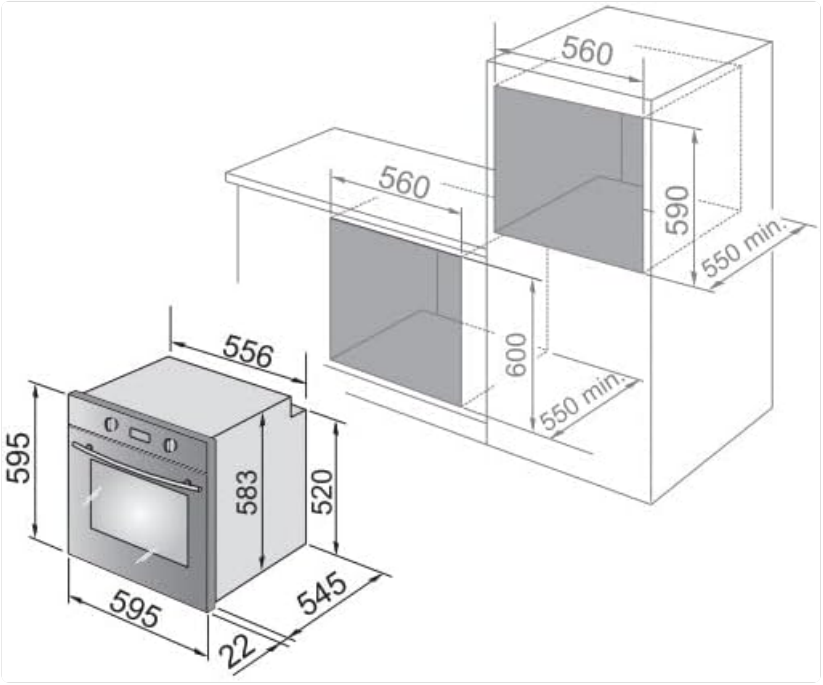


Figure 3.1: Installation dimensions for the De'Longhi CM9LAN oven. The diagram illustrates the required cutout sizes for both under-counter and tall cabinet installations, including depth, width, and height specifications.

3.3. Electrical Connection

The oven must be connected to an electrical supply by a qualified electrician in accordance with local wiring regulations. Ensure the voltage and frequency match the specifications on the appliance rating plate.

4. Operating Instructions

Your De'Longhi CM9LAN oven offers various cooking functions controlled by the front panel knobs and analog programmer.

4.1. Control Panel Overview

The control panel features two main knobs for function selection and temperature control, along with an analog programmer for setting cooking times.

4.2. Setting the Time

Before first use, set the current time using the analog programmer. Refer to the detailed instructions in the full manual for specific steps.

4.3. Cooking Functions

- **Booster (Rapid Preheating):** Activates maximum power to quickly reach the desired temperature. Once the temperature is reached, the oven automatically switches to the selected cooking function.
- **Thermoventilated 3D:** Combines fan-assisted cooking with multiple heating elements for even heat distribution, ideal for cooking multiple dishes simultaneously.
- **Easy Steam:** Utilizes steam to enhance cooking results, keeping food moist and tender.
- **Traditional Cooking:** Uses top and bottom heating elements for conventional baking and roasting.
- **Grill:** For grilling and browning dishes.

4.4. Using the Analog Programmer

The analog programmer allows you to set the duration of cooking or program a delayed start and end time. Consult the full manual for detailed instructions on programming specific cooking cycles.

4.5. Oven Light

The internal halogen light automatically illuminates when the oven door is opened, providing clear visibility of your food.

5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven. Always ensure the oven is cool before cleaning.

5.1. Idroclean Function

The Idroclean function uses steam to loosen food residues, making manual cleaning easier. Follow the instructions in the full manual for activating and utilizing this feature.

5.2. General Cleaning

- **Exterior:** Clean the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners.
- **Interior:** After using the Idroclean function, wipe the interior with a damp cloth. For stubborn stains, use a non-abrasive oven cleaner.
- **Inner Glass Door:** The inner glass door is easily removable for thorough cleaning. Refer to the full manual for instructions on how to remove and re-install it.
- **Accessories:** The baking tray (leccarda) and grids can be washed with warm soapy water.

6. Troubleshooting

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; oven not set correctly; fuse tripped.	Check power connection; ensure function and temperature are set; check household fuse box.
Oven light not working.	Light bulb faulty.	Replace the light bulb (ensure oven is cool and disconnected from power).
Uneven cooking.	Incorrect rack position; overloaded oven; door not fully closed.	Adjust rack position; avoid overloading; ensure door is securely closed.

If the problem persists after attempting these solutions, please contact De'Longhi customer support.

7. Specifications

- **Model:** CM9LAN
- **Brand:** De'Longhi
- **Type:** Multifunction Electric Oven
- **Capacity:** 74 Liters
- **Energy Class:** A

- **Heating Method:** Electric (resistance)
- **Color:** Brass finish (Ottone)
- **Weight:** 35.3 kg
- **Accessories Included:** 1 Baking Tray (leccarda), 2 Flat Grids (griglie piane)
- **Internal Cavity:** 7 levels of positioning for racks.

8. Warranty and Support

Your De'Longhi CM9LAN oven is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your appliance or visit the official De'Longhi website.

Returns Policy: If you wish to return a product within 30 days of receipt because you have changed your mind, please consult the Amazon help page on returns. If you have received a defective or damaged product, please consult the help page on defective or damaged products. For specific information on purchases made on the Marketplace, please consult the help page on Marketplace purchases.

For technical assistance, spare parts, or further inquiries, please contact De'Longhi customer support through their official channels.

© 2024 De'Longhi. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09VQ7WM4D

More documents and user manuals: **https://manuals.plus/**