TASCO Low Glow Trail Camera (B09WG75HJM)

Tasco Low Glow Trail Camera User Manual

Model: Low Glow Trail Camera (B09WG75HJM)

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Tasco Low Glow Trail Camera. Designed for capturing wildlife and for security purposes, this camera offers 12MP photos and 720P video, a 50-foot flash range, and a long battery life. Please read this manual thoroughly before using your camera to ensure optimal performance and longevity.



Image: The Tasco Low Glow Trail Camera package includes two cameras, 16 AA batteries, and two 32GB Transcend SD cards.

Package Contents

- 2 x Tasco Low Glow Trail Cameras
- 16 x Energizer Premium Max AA Batteries
- 2 x Transcend 32GB SD Memory Cards
- 2 x Mounting Straps

Setup

1. Battery Installation

The camera requires 8 AA batteries for operation.

1. Open the camera casing by unlatching the side clips.
2. Locate the battery tray.
3. Insert 8 AA batteries into the tray, ensuring correct polarity (+/-).
4. Slide the battery tray back into the camera and close the casing securely.



Image: Proper installation of AA batteries into the camera's removable battery tray.

2. SD Card Installation

The camera supports SD cards up to 32GB. Two 32GB Transcend SD cards are included.

1. With the camera casing open, locate the SD card slot.
2. Insert the 32GB SD card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, gently push the card in until it springs out.

3. Mounting the Camera

The camera can be mounted using the included strap.

1. Thread the mounting strap through the slots on the back of the camera.
2. Secure the camera to a tree, pole, or other stable surface at the desired height and angle.
3. Ensure the camera is stable and pointed towards the area you wish to monitor.



Image: Examples of mounting the camera using the provided strap on various surfaces.

Operating Instructions

Powering On/Off and Mode Selection

The camera typically has a switch for ON, OFF, and SETUP modes.

- **OFF:** Camera is powered off.
- **SETUP:** Allows access to the camera's menu for settings configuration.
- **ON:** Camera is active and ready to capture images/videos based on settings.



Image: Various views of the camera, including the internal control panel for mode selection.

Capture Modes

The Tasco Low Glow Trail Camera supports multiple capture modes:

- **Photo Mode:** Captures still images at 12MP resolution.
- **Video Mode:** Records video at 720P resolution.
- **Burst Mode:** Captures multiple photos in quick succession.
- **Time-Lapse Mode:** Captures images at set intervals over a period.

These modes can be configured in the SETUP menu. The camera features a 1-second trigger speed and 5-second recovery time for efficient capture.



Image: The camera supports various capture modes including burst, time-lapse, and video.

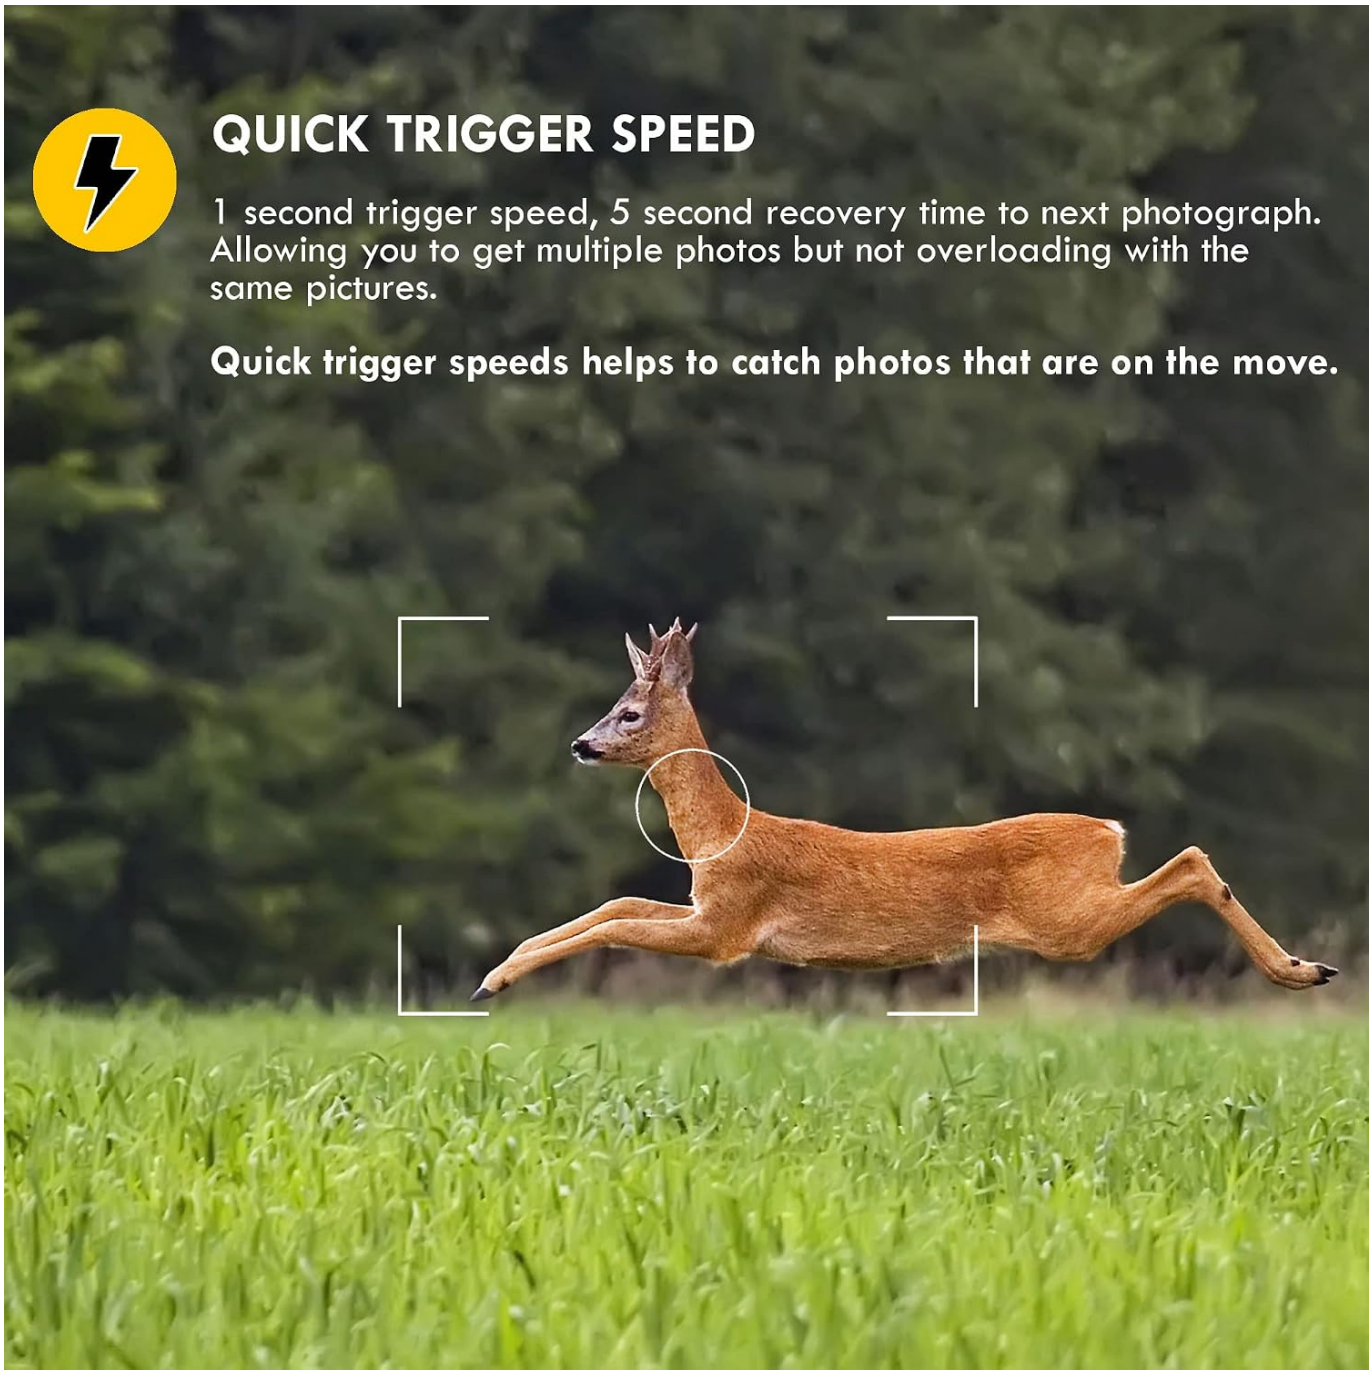


Image: The camera's quick trigger speed ensures moving subjects are captured effectively.

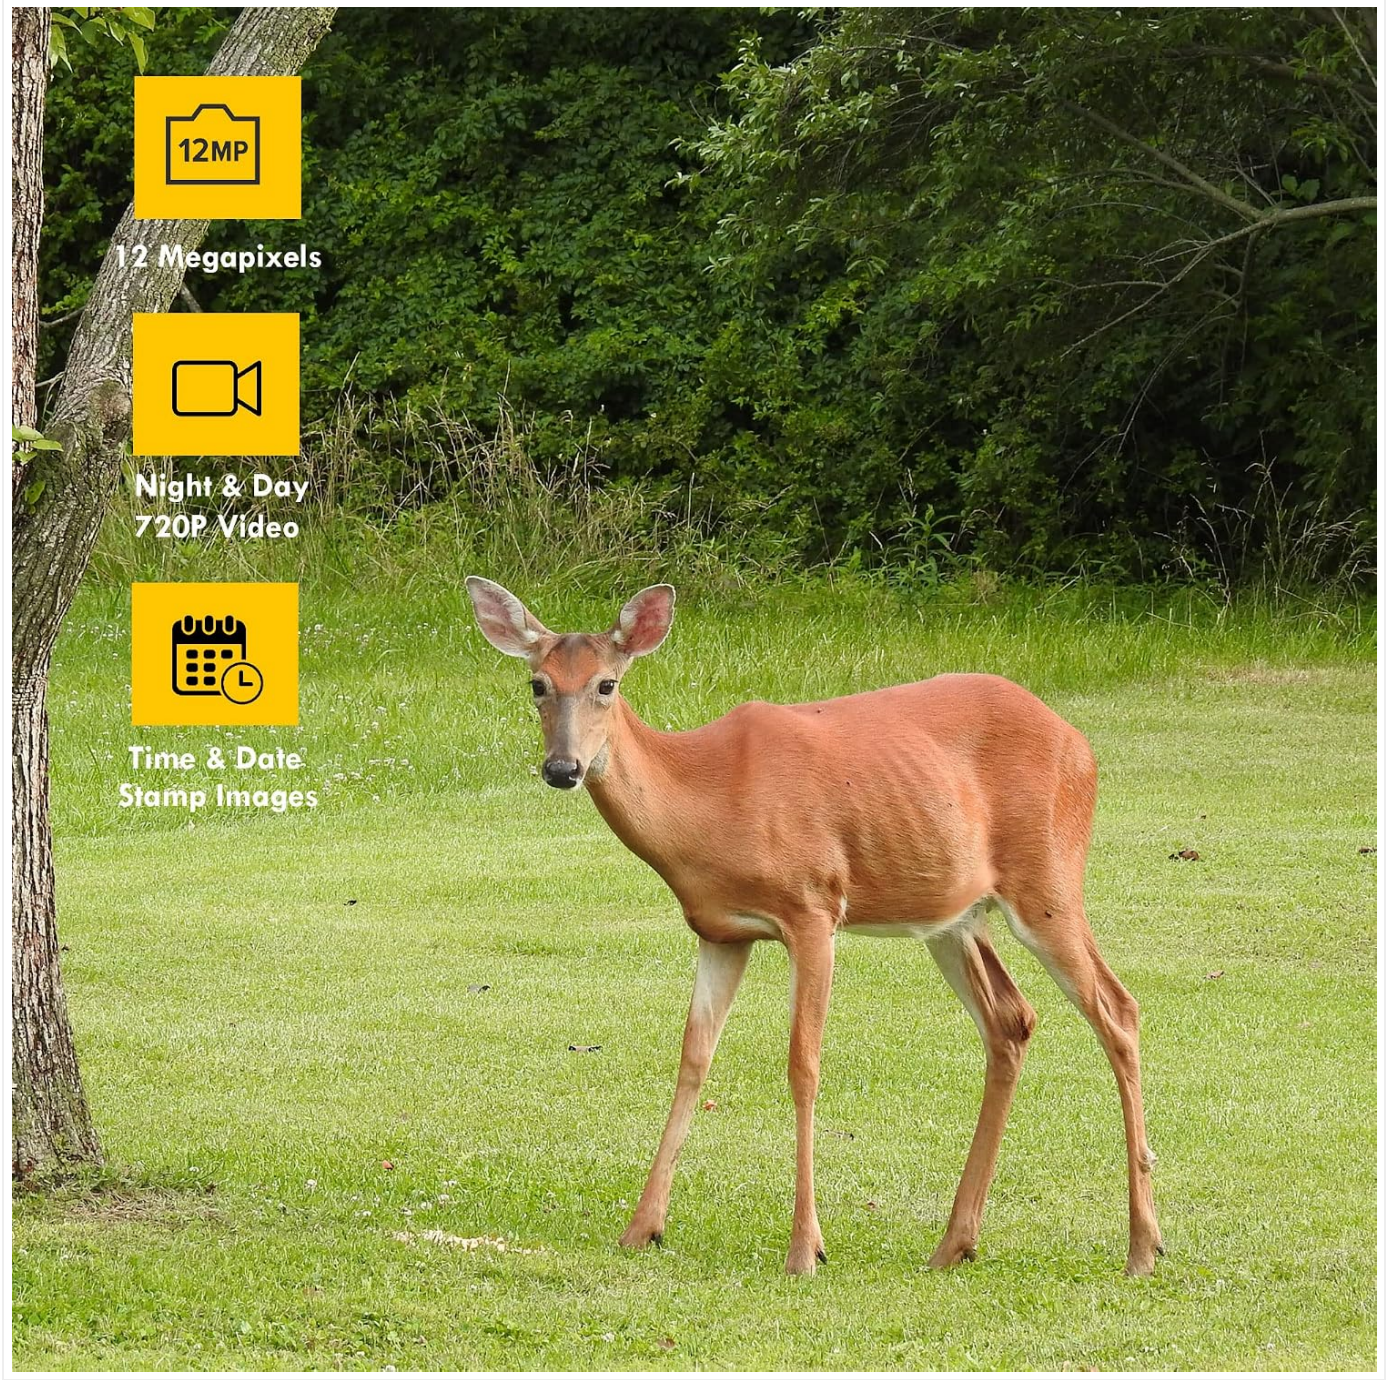


Image: The camera captures 12MP images and 720P video, with time and date stamping.

Viewing and Transferring Files

To view captured images and videos, remove the SD card from the camera and insert it into a compatible device (e.g., computer, card reader). Files can then be transferred to your computer for storage and viewing.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and housing. Avoid abrasive cleaners.
- **Battery Life:** The camera offers approximately 6 months of battery life. Replace batteries when the low battery indicator appears or performance degrades. Always use fresh, high-quality AA alkaline batteries.
- **SD Card Management:** Regularly format your SD card to ensure optimal performance and prevent data corruption. Back up important files before formatting.
- **Weather Protection:** While designed for outdoor use, ensure the camera casing is securely closed to protect against moisture and dust.

Troubleshooting

Problem	Possible Cause	Solution
Camera not powering on	Low or dead batteries; incorrect battery installation; camera switch in OFF position.	Replace batteries with fresh ones, ensuring correct polarity. Check if the switch is in ON or SETUP mode.
No images/videos captured	SD card full or corrupted; incorrect settings; sensor obstruction; trigger speed too slow for moving objects.	Format or replace SD card. Verify capture mode and sensitivity settings. Ensure clear line of sight for the sensor. Consider camera placement relative to subject movement.
Poor image/video quality	Dirty lens; low light conditions; subject too far or too close; camera shake.	Clean the lens. Ensure adequate lighting or use flash effectively. Position camera appropriately for subject distance. Securely mount the camera.
Water inside camera casing	Casing not properly sealed; damaged gasket.	Ensure all latches are securely closed. Inspect the rubber gasket around the camera opening for damage. If damaged, contact support.

Specifications

Feature	Detail
Effective Still Resolution	12 MP
Video Capture Resolution	720p
Flash Range	50 feet
Flash Type	Low Glow/Red Infrared
Trigger Speed	1 second
Recovery Time	5 seconds
Battery Type	8 x AA (Alkaline recommended)
Estimated Battery Life	Up to 6 months
Memory Type	SD Card (up to 32GB)
International Protection Rating	IP54
Mounting Type	Wall Mount (Strap included)
Connectivity Protocol	Wi-Fi
Dimensions (Package)	9.37 x 9.02 x 3.39 inches
Item Weight	2.33 pounds

Warranty and Support

For warranty information and technical support, please refer to the official Tasco website or contact their customer

service. Keep your purchase receipt as proof of purchase.

Tasco Official Website: Visit the TASCO Store on Amazon

© 2024 TASCO. All rights reserved.

Product Model: Low Glow Trail Camera (B09WG75HJM)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question