Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit RCA TV Replacement Remote Control

ZdalaMit Replacement Remote Control for RCA TVs

User Instruction Manual

1. Introduction

This manual provides instructions for the ZdalaMit Replacement Remote Control, designed for various RCA TV models. This remote control is a direct replacement and requires no programming or pairing. Simply insert batteries, and it is ready for immediate use.
Please ensure your TV model is listed in the compatibility section for optimal performance.

2. Setup: Battery Installation

The remote control operates on two (2) 1.5V AAA Alkaline batteries. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA Alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use with compatible RCA TV models.

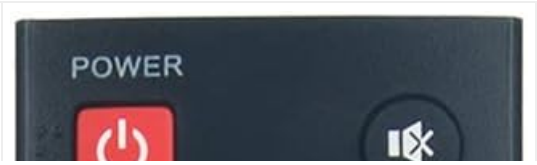




Figure 1: Back view of the remote control, indicating the battery compartment.

3. Operating Instructions

This replacement remote control provides full functionality for compatible RCA TV models. Point the remote control directly at the TV's infrared sensor for optimal performance.




1
2
3
4
5
6
7
8
9
BACK
0
RETURN
MENU
SOURCE
OK
EXIT
NETFLIX
VOL
INFO
CH
EPG
REC
CC
MTS
SUBTITLE
CH LIST
FAV
QUICK



Figure 2: Front view of the remote control, displaying all buttons.

3.1. Basic Functions

- **Power ( )**: Turns the TV on or off.
- **Mute ( )**: Mutes or unmutes the TV audio.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (VOL +/-)**: Adjusts the TV volume.
- **Channel Up/Down (CH +/-)**: Changes the TV channel.
- **Source**: Cycles through available input sources (HDMI, AV, etc.).
- **Menu**: Accesses the TV's main menu.
- **Navigation Arrows (Up, Down, Left, Right)**: Navigate through menus and options.
- **OK**: Confirms selections in menus.
- **Exit**: Exits the current menu or function.
- **Back/Return**: Returns to the previous screen or channel.

3.2. Special Functions

- **Netflix**: Direct access button for the Netflix application.
- **Info**: Displays program information.
- **EPG (Electronic Program Guide)**: Accesses the electronic program guide.
- **MTS (Multi-channel Television Sound)**: Selects audio modes (e.g., Stereo, SAP).
- **CC (Closed Caption)** / **Subtitle**: Toggles closed captions or subtitles.
- **REC (Record)**: Initiates recording if the TV supports it with an attached storage device.
- **CH LIST (Channel List)**: Displays the list of available channels.
- **FAV (Favorites)**: Accesses favorite channels list.
- **Quick**: Provides quick access to certain TV functions (functionality may vary by TV model).
- **Color Buttons (Red, Green, Yellow, Blue)**: Used for specific functions within menus or interactive services, as indicated on the TV screen.
- **Media Playback Controls (Play/Pause, Rewind, Fast Forward, Stop)**: Controls media playback for compatible content.

4. Compatibility

This ZdalaMit replacement remote control is compatible with the following RCA TV models:

- RHOS651SM
- RNSMU5536
- RNSMU7036-B
- RNSMU7036
- RNSMU7536-B
- SRCUS7040

- RNSMU4336
- RNSMU6036
- RNSMU5036
- RNSMU5836
- RHOS581SM-D
- RNSMU6536

Please verify your TV model number matches one of the models listed above to ensure full functionality.

5. Maintenance

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA Alkaline batteries.
- **Storage**: If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment**: Avoid exposing the remote control to extreme temperatures, direct sunlight, high humidity, or water.

6. Troubleshooting

- **Remote not working**:
  - Ensure new AAA Alkaline batteries are correctly installed with the correct polarity (+/-).
  - Check if the remote control is pointed directly at the TV's infrared sensor.
  - Remove any obstructions between the remote control and the TV.
  - Verify that your TV model is listed in the compatibility section.
- **Intermittent response**:
  - Replace batteries with new ones.
  - Ensure there is no interference from strong light sources (e.g., direct sunlight, fluorescent lights).
- **Specific buttons not working**:
  - Some advanced functions may require specific TV settings or may not be supported by all compatible TV models.
  - Clean the remote control buttons and surrounding areas to ensure no debris is causing sticking.

7. Product Specifications

Brand	ZdalaMit
Compatible Devices	RCA Televisions
Connectivity Technology	Infrared (IR)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Product Dimensions	7 x 1.6 x 0.5 inches (17.8 x 4.1 x 1.3 cm)

Item Weight	1.41 ounces (40 grams)
Special Feature	Ergonomic design

8. Support and Warranty

For any queries or assistance regarding your ZdalaMit Replacement Remote Control, please refer to the seller's contact information provided at the point of purchase.
Warranty information, if applicable, is typically provided by the seller. Please retain your purchase receipt for warranty claims.

© 2023 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09WHYDTZC

More documents and user manuals: **https://manuals.plus/**