Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Zippo #Z454

Zippo Windproof Lighter #Z454 Wild Trout Bass Fishing Rod - Instruction Manual

Brand: Zippo | Model: #Z454

Introduction

This manual provides essential instructions for the safe and proper use, setup, operation, and maintenance of your Zippo Windproof Lighter #Z454. Please read this document thoroughly before using your lighter to ensure optimal performance and safety.

Important Safety Information

WARNING: Keep out of the reach of children. This lighter is not child resistant.

- Ignite the lighter away from your face and clothing.
- All new Zippo Windproof Lighters are shipped empty and must be filled with Zippo lighter fluid before use.
- When filled, the lighter will contain flammable fluid.
- Never expose the lighter to heat above 122°F (50°C) or to prolonged sunlight.
- Never puncture or put the lighter in fire.
- Ensure the flame is out after use. This lighter does not self-extinguish; close the cover to put it out.
- Zippo lighter fluid is a skin irritant. Avoid overfilling. If fluid gets on skin, wash the affected area. If irritation persists or worsens, seek medical attention.

Setup: Filling Your Zippo Lighter

Your Zippo windproof lighter is shipped without lighter fluid due to carrier shipping regulations. It must be filled with Zippo lighter fluid (sold separately) before its first use.

Initial Fluid Filling Procedure

1. Remove the inside unit from the lighter case. Hold the inside unit in one hand.
2. Flip the inside unit upside-down to reveal the felt pad in the fuel chamber.
3. Slowly saturate the packing material with Zippo lighter fluid. Stop filling when the fluid reaches the top of the packing material or begins to change color. Do not overfill.

4. Insert the inside unit back into the case, ensuring any excess fluid is wiped from the lighter and your hands are dry before igniting.



Figure 1: Visual guide for filling your Zippo lighter. Step 1: Remove inside unit. Step 2: Lift felt pad. Step 3: Saturate packing material with fluid.

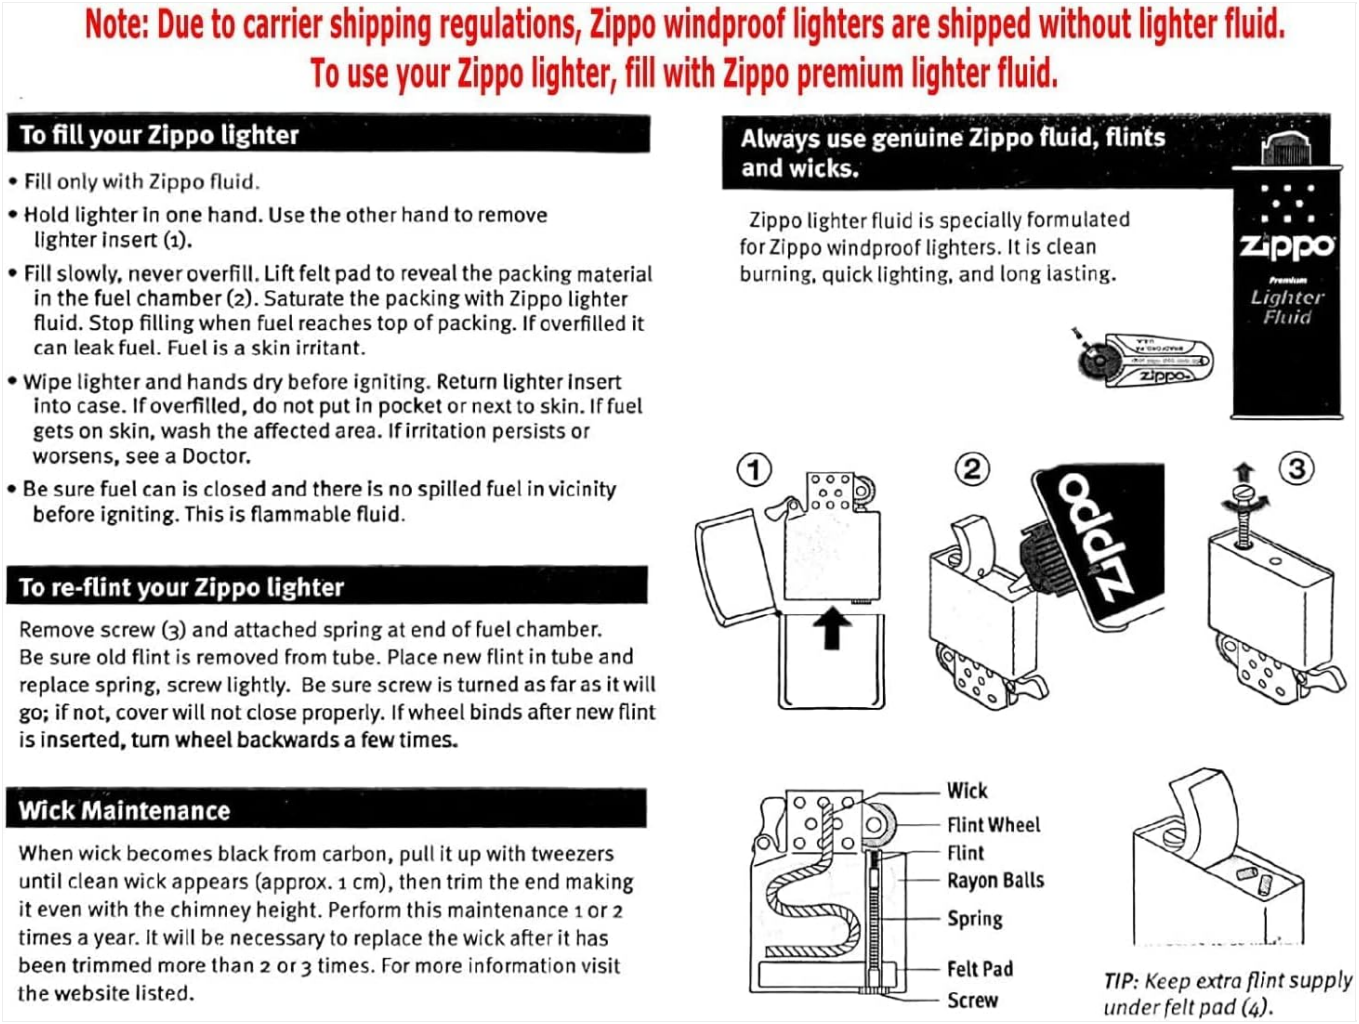


Figure 2: Detailed instructions for filling, re-flinting, and wick maintenance.

Video Guide: Getting Started with Your Zippo Lighter

Your browser does not support the video tag.

Video 1: Official Zippo guide on how to get started with your windproof lighter, including filling instructions and safety tips.

Operating Your Zippo Lighter

Once filled with Zippo lighter fluid, your lighter is ready for use.

Igniting the Lighter

To ignite, simply open the lid and spin the flint wheel with your thumb. The flint wheel will strike the flint, creating a spark that ignites the fluid-soaked wick. To extinguish the flame, close the lid firmly. The Zippo lighter does not self-extinguish.

Maintenance

Re-flinting Your Zippo Lighter

When the flint no longer produces a spark, it needs to be replaced. To replace the flint:

1. Remove the inside unit from the case.
2. Unscrew the flint spring and screw located at the bottom of the inside unit.

3. Remove the old flint and insert a new Zippo flint into the tube.
4. Replace the flint spring and screw, turning it clockwise until it is tight. Do not overtighten. If the wheel binds, unscrew slightly.

Wick Maintenance

The wick may require occasional maintenance to ensure proper flame. When the wick becomes black from carbon, pull it up with tweezers until a clean wick appears (approximately 1 cm). Trim the end of the wick, ensuring it is even with the chimney height. Replace the wick after it has been trimmed two or three times, or if it no longer draws fluid effectively. For more information, visit the official Zippo website.

Specifications

- **Brand:** Zippo
- **Model:** #Z454
- **Material:** Metal
- **Item Weight:** 2.08 ounces
- **Fuel Type:** Zippo lighter fluid (sold separately)
- **Product Dimensions:** 2.25"L x 0.5"W x 1.5"Th
- **Origin:** Made in USA



Figure 3: Zippo Windproof Lighter #Z454 with Wild Trout Bass Fishing Rod design.



Figure 4: Key features of Zippo Windproof Lighters: Windproof Design, Made in Bradford, PA USA, Lifetime Guarantee, Refillable with Zippo Lighter Fluid.

Warranty and Support

Zippo Lifetime Guarantee

Your Zippo Windproof Lighter is backed by the world-famous Zippo Guarantee: "It works or we fix it free." Any Zippo pocket lighter, when returned to the factory, will be put in first-class mechanical condition free of charge, regardless of age or condition. The finish, however, is not guaranteed. This guarantee provides specific legal rights, and you may also have other rights which vary from state to state. Other Zippo products carry their own specific warranties.
For repair instructions or further support, please refer to the information provided with your product packaging or visit the official Zippo website.

© Zippo Manufacturing Company. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09WKVWFPJ

More documents and user manuals: **https://manuals.plus/**