Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ENUODA XZLS-128GB-1PK

ENUODA 128GB USB 2.0 Flash Drive Instruction Manual

Model: XZLS-128GB-1PK

Introduction

The ENUODA 128GB USB 2.0 Flash Drive is a portable storage device designed for convenient data transfer and backup. It features a swivel design for connector protection and broad compatibility with various USB-enabled devices.
This manual provides essential information for setting up, operating, maintaining, and troubleshooting your flash drive.



The ENUODA 128GB USB 2.0 Flash Drive, featuring a protective swivel design.

Setup

The ENUODA 128GB USB 2.0 Flash Drive is designed for plug-and-play functionality, requiring no special software installation.

1. **Insert the Flash Drive:** Locate an available USB port on your computer, laptop, TV, car audio system, or other compatible device. Gently insert the metal USB connector of the flash drive into the port.
2. **Automatic Recognition:** Your device should automatically detect the flash drive. On most operating systems (Windows, macOS, Linux), the drive will appear as a removable storage device.
3. **Accessing Files:** Once recognized, you can access the drive through your computer's file explorer (e.g., "This PC" on Windows, "Finder" on macOS) or directly from the media player interface on other devices.



The ENUODA 128GB USB Flash Drive features plug-and-play functionality and an LED activity indicator.

Operating Instructions

Using your ENUODA flash drive for data storage and transfer is straightforward:

1. **Transferring Files to the Flash Drive:**
   - Open the folder containing the files you wish to transfer.
   - Open the flash drive folder (e.g., "Removable Disk" or "ENUODA USB Drive").
   - Drag and drop the desired files or folders from your computer to the flash drive folder. Alternatively, copy the files (Ctrl+C or Cmd+C), then paste them into the flash drive folder (Ctrl+V or Cmd+V).
2. **Transferring Files from the Flash Drive:**
   - Open the flash drive folder.
   - Drag and drop the desired files or folders from the flash drive to a folder on your computer. Alternatively, copy the files, then paste them into your desired computer folder.

3. **Safe Removal (Recommended):** To prevent data corruption, always safely remove the flash drive before physically disconnecting it.
    - **Windows:** Click the "Safely Remove Hardware and Eject Media" icon in the system tray (bottom-right corner), then select your flash drive.
    - **macOS:** Drag the flash drive icon from your desktop or Finder sidebar to the Trash icon, or right-click (Control-click) the drive icon and select "Eject."


Your browser does not support the video tag.

Official video demonstrating the ENUODA USB Memory Stick's swivel design and various capacities and colors. This video illustrates the physical product and its features relevant to handling and use.

Maintenance

To ensure the longevity and optimal performance of your ENUODA flash drive, follow these maintenance guidelines:

- **Protect the Connector:** Utilize the 360° rotating metal cover to protect the USB connector from dust, dirt, and physical damage when the drive is not in use.
- **Avoid Extreme Conditions:** Do not expose the flash drive to extreme temperatures, direct sunlight, high humidity, or strong magnetic fields.
- **Handle with Care:** Avoid dropping the drive or subjecting it to strong impacts.
- **Keep Clean:** If necessary, gently wipe the exterior of the drive with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Regular Backups:** While flash drives are reliable, it is always recommended to back up important data to multiple locations to prevent data loss.

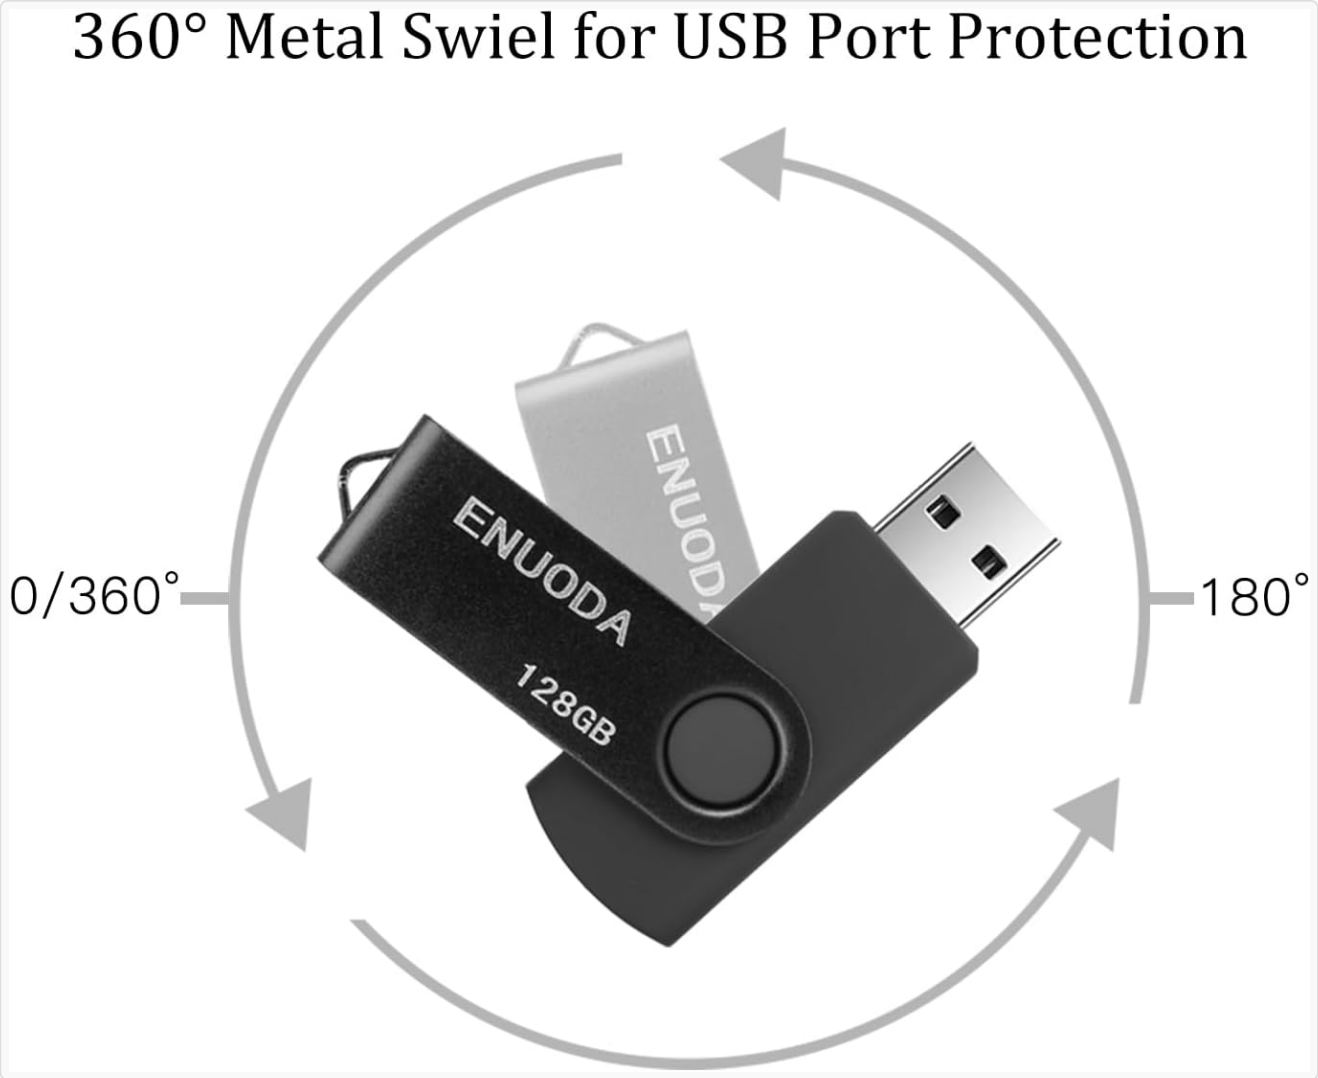

The 360° metal swivel protects the USB connector when not in use.

TROUBLESHOOTING

If you encounter issues with your ENUODA 128GB USB 2.0 Flash Drive, consider the following common solutions:

- **Drive Not Recognized:**
  - Try inserting the flash drive into a different USB port on your device.
  - Test the flash drive on another computer or compatible device to rule out a device-specific issue.
  - Ensure your operating system drivers are up to date.
  - Check Disk Management (Windows) or Disk Utility (macOS) to see if the drive is detected but not assigned a drive letter or needs formatting. **Note: Formatting will erase all data on the drive.**
- **Slow Transfer Speeds:**
  - Ensure you are using a USB 2.0 port for optimal USB 2.0 speeds. While compatible with USB 1.1, speeds will be significantly slower.
  - Transferring many small files can be slower than transferring a few large files of the same total size.
  - Close other applications that might be using system resources or accessing the drive.
- **Files Cannot Be Written or Deleted:**
  - Check if the drive is full. Delete unnecessary files or transfer them to another storage location.
  - Verify that the files or folders are not set to "read-only."

- Ensure you have the necessary permissions to write to the drive on your operating system.

Specifications

Feature	Detail
Brand	ENUODA
Model Name	UFD-XZLS-128GB
Model Number	XZLS-128GB-1PK
Memory Storage Capacity	128 GB
Hardware Interface	USB 2.0 (backward compatible with USB 1.1)
Read Speed	Up to 25 MB/s
Write Speed	Up to 12 MB/s
Special Features	Dust Proof, LED Indicator, Lightweight, Portable, Wear Resistant, 360° Swivel Design
Compatible Devices	Personal Computers (desktops, laptops), TVs, Car Audio Systems, Speakers, etc.
Operating System Compatibility	Windows 11 / 10 / 8.1 / 8 / 7 / XP / Vista / 2000 / ME / NT, Linux, Mac OS
Color	Black
Item Dimensions (D x W x H)	2.37"D x 3.94"W x 0.48"H
Item Weight	0.01 kg



The flash drive offers wide compatibility with various USB-enabled devices.

Warranty Information

This ENUODA USB Flash Drive comes with a**1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.
The warranty does not cover damage caused by misuse, accident, unauthorized modification, or external causes such as drops or liquid exposure.
Please retain your proof of purchase for warranty claims.

Support

For further assistance, technical support, or warranty inquiries regarding your ENUODA 128GB USB 2.0 Flash Drive, please contact ENUODA customer service.
You can also visit the official ENUODA Store for more product information and support resources:

Visit the ENUODA Store

© 2023 ENUODA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09WY73DSN

More documents and user manuals: **https://manuals.plus/**