Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kinhank Super Console Arcade X3

Kinhank Super Console Arcade X3 User Manual

Model: Super Console Arcade X3

Introduction

Welcome to the world of classic gaming with your new Kinhank Super Console Arcade X3. This console is designed to provide an immersive arcade experience with a vast library of pre-installed games and support for multiple emulators. Featuring an upgraded S905X3 chip, a 3D joystick, and customizable buttons, it offers smooth performance and versatile control. This manual will guide you through the setup, operation, and maintenance of your console to ensure an optimal gaming experience.



The Kinhank Super Console Arcade X3 in action, connected to a display, emphasizing its plug-and-play functionality and extensive game library.

Package Contents

Before you begin, please verify that all items are present in your package:

- Kinhank Super Console Arcade X3 Unit
- Power Adapter
- TF Card (Pre-installed with games)
- HDMI Cable
- USB 2.0 Cable



Contents of the product package, including the console, power adapter, TF card, HDMI cable, and USB 2.0 cable.

Setup Guide

Follow these steps to set up your Kinhank Super Console Arcade X3:

1. **Connect to Display:** Use the provided HDMI cable to connect the console's HD port to an HDMI input on your television or monitor.
2. **Power Connection:** Connect the power adapter to the DC port on the console and then plug it into a power outlet.
3. **Insert TF Card:** Ensure the TF card (pre-installed with games) is securely inserted into the TF-Card slot on the console.
4. **Power On:** Locate the ON/OFF switch on the console and slide it to the 'ON' position. The console will power on and boot up automatically.
5. **Select Input:** Switch your television or monitor's input source to the corresponding HDMI port you connected the console to.

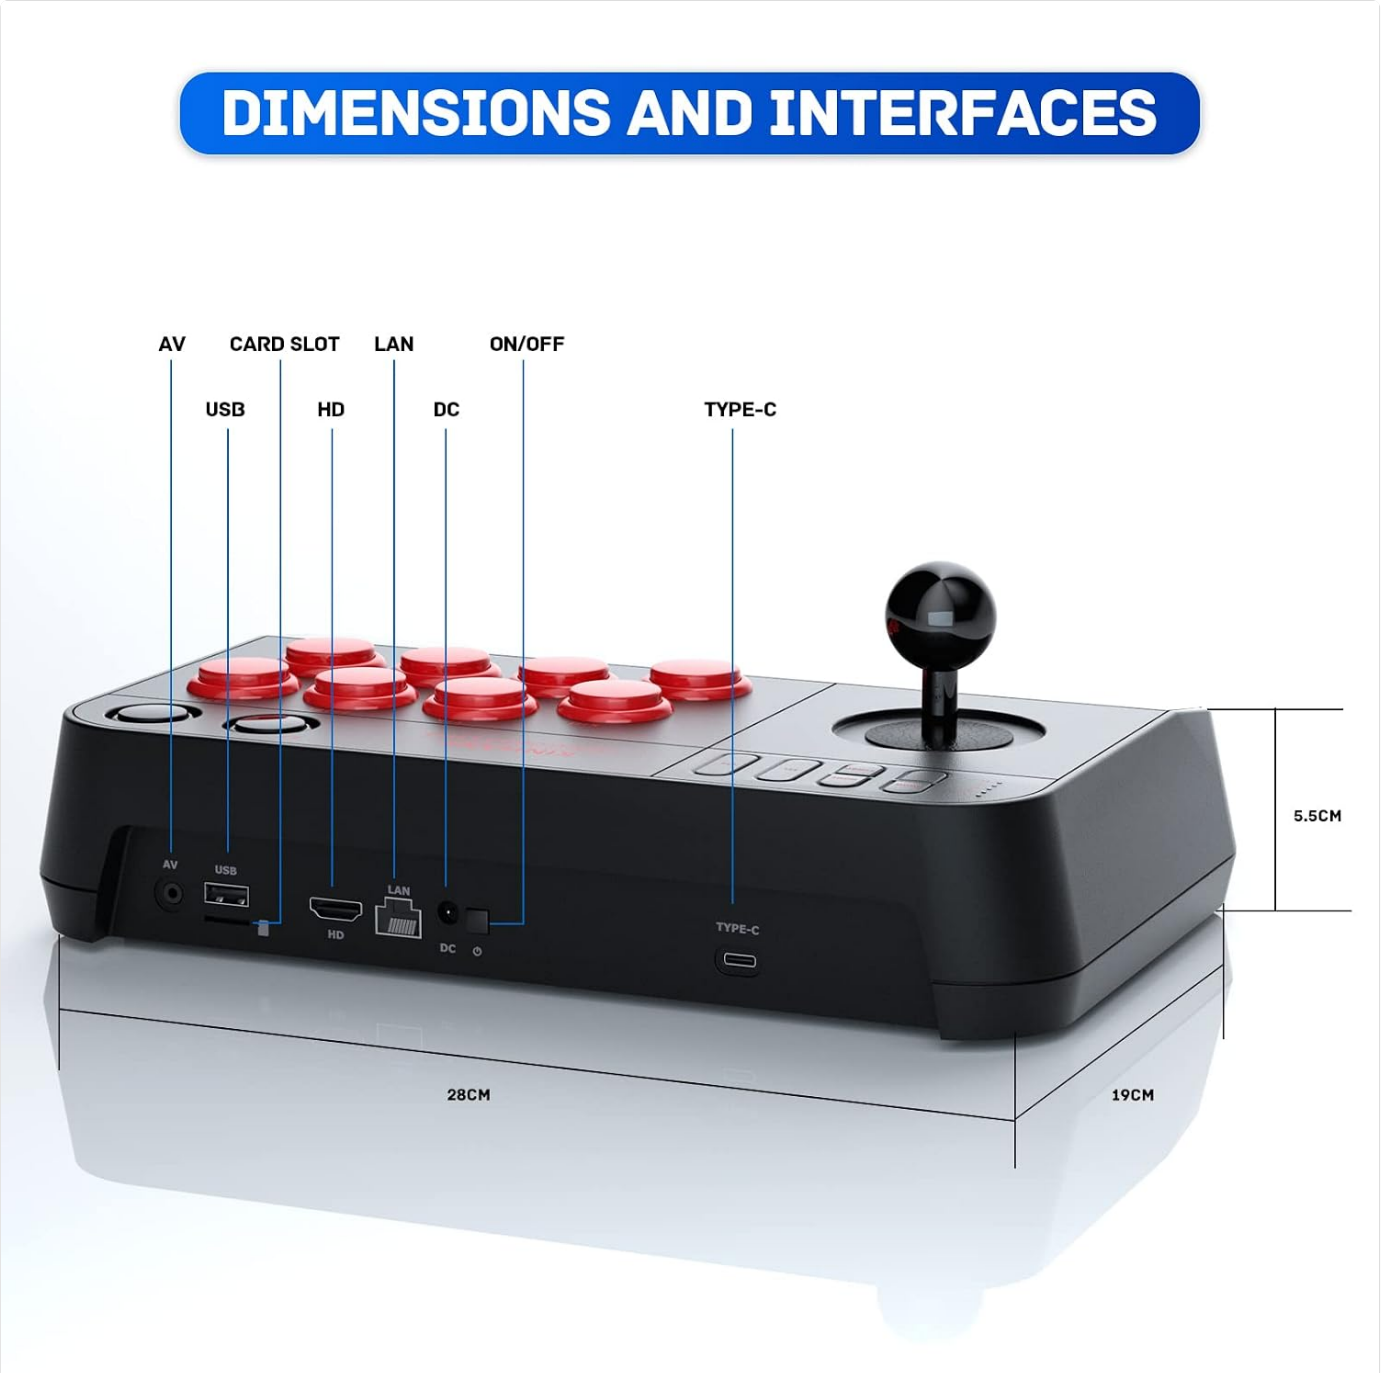


Diagram showing the dimensions and various interface ports of the Kinhank Arcade Game Console, including AV, USB, HD, LAN, DC, and Type-C.



Overview of the Kinhank Arcade Game Console, showing the main unit, a 64GB TF-Card, and a screen displaying game content.

Operating Instructions

Basic Navigation

Use the **3D Joystick** to navigate through menus and select games. The joystick supports 360-degree rotation for precise control. The red action buttons (A, B, C, D, E, F) are used for selection, confirmation, and in-game actions.



Close-up of the 3D joystick, highlighting its 360-degree rotation capability for precise control.

Game Selection and Play

The console comes with over 25,000 pre-installed games across more than 40 emulators. Navigate through the game library using the joystick. Select a game by pressing the appropriate action button (usually 'A' or 'X').



User interacting with the Kinhank Arcade Game Console, demonstrating gameplay on a large screen with pre-installed games.

Turbo Function

The console supports a turbo (burst) function for rapid button presses. Refer to the console's specific button layout for activating and deactivating this feature, typically indicated by a 'TURBO' button or a combination of buttons.



Illustration demonstrating the burst/turbo function feature of the console, allowing for rapid button presses in games.

Customizable Buttons

The console features customizable buttons, allowing you to remap controls to your preference for various games or emulators. Consult the on-screen menu options for button remapping settings.



Detailed view of the console's customizable buttons and the 360-degree rotatable 3D joystick, along with an internal weighted iron for stability.

Maintenance

Proper maintenance ensures the longevity and performance of your console:

- **Cleaning:** Use a soft, dry cloth to wipe down the console's exterior. Avoid using liquid cleaners or abrasive materials.
- **Cooling System:** The console features a built-in cooling fan to dissipate heat and maintain optimal operating temperature. Ensure the ventilation openings are not obstructed during use.
- **Storage:** When not in use, store the console in a cool, dry place away from direct sunlight and extreme temperatures.



Diagram illustrating the built-in cooling fan system of the console, designed to maintain optimal operating temperature.

Troubleshooting

If you encounter issues with your console, refer to the following common problems and solutions:

- **No Power:**
  - Ensure the power adapter is securely connected to both the console and a working power outlet.
  - Check that the ON/OFF switch is in the 'ON' position.
- **No Display on TV:**
  - Verify the HDMI cable is firmly connected to both the console and the TV.
  - Confirm your TV's input source is set to the correct HDMI port.

- Try a different HDMI cable or TV port.


- **Games Not Loading / Freezing:**
  - Ensure the TF card is properly inserted.
  - Restart the console.
  - Check if the game file might be corrupted (less common for pre-installed games).
- **Joystick or Buttons Unresponsive:**
  - Restart the console.
  - Ensure no debris is lodged around the joystick or buttons.

Specifications

Model	Super Console Arcade X3
Chipset	Amlogic S905X3
Memory	4GB DDR3 RAM + 32GB EMMC Storage
Pre-installed Games	25,000+ Games
Emulators	40+ Emulators
Joystick Type	3D Joystick, 8-Way, 360° Rotation
Cooling System	Built-in Cooling Fan
Dimensions	11 x 5.9 x 2.1 inches (28cm x 19cm x 5.5cm)



Diagram illustrating the console's internal memory configuration: 4GB DDR3 RAM and 32GB EMMC storage.

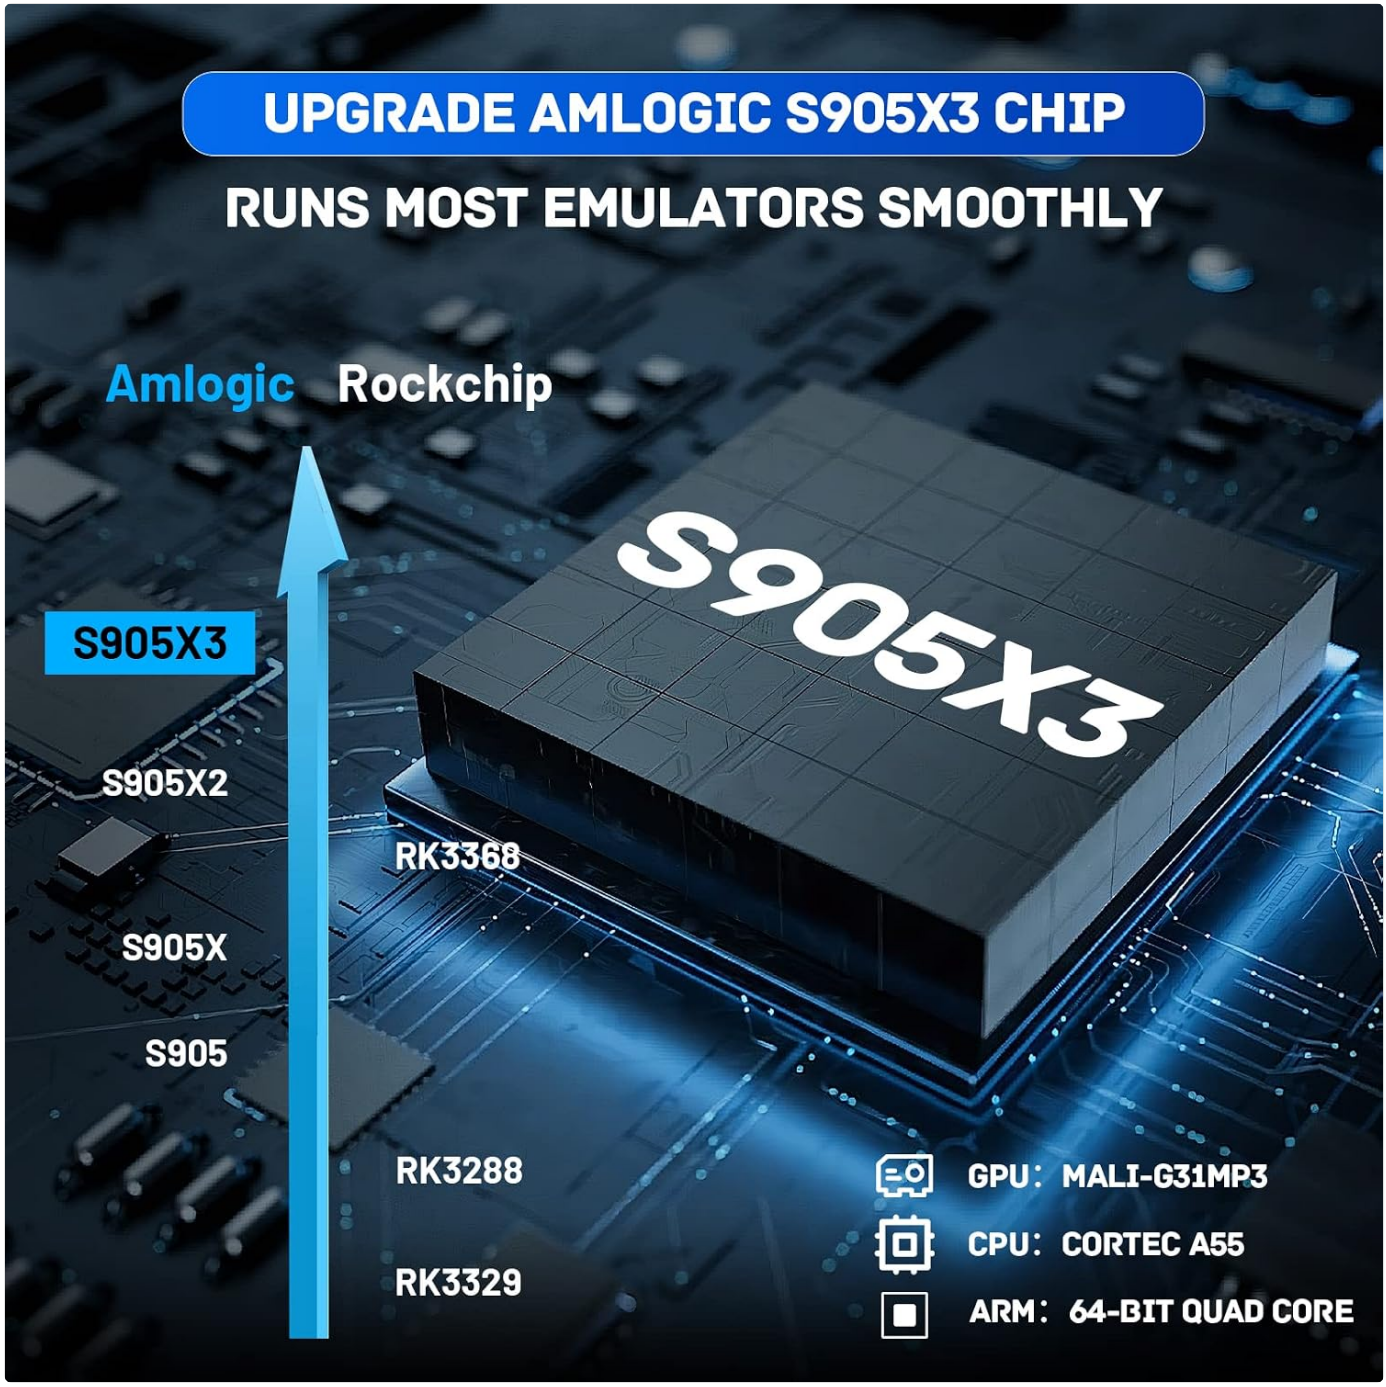

Visual representation of the upgraded Amlogic S905X3 chip, highlighting its performance improvement over previous generations for smooth emulation.

Warranty and Support

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Kinhank website. Contact information for customer service is typically available on the manufacturer's product page or support section.

© 2023 Kinhank. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09WY9F8FG

More documents and user manuals: **https://manuals.plus/**