## eucos EUTP-010

# EUCOS 62-inch Phone Tripod and Selfie Stick with Remote (Model EUTP-010) Instruction Manual

Brand: EUCOS | Model: EUTP-010

### Introduction

This instruction manual provides comprehensive guidance for the setup, operation, maintenance, and troubleshooting of your EUCOS 62-inch Phone Tripod and Selfie Stick (Model EUTP-010). Please read this manual thoroughly before using the product to ensure proper functionality and longevity.



*Figure 1: EUCOS 62-inch Phone Tripod and Selfie Stick with Remote. This image displays the product in its various configurations: as a handheld selfie stick, a fully extended tripod, and a compact phone holder. The detachable Bluetooth remote is also shown.*

## What's in the Box

- 1x EUCOS Phone Tripod
- 1x Vertical Phone Mount
- 1x Wireless Remote Shutter (with 1 CR2032 battery included)

## Setup Instructions

### 1. Unfolding the Tripod Legs

1. Hold the main body of the tripod.
2. Rotate the orange ring counter-clockwise to unlock the base.
3. Gently pull the three legs outwards until they are fully extended and stable.
4. Push the orange ring down to the main pole to secure the legs in place.
5. Rotate the orange ring clockwise to lock the legs.




*Figure 2: The tripod with its legs fully extended, demonstrating stability for stationary use.*

### 2. Attaching the Phone Mount

- The phone mount is typically pre-attached. If detached, align the screw thread on the phone mount with the 1/4-inch screw on the tripod head.
- Rotate the phone mount clockwise until it is securely fastened.
- To insert your phone, rotate the knob on the phone mount counter-clockwise to expand the clamp. Place your phone securely within the clamp (compatible with phones 2.2" to 3.6" wide) and then rotate the knob clockwise to tighten it.
- The phone mount also features a cold shoe mount for attaching accessories like microphones or LED lights.

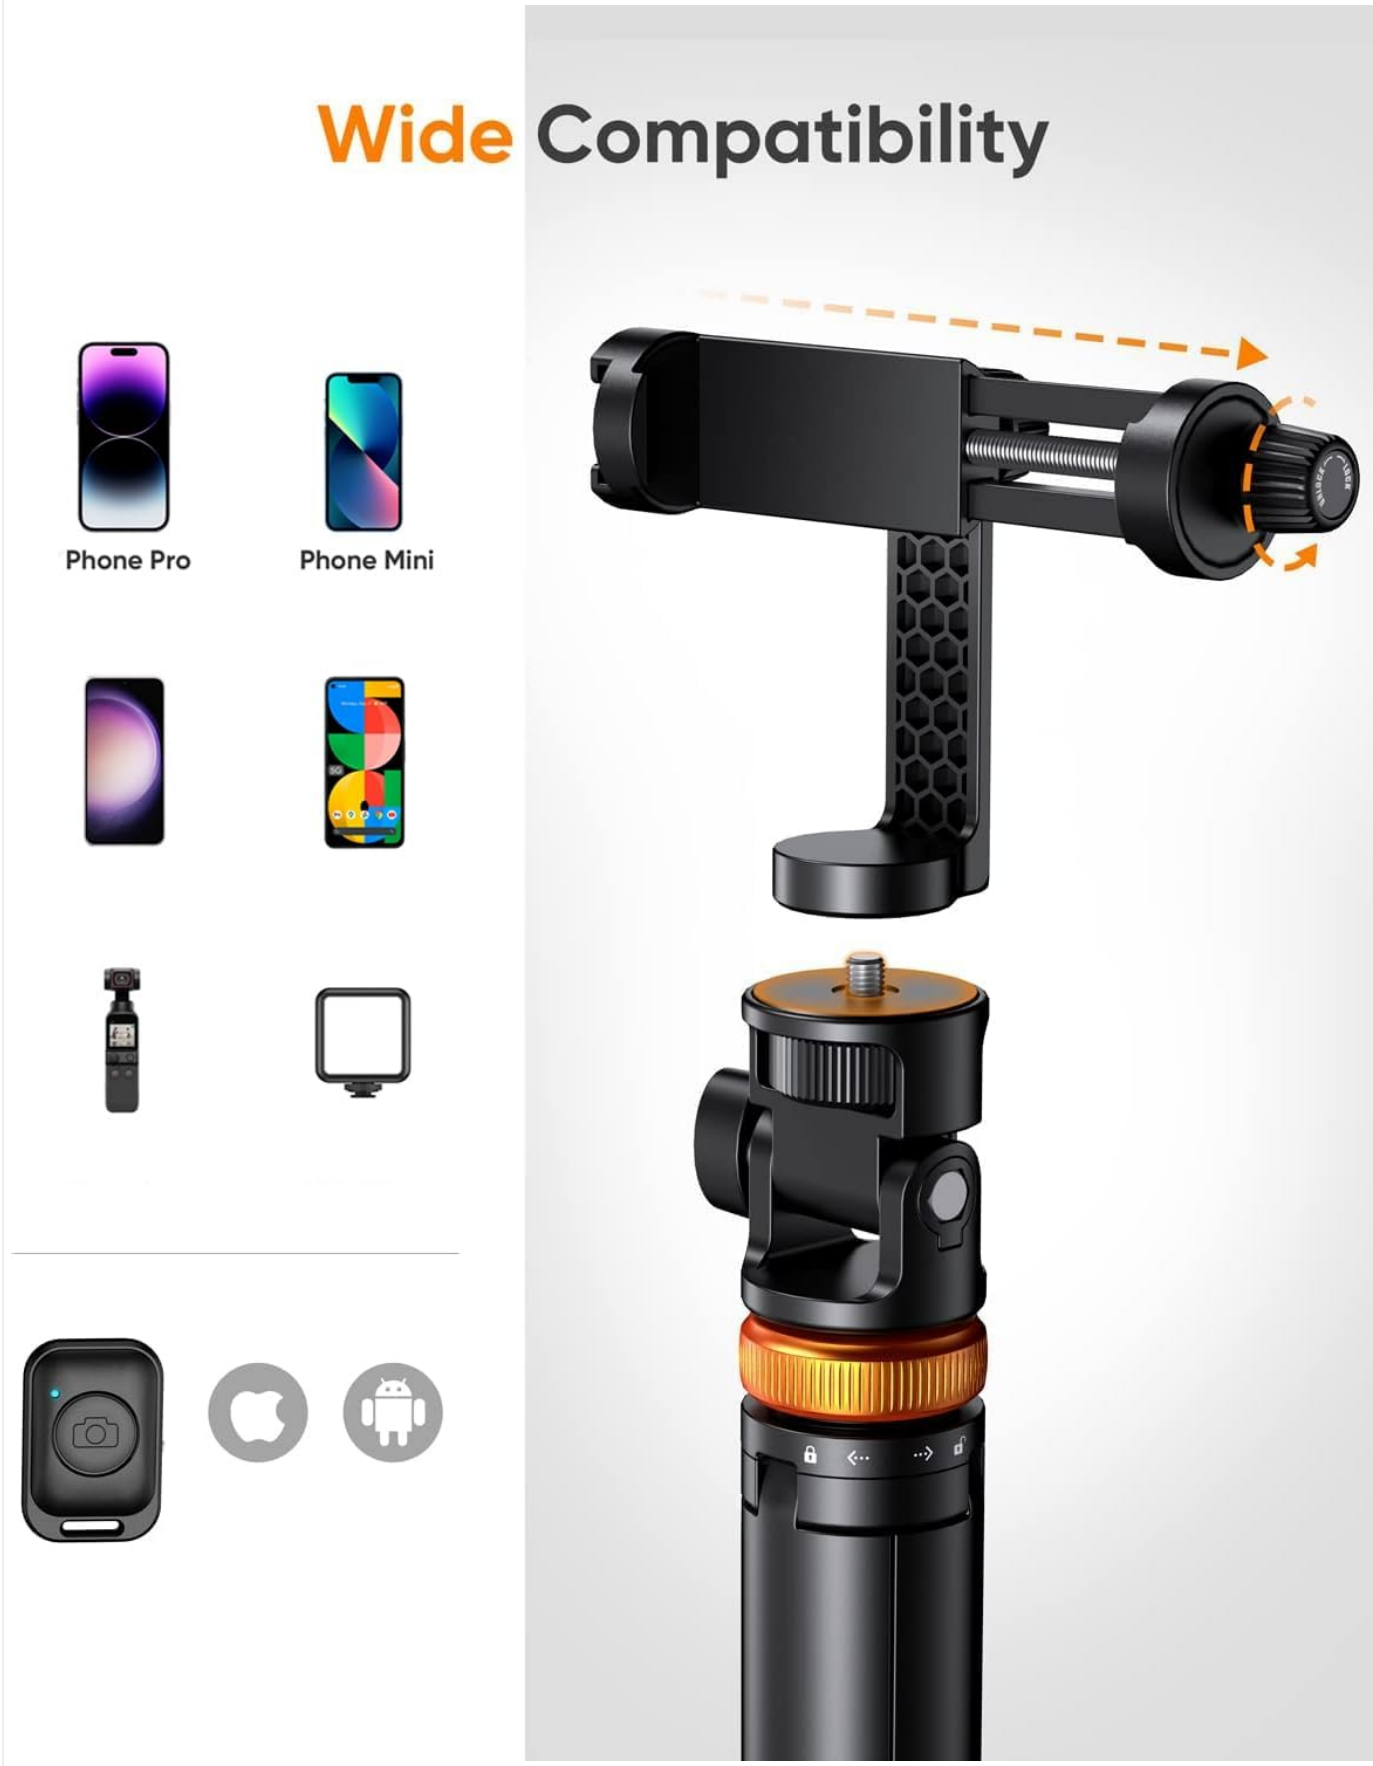



*Figure 3: Illustration of the phone mount's wide compatibility with various smartphone models and its attachment mechanism to the tripod.*

### 3. Pairing the Bluetooth Remote

1. Locate the wireless remote shutter, which is stored in a dedicated slot on the tripod handle.
2. Turn on the remote by pressing and holding the button until a blue indicator light flashes.
3. On your smartphone, navigate to Bluetooth settings and search for available devices.

4. Select "AB Shutter3" or a similar name from the list to pair. The blue light on the remote will stop flashing once paired.
5. Open your phone's camera app. The remote can now be used to capture photos or start/stop video recordings from up to 33ft/10m away.




*Figure 4: A hand holding the Bluetooth remote, demonstrating its use for hands-free photo and video capture.*

## Operating Instructions

### 1. Adjusting Height and Angle

- **Height Adjustment:** To extend the main pole, simply pull it upwards. The pole can extend up to 62 inches. To retract, push it downwards.
- **Phone Mount Rotation:** The phone mount allows for 360° rotation. Loosen the knob on the side of the mount, adjust to your desired orientation (portrait or landscape), and then tighten the knob to secure.
- **Angle Adjustment:** The tripod head offers 180° angle adjustment. Loosen the appropriate knob on the tripod head, tilt your phone to the desired angle, and then tighten the knob.




*Figure 5: Demonstrates the 360° rotation and 180° angle adjustment capabilities of the phone mount for flexible shooting perspectives.*

### 2. Selfie Stick Mode

- Ensure the tripod legs are folded and locked into the handle position.
- Extend the main pole to your desired length.
- Hold the handle firmly and use the Bluetooth remote for hands-free capture.

### 3. Tripod Mode

- Unfold and lock the tripod legs as described in the Setup section.
- Place the tripod on a flat, stable surface.
- Adjust the height and angle of your phone as needed.
- Use the Bluetooth remote to initiate recording or capture photos without disturbing the tripod's stability.

## Maintenance

- **Cleaning:** Wipe the tripod with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Collapse the tripod to its compact size (approximately 12 inches) and store it in a dry place away from extreme temperatures.
- **Battery Replacement:** The remote uses a CR2032 battery. If the remote's indicator light does not flash or it fails to pair, replace the battery.




*Figure 6: The tripod in its collapsed, compact form, highlighting its portability and ease of storage.*

## Troubleshooting

- **Remote not pairing:**
  - Ensure the remote is charged or has a fresh CR2032 battery.
  - Make sure Bluetooth is enabled on your phone and the remote is in pairing mode (blue light flashing).
  - Try unpairing and re-pairing the remote in your phone's Bluetooth settings.

- **Tripod instability:**
  - Ensure the tripod legs are fully extended and the orange locking ring is pushed down and rotated clockwise to secure them.
  - Avoid placing the tripod on uneven surfaces.
  - When fully extended, especially in windy conditions, the tripod's stability may be reduced. Consider using it at a lower height or adding weight to the base if possible.
- **Phone not fitting securely:**
  - Ensure the phone mount knob is rotated counter-clockwise to fully open the clamp before inserting your phone.
  - Tighten the knob clockwise firmly after placing the phone.
  - Verify your phone's width is within the compatible range of 2.2" to 3.6".

## Specifications

| | |
|---|---|
| **Model Name** | EUTP-010 |
| **Maximum Height** | 62 Inches |
| **Collapsed Length** | Approx. 12 Inches |
| **Item Weight** | 12.8 ounces (0.8 Pounds) |
| **Weight Limit** | 2.2 Pounds |
| **Material** | Aluminum, Modified Nylon PA6/6 |
| **Compatible Devices** | iPhone/Android (2.2" to 3.6" wide) |
| **Special Feature** | Detachable Bluetooth Remote Control |
| **Remote Battery** | 1x CR2032 (included) |
| **Tripod Head Type** | Rotation Head |

## Warranty and Support

EUCOS offers a **100% Lifetime Protection** for this product. This guarantees reliable performance and covers against any manufacturing defects or issues throughout the product's lifespan. For support or warranty claims, please contact EUCOS customer service through your original point of purchase or visit the official EUCOS website.


## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

## Answered questions about this manual

**Can I print out the manual for the EUCOS EUTP-010 Phone Tripod and Selfie Stick?**

Yes, you can print the manual for the EUCOS EUTP-010 directly from your web browser. Since the manual is hosted as a webpage, follow these steps:On a Computer: Press Ctrl + P (Windows) or...

**Read full answer**

**How do I replace the battery on the EUCOS EUTP-010 remote control?**

To replace the battery in your EUCOS EUTP-010 remote control, follow these steps:Identify the Battery Type: The remote uses a single CR2032 lithium coin cell battery.Access the Battery Compartment: While the manual does not...

**Read full answer**