Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DEWENWILS 767637601221

DEWENWILS LED Corner Floor Lamp Instruction Manual

Model: 767637601221
Brand: DEWENWILS

1. Introduction and Overview

Thank you for purchasing the DEWENWILS LED Corner Floor Lamp. This manual provides detailed instructions for the safe and efficient use of your new lighting product. This set includes two sleek, minimalist floor lamps designed to provide ambient and accent lighting for various indoor spaces such as living rooms, bedrooms, and offices. Featuring stepless dimming and a convenient foot switch, these lamps offer customizable illumination to suit your needs.



Figure 1.1: Two DEWENWILS LED Corner Floor Lamps providing ambient lighting in a modern living room setting.

2. Safety Instructions

Please read all safety instructions carefully before installation and operation. Retain this manual for future reference.

- Ensure the power supply voltage matches the lamp's requirements (120 Volts).
- Do not disassemble or modify the lamp. There are no user-serviceable parts inside.
- Keep the lamp away from water and high humidity environments. This product is not waterproof.
- Place the lamp on a stable, flat surface to prevent tipping. The weighted base is designed for stability.
- Avoid direct eye exposure to the LED light source for prolonged periods.
- Unplug the lamp from the power outlet before cleaning or moving.
- Do not cover the lamp with cloth or other materials while it is in operation, as this may cause overheating.
- The integrated LED light source is designed for long life and does not require bulb replacement.

3. Package Contents

Verify that all components are present and undamaged upon opening the package:

- 2 x DEWENWILS LED Corner Floor Lamp (integrated light pole and base)

- 2 x Power Adapter with Foot Switch
- Instruction Manual (this document)

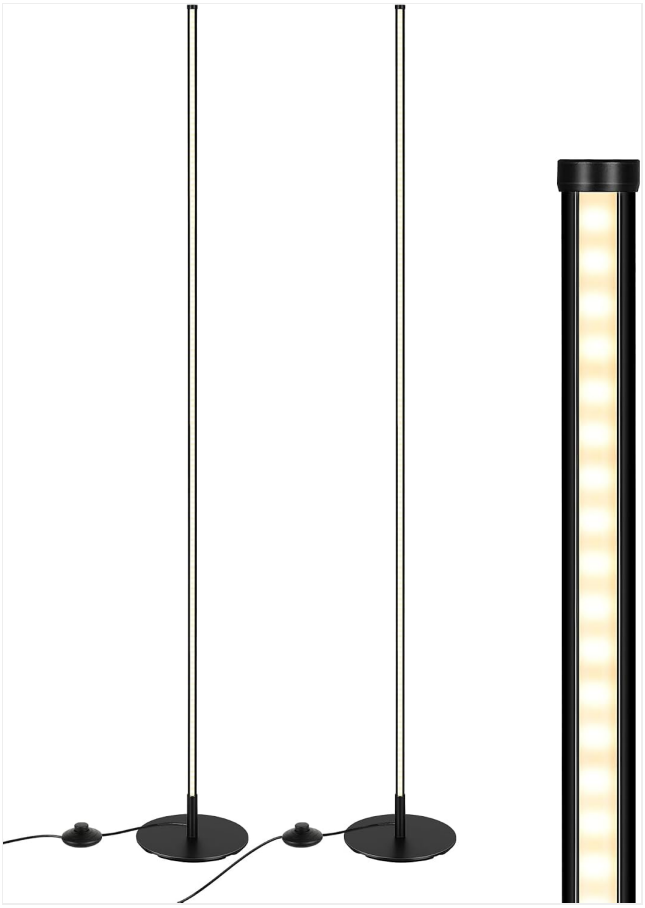


Figure 3.1: Overview of the lamp components, including the LED strip and base.

4. Setup and Assembly

The DEWENWILS LED Corner Floor Lamp is designed for quick and easy assembly. No additional tools are required.

1. Carefully remove all components from the packaging.
2. Take the integrated light pole and align its threaded end with the opening on the lamp base.
3. Gently screw the light pole clockwise into the base until it is securely tightened. Ensure it is firm and stable.
4. Place the assembled lamp in your desired location.
5. Plug the power adapter into a standard 120V AC electrical outlet.

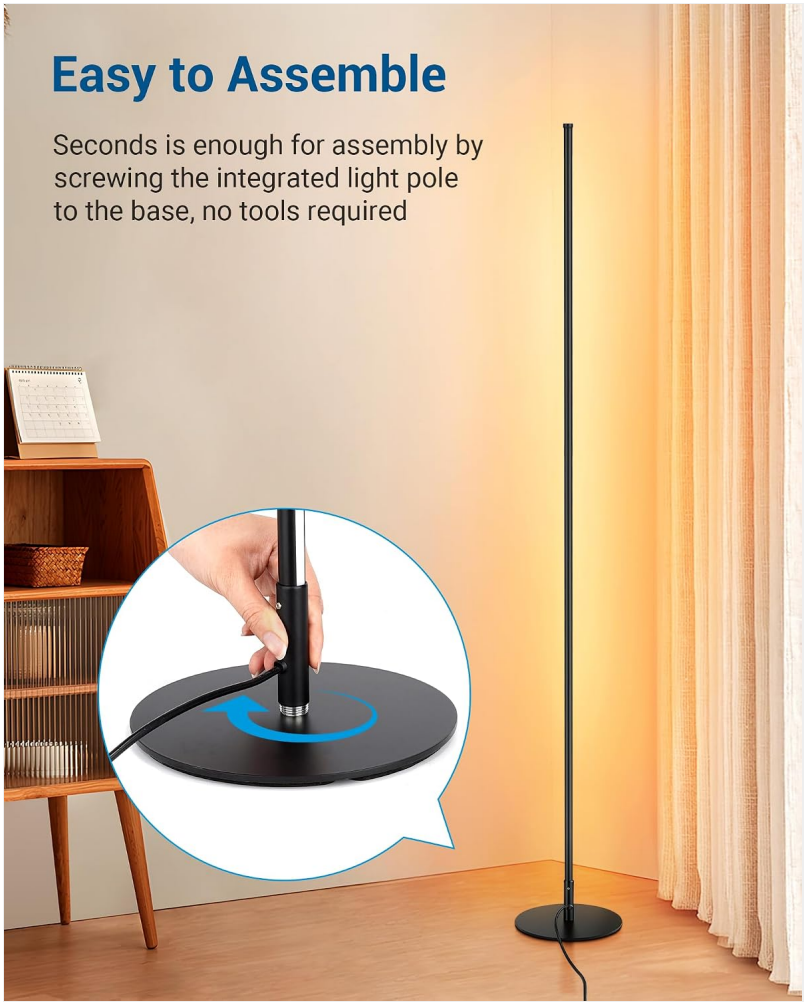


Figure 4.1: Simple assembly process: screw the light pole into the base.

5. Operating Instructions

Your DEWENWILS LED Corner Floor Lamp features a convenient foot switch for easy control and a memory function to recall your last brightness setting.

- **Turning On/Off:** Short press the foot switch to turn the lamp ON or OFF.
- **Adjusting Brightness (Stepless Dimming):**
  - Long press the foot switch to activate the dimming function.
  - The brightness will gradually adjust between 10% and 100%.
  - Release your foot from the switch when the desired brightness level is reached.
- **Memory Function:** The lamp will automatically remember the last brightness setting used when it was turned off. When you turn the lamp back on, it will resume at that previously set brightness level.

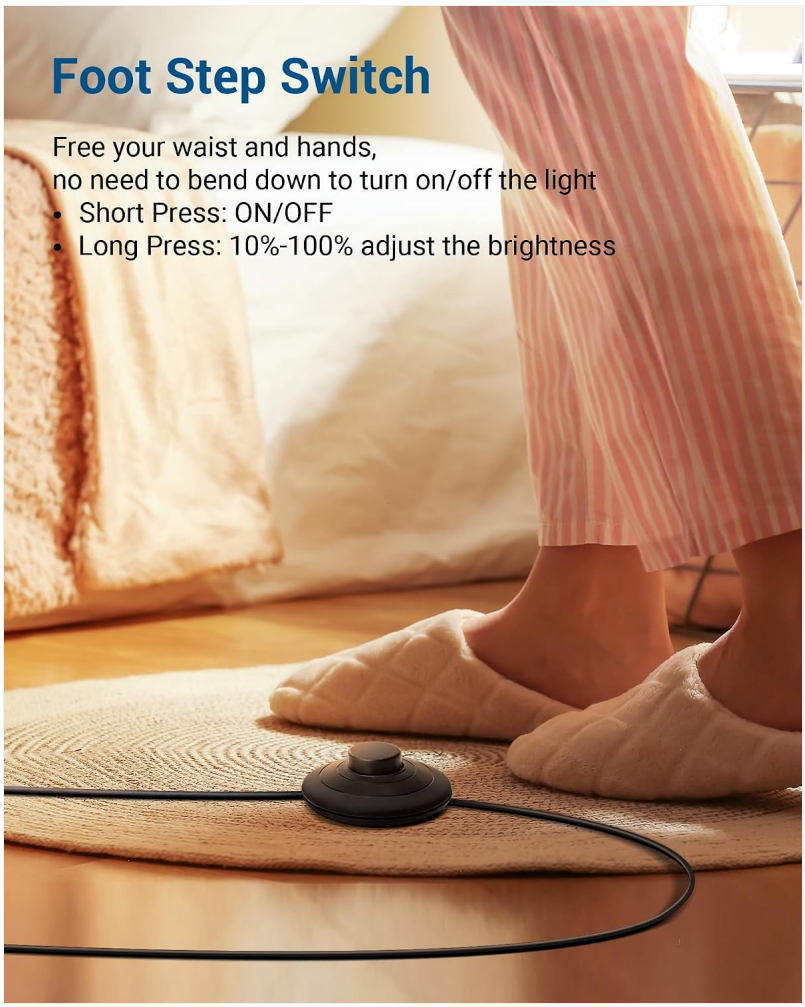


Figure 5.1: The foot switch allows for easy power and brightness control.

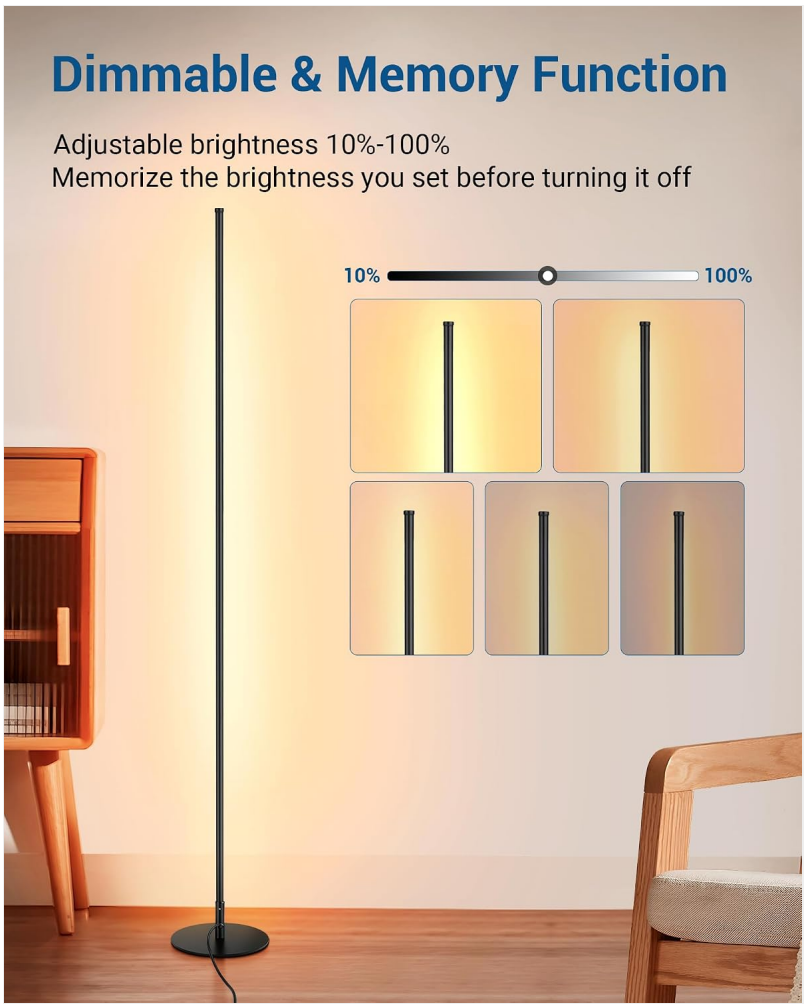


Figure 5.2: The lamp offers stepless dimming from 10% to 100% brightness.

6. Maintenance

The DEWENWILS LED Corner Floor Lamp requires minimal maintenance due to its durable construction and long-lasting integrated LED.

- **Cleaning:** Before cleaning, always unplug the lamp from the power outlet. Use a soft, dry cloth to wipe down the lamp's surface. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.
- **LED Lifespan:** The integrated LED is designed to last over 30,000 hours under normal use, eliminating the need for bulb replacement.
- **Storage:** If storing the lamp for an extended period, unplug it and store it in a cool, dry place, protected from dust and moisture.

7. Troubleshooting

If you encounter any issues with your DEWENWILS LED Corner Floor Lamp, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in. Power outlet is not active. Foot switch malfunction.	Ensure the power adapter is securely plugged into a working outlet. Test the outlet with another device. Ensure the foot switch is fully pressed.

Problem	Possible Cause	Solution
Light flickers or is unstable.	Loose connection. Power fluctuations.	Check all connections, including the pole to base and power adapter to outlet. Try plugging into a different outlet.
Cannot adjust brightness.	Incorrect operation of foot switch.	Ensure you are long-pressing the foot switch to activate dimming.

If the problem persists after trying these steps, please contact DEWENWILS customer support for assistance.

8. Specifications

Feature	Detail
Model Number	767637601221
Brand	DEWENWILS
Light Source Type	Integrated LED
Color Temperature	3000K Warm White
Brightness	1100 Lumen (Max)
Dimmable Range	10% - 100% (Stepless)
Wattage	19 Watts
Voltage	120 Volts
Switch Type	Foot Switch (Push Button)
Material	Aluminum, Metal, Acrylonitrile Butadiene Styrene
Product Dimensions	7.8"D x 7.8"W x 57.5"H
Item Weight	8 Pounds (per lamp)
Lifespan	Over 30,000 Hours
Indoor/Outdoor Usage	Indoor Only



Figure 8.1: Key dimensions of the DEWENWILS LED Corner Floor Lamp.

9. Warranty and Support

DEWENWILS stands behind the quality of its products. For warranty information, technical support, or any questions regarding your LED Corner Floor Lamp, please contact DEWENWILS customer service through the retailer's platform or visit the official DEWENWILS website. Please have your model number (767637601221) and purchase date ready when contacting support.

For more information, visit the DEWENWILS Store on Amazon.

© 2024 DEWENWILS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09XWVWTH8

More documents and user manuals: **https://manuals.plus/**