Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl RPJ136

onerbl AC/DC Power Adapter Instruction Manual

Model: RPJ136 Compatible Power Adapter

1. Introduction

This manual provides essential information for the safe and effective use of your onerbl AC/DC Power Adapter, designed for compatibility with the RCA Home Theater Projector RPJ136. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: The onerbl AC/DC Power Adapter and its detachable power cord.

2. Safety Information

To ensure safe operation and prevent damage, observe the following precautions:

- Use the adapter only with compatible devices as specified.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open or repair the adapter. Refer servicing to qualified personnel.
- Ensure the power outlet voltage matches the adapter's input specifications (AC 100-240V).
- Unplug the adapter during lightning storms or when unused for extended periods.



Image 2.1: The adapter features built-in protections against short-circuit, over-voltage, and over-current to safeguard your devices.

3. Package Contents

Verify that all items are present in the package:

- 1 x onerbl AC/DC Power Adapter
- 1 x AC Power Cord (for wall outlet connection)

4. Setup

Follow these steps to connect your power adapter:

1. Connect the AC power cord to the adapter's input port.
2. Plug the other end of the AC power cord into a standard wall outlet (AC 100-240V).
3. Connect the adapter's output connector to the power input port of your RCA Home Theater Projector RPJ136.
4. Ensure all connections are secure.



Image 4.1: Proper connection of the power adapter to a wall outlet and a compatible device.

5. Operating Instructions

Once connected, the adapter will supply power to your compatible device. An indicator light on the adapter typically illuminates when power is being supplied.

- To power on your device, follow the device's specific instructions.
- To disconnect power, first turn off your device, then unplug the adapter from the wall outlet.

6. Maintenance

Proper care extends the life of your power adapter:

- Keep the adapter clean and free from dust. Use a soft, dry cloth for cleaning.
- Do not use liquid cleaners or solvents.
- Store the adapter in a cool, dry place when not in use.

- Avoid bending or crimping the cables excessively.



Image 6.1: The adapter's cable features a durable design with copper wire and a PVC jacket for longevity.

7. Troubleshooting

If you encounter issues, try these basic troubleshooting steps:

- **No Power:** Ensure the adapter is securely plugged into both the wall outlet and the device. Check if the wall outlet is functional.
- **Device Not Charging/Operating:** Verify that the adapter is compatible with your device's power requirements. Inspect the adapter and cables for any visible damage.
- **Overheating:** If the adapter feels excessively hot, unplug it immediately. Ensure it is used in a well-ventilated area and not covered.

8. Specifications

Feature	Detail
Input Voltage	AC 100-240V, 50/60Hz (Worldwide Auto Input)
Wattage	65 watts
Cable Length	Approximately 10 feet (3 meters)
Product Dimensions	6 x 4 x 2 inches (Adapter unit)
Item Weight	9.6 ounces (0.27 Kilograms)
Connector Type	RCA compatible

Feature	Detail
Compatible Devices	RCA Home Theater Projector RPJ136 and other compatible projectors

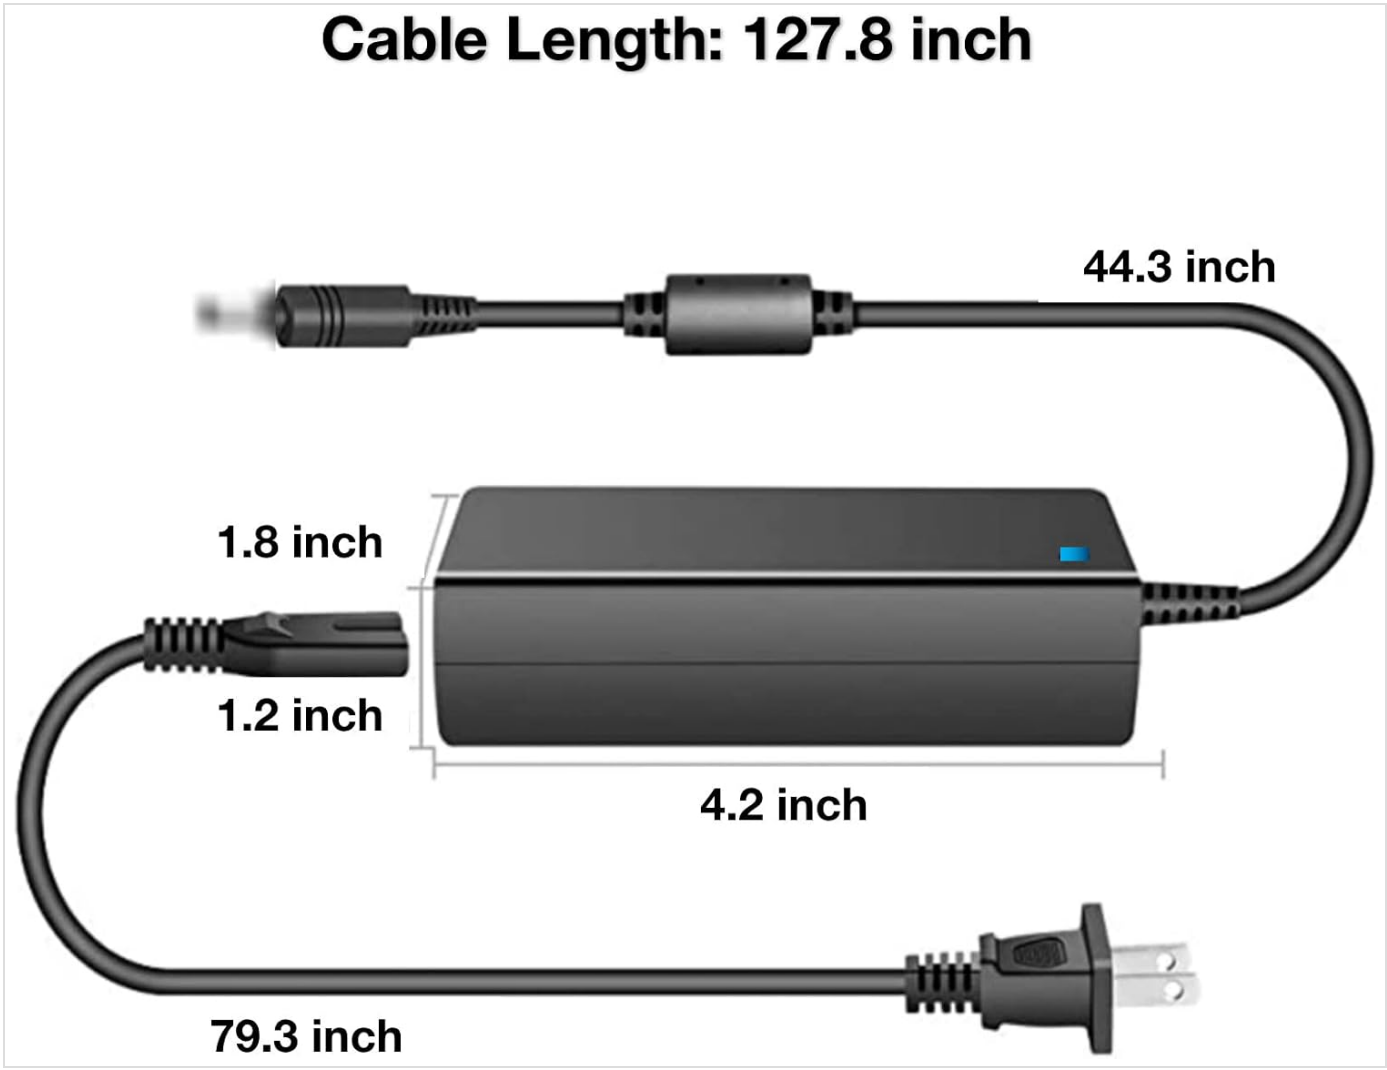


Image 8.1: Detailed dimensions of the power adapter and its cable components.



Image 8.2: Illustration of the extended cable length for flexible placement.

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official onerbl website. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09XX93ZNF

More documents and user manuals: **https://manuals.plus/**