JOYHOOSH T6

JOYHOOSH T6 Wireless Bluetooth Earbuds User Manual

Model: T6 | Brand: JOYHOOSH

1. Introduction

This manual provides detailed instructions for the operation and maintenance of your JOYHOOSH T6 Wireless Bluetooth Earbuds. Please read this manual thoroughly before using the product to ensure proper function and longevity. These earbuds feature Bluetooth 5.2 technology, stereo sound, up to 35 hours of playtime with the charging case, a power display, and IPX6 waterproofing.

2. Package Contents

Please verify that all items listed below are present in your package:

- JOYHOOSH T6 Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable (Type-C)
- User Manual
- (Optional: Various sizes of ear tips, if included)

3. Product Overview

Familiarize yourself with the components of your JOYHOOSH T6 earbuds and charging case.



Figure 3.1: Earbuds and Charging Case
The image displays the JOYHOOSH T6 wireless earbuds resting in their open charging case, which features a digital LED battery indicator showing '100%'. The earbuds themselves have blue LED accents, indicating their status.

3.1. Earbud Features

- **Touch Control Area:** For managing playback, calls, and voice assistant.
- **Microphone:** For calls and voice commands.
- **Charging Contacts:** Connects with the charging case.
- **LED Indicator:** Displays connection and battery status.

3.2. Charging Case Features

- **Earbud Charging Slots:** Securely holds and charges the earbuds.
- **Digital LED Display:** Shows the battery percentage of the charging case and individual earbuds.
- **USB-C Charging Port:** For recharging the case.

4. Setup

4.1. Initial Charging

Before first use, fully charge both the earbuds and the charging case.

1. Place the earbuds into the charging case, ensuring they are properly seated.
2. Connect the USB charging cable to the charging port on the case and to a power source (e.g., USB wall adapter, computer USB port).
3. The digital LED display on the case will show the charging status. A full charge is indicated by '100'.
4. Charging time for the case is approximately 2.5 hours. The earbuds charge within the case.

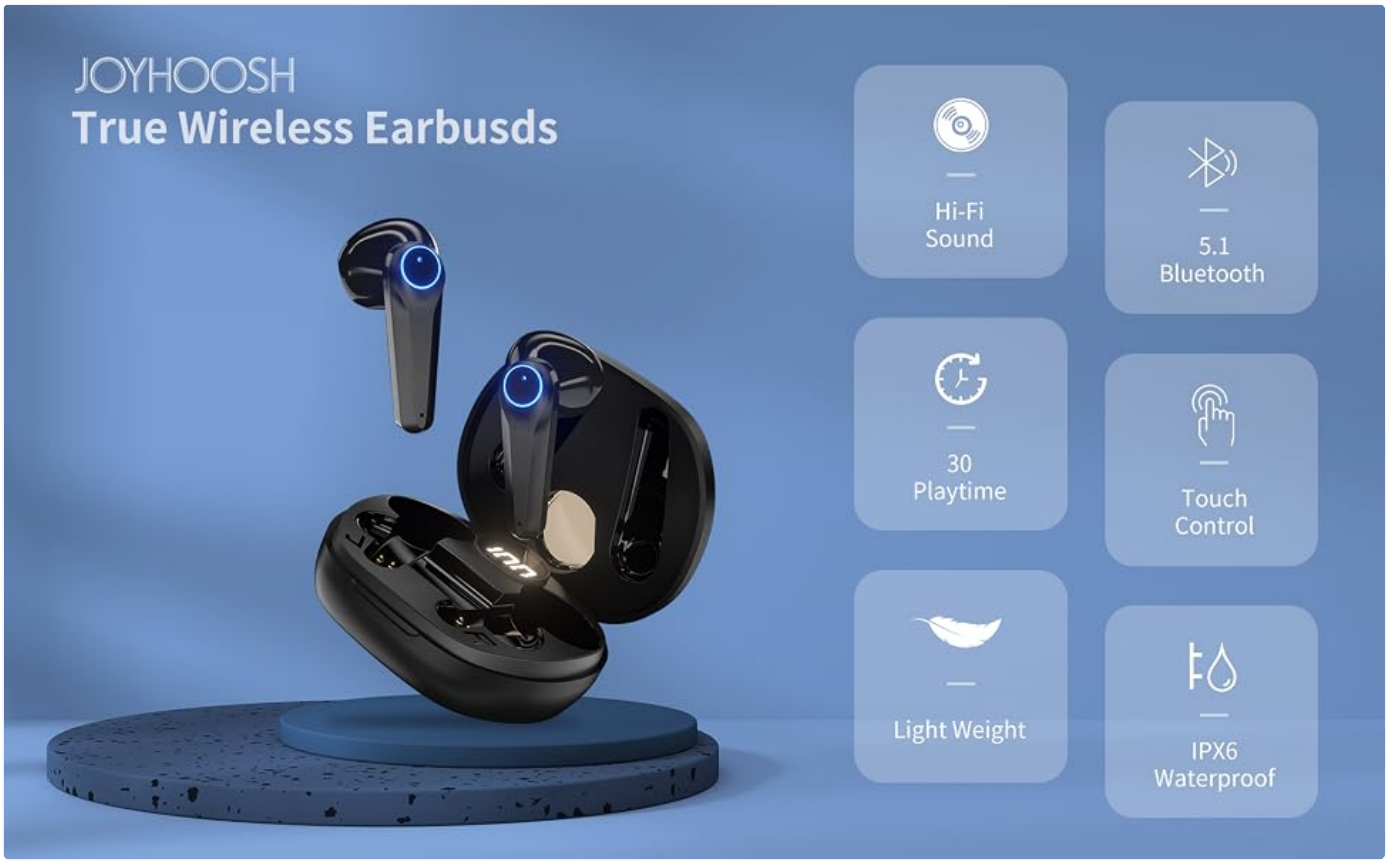


Figure 4.1: Charging Earbuds and Case
The image shows the earbuds placed in their charging case, with a visual effect of a lightning bolt connecting them, signifying the charging process. The digital display on the case shows '100'.

4.2. Pairing with a Device

The JOYHOOSH T6 earbuds feature one-step automatic pairing.

1. Ensure Bluetooth is enabled on your device (smartphone, tablet, laptop).
2. Open the lid of the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device, go to Bluetooth settings and search for available devices.
4. Select "T6" from the list of devices to connect.
5. Once connected, you will hear a confirmation tone, and the earbuds' LED indicators may change.

After initial pairing, the earbuds will automatically connect to the last paired device when removed from the case, provided Bluetooth is active on the device.



Figure 4.2: Bluetooth Pairing
This image demonstrates the simple pairing process. Upon opening the charging case, the earbuds automatically enter pairing mode, allowing for quick connection to a smartphone via Bluetooth settings. The Bluetooth range is approximately 10 meters.

5. Operating Instructions

5.1. Power On/Off

- **Power On:** Open the charging case lid, or long-press the touch control area for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or long-press the touch control area for 5 seconds.

5.2. Music Playback

- **Play/Pause:** Double-tap the touch control area on either earbud (L/R).
- **Next Song:** Single-tap the touch control area on the right earbud (R).
- **Previous Song:** Single-tap the touch control area on the left earbud (L).

5.3. Call Management

- **Answer/End Call:** Double-tap the touch control area on either earbud (L/R).
- **Reject Call:** Long-press the touch control area on either earbud (L/R) for 2 seconds.

5.4. Volume Control & Voice Assistant

- **Volume Up:** Triple-tap the touch control area on the right earbud (R).
- **Volume Down:** Triple-tap the touch control area on the left earbud (L).
- **Activate Voice Assistant (Siri/Google Assistant):** Long-press the touch control area on either earbud (L/R) for 2 seconds.



Figure 5.1: Earbud Touch Controls
This graphic summarizes the main features: Hi-Fi Sound, Bluetooth 5.2, 35 hours playtime, Touch Control, Light Weight, and IPX6 Waterproofing. Refer to this section for detailed touch control gestures.

6. Sound Quality

The JOYHOOSH T6 earbuds are engineered to deliver a high-fidelity audio experience.

- **13mm Speaker Drivers:** Provide powerful bass and clear treble.
- **Half In-Ear Acoustic Structure:** Designed for comfortable fit and optimal sound delivery.
- **Bluetooth 5.2 Chip:** Ensures stable audio transmission with minimal latency.



Figure 6.1: High-Quality Stereo Sound Diagram
This diagram shows the internal structure of an earbud, highlighting the 13mm speaker driver and the Bluetooth 5.2 chip, which contribute to powerful bass and clear treble.

7. Battery Life and Power Display

The earbuds and charging case offer extended battery life and a convenient power display.

- **Earbud Playtime:** Up to 5 hours on a single charge.
- **Total Playtime:** Up to 35 hours with multiple charges from the charging case.
- **Digital LED Display:** The charging case features a smart LED display that shows the battery percentage of both the case and the individual earbuds, allowing you to monitor power levels accurately.

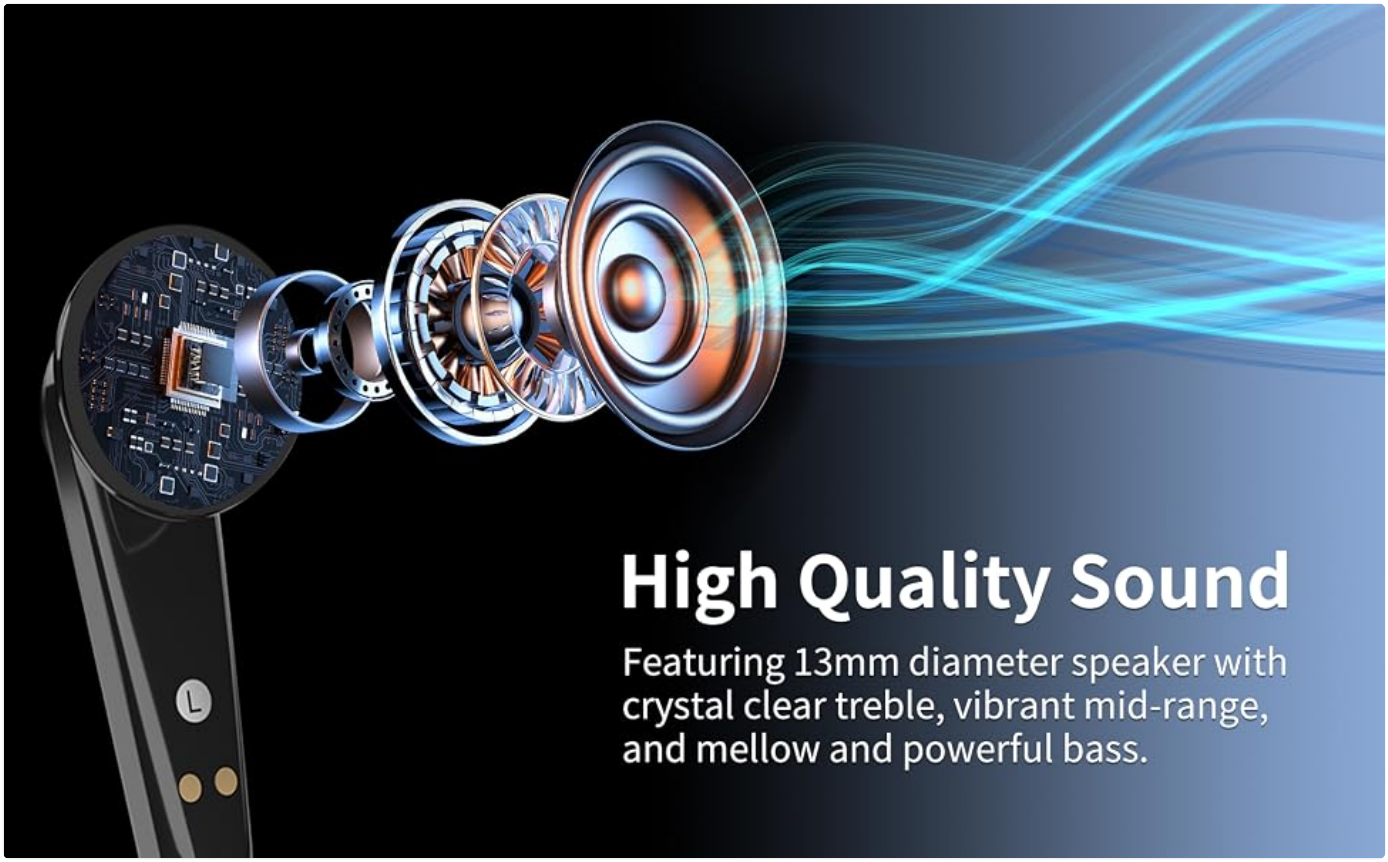


Figure 7.1: Digital Power Display
The charging case and individual earbuds feature a smart LED digital display, indicating the remaining battery percentage. This allows users to monitor power levels and determine the optimal time for recharging.



Figure 7.2: Extended Playtime
A visual representation of the extended battery life: 5 hours of playtime on a single earbud charge, and an additional 30 hours provided by the charging case, totaling 35 hours. The case can be fully charged in approximately 1 hour.

8. Maintenance

8.1. Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Use a cotton swab lightly dampened with isopropyl alcohol to clean the charging contacts on both the earbuds and the case. Ensure they are completely dry before placing earbuds back in the case.
- Do not use abrasive cleaners or immerse the product in water.

8.2. Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the product in a cool, dry place, away from extreme temperatures and direct sunlight.

8.3. Water Resistance (IPX6)

The JOYHOOSH T6 earbuds and charging case are IPX6 waterproof, meaning they are protected against high-pressure water jets from any direction. This makes them suitable for sports and daily life, protecting against sweat and rain.
Note: IPX6 rating does not mean the product can be submerged in water. Do not use for swimming or showering.

9. Troubleshooting

If you encounter issues with your earbuds, please refer to the following common solutions:

- **Earbuds not pairing/connecting:**
  - Ensure both earbuds are charged.
  - Place earbuds back in the case, close the lid, then open it again to re-initiate pairing mode.
  - Turn off and on your device's Bluetooth.
  - Forget "T6" from your device's Bluetooth list and try pairing again.
  - Ensure no other Bluetooth devices are interfering.
- **Only one earbud working:**
  - Ensure both earbuds are charged.
  - Place both earbuds back into the charging case, close the lid, and then open it again. This often resets the connection between them.
  - Try resetting the earbuds (refer to specific reset instructions if available, otherwise, a full charge and re-pairing usually works).
- **Low volume or poor sound quality:**
  - Adjust the volume on both your device and the earbuds.
  - Ensure earbuds are clean and free of debris.
  - Check for proper fit in your ears.
  - Move closer to your connected device to avoid signal interference.
- **Charging case not charging:**
  - Ensure the charging cable is securely connected to both the case and the power source.
  - Try a different USB-C cable and power adapter.
  - Clean the charging port on the case.

10. Specifications

Feature	Specification
Model	T6
Brand	JOYHOOSH
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.2
Bluetooth Range	10 Meters
Ear Placement	In Ear
Control Method	Touch
Microphone	Included
Water Resistance Level	IPX6
Earbud Playtime (Single Charge)	Up to 5 Hours
Total Playtime (with Charging Case)	Up to 35 Hours
Charging Time (Case)	Approx. 2.5 Hours
Material	Plastic
Item Weight	2.89 ounces
Manufacturer	JOYHOOSH

11. Safety Information

- Do not disassemble or modify the product.
- Keep away from extreme temperatures, direct sunlight, and open flames.
- Avoid dropping or subjecting the product to strong impacts.
- Keep out of reach of children and pets.
- Do not use the product at high volume for extended periods to prevent hearing damage.
- Be aware of your surroundings when using earbuds, especially in traffic or dangerous situations.

12. Warranty and Support

JOYHOOSH products are designed and manufactured to the highest quality standards. For warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or the official JOYHOOSH website.
Please retain your proof of purchase for warranty claims.

© 2025 JOYHOOSH. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question