Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MangoKit MS5

MangoKit MS5 Digital and Internet Radio User Manual

Model: MS5 | Brand: MangoKit

1. Introduction

Thank you for choosing the MangoKit MS5 Digital and Internet Radio. This versatile audio system combines traditional radio functionalities with modern streaming capabilities, offering a rich listening experience. It features DAB/DAB+ and FM radio, a slot-in CD player, Bluetooth connectivity, Internet Radio with Spotify Connect, dual alarms, and USB playback. This manual provides detailed instructions to help you set up, operate, and maintain your device.



Image 1.1: MangoKit MS5 Digital and Internet Radio with its remote control.

2. Package Contents

Please check the box for the following items:

- MangoKit MS5 Digital and Internet Radio Unit
- Remote Control
- Power Adapter
- User Manual (this document)



Image 2.1: The MangoKit MS5 unit, remote control, power adapter, and user manual as included in the package.

3. Initial Setup

3.1 Power Connection

1. Connect the power adapter to the DC IN port on the back of the MS5 unit.
2. Plug the power adapter into a wall outlet.
3. The unit will power on and display the initial setup screen.

3.2 Network Setup (Wi-Fi)

For Internet Radio and Spotify Connect functionality, the MS5 requires a Wi-Fi connection.

1. On the initial setup screen, select 'Network' or 'Wi-Fi Setup'.
2. The radio will scan for available Wi-Fi networks. Select your network from the list.
3. Enter your Wi-Fi password using the remote control or the unit's navigation buttons.
4. Confirm the password and connect. Once connected, the unit will display a confirmation message.

4. Operating Instructions

4.1 Radio Modes (DAB/DAB+, FM, Internet Radio)

The MS5 supports DAB/DAB+, FM, and Internet Radio. Use the 'Mode' button on the unit or remote to switch between modes.

4.1.1 DAB/DAB+ and FM Radio

Enjoy all your favorite DAB/DAB+ and FM stations with superior quality sound. The unit features easy setup and quick auto-scan for station access.

1. Select 'DAB Radio' or 'FM Radio' mode.
2. For first-time use, the unit will perform an auto-scan to find available stations.
3. Use the navigation buttons to browse through the station list.
4. Press 'Select' to tune into a station.



Image 4.1: The MS5 unit displaying information for DAB/DAB+ and FM Radio.

4.1.2 Internet Radio with Spotify Connect

Access over 30,000 radio stations worldwide via Wi-Fi streaming and enjoy millions of music tracks from Spotify Connect.

1. Select 'Internet Radio' mode.
2. Browse stations by location, genre, or search for specific stations.
3. For Spotify Connect, ensure your device is connected to the same Wi-Fi network as the MS5. Open the Spotify app on your smartphone or tablet, select the MS5 as the playback device.



Image 4.2: The MS5 unit displaying the Internet Radio interface with Spotify Connect functionality.

4.2 CD Player

The MS5 features a slot-in CD player. Enjoy outstanding sound and breathe new life into your CD collection with full remote control and song display on the 2.4" color display.

1. Insert a CD into the slot on the front of the unit. The unit will automatically switch to CD mode.
2. Use the Play/Pause, Skip, and Stop buttons on the unit or remote control to manage playback.



Image 4.3: The MS5 unit displaying CD playback information, with the remote control visible.

4.3 Bluetooth and USB Features

Listen to your own music from your smartphone or tablet wirelessly via Bluetooth, or play MP3 files directly from a USB drive.

4.3.1 Bluetooth Connectivity

1. Select 'Bluetooth' mode on the MS5. The unit will enter pairing mode.
2. On your smartphone or tablet, enable Bluetooth and search for 'MangoKit MS5'.
3. Select the MS5 to pair. Once connected, you can stream audio from your device.

4.3.2 USB Playback

1. Insert a USB drive containing MP3 files into one of the USB ports on the back of the unit.
2. Select 'USB' mode. The unit will automatically detect and play compatible audio files.



Image 4.4: The MS5 unit showing Bluetooth connectivity with a smartphone and the available USB ports.

4.4 Dual Alarms Clock/Sleep/Snooze

The MS5 features two independent alarms, a snooze function, and a sleep timer. Set intelligent alarms for weekdays or weekends with music or a buzzer.

1. Access the 'Alarm' settings from the main menu.
2. Set Alarm 1 and Alarm 2 independently, including time, source (radio/buzzer), and recurrence (daily, weekdays, weekends).
3. To activate Snooze, press the 'Snooze' button when the alarm sounds.
4. To set a Sleep Timer, navigate to the 'Sleep' option in the menu and select the desired duration.

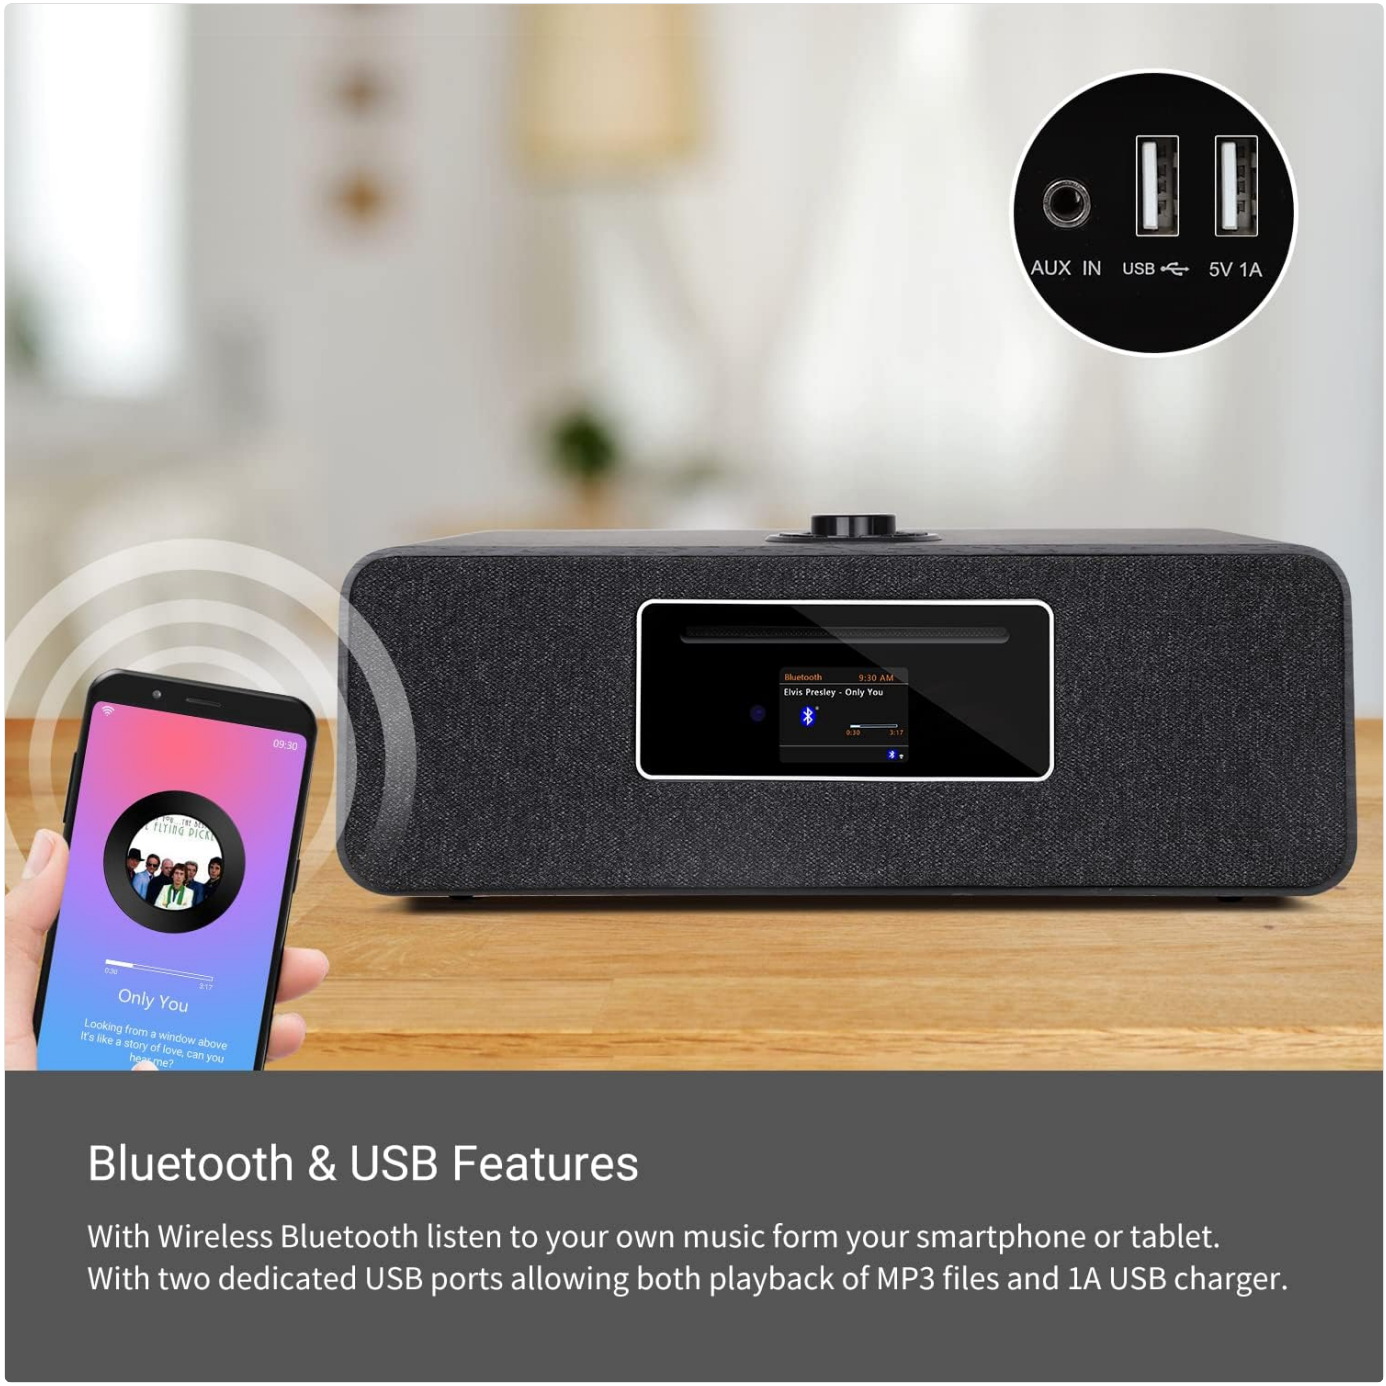


Image 4.5: The MS5 unit displaying alarm clock settings, indicating its use as a bedside radio.

4.5 Customizable Sound and Display Settings

Adjust personal sound parameters including treble/bass/volume levels, and select between POP/Classic/Jazz/Rock/Normal equalizer presets. Control screen brightness for night or daylight settings.

- Navigate to 'Settings' > 'Equalizer' to adjust sound profiles.
- Navigate to 'Settings' > 'Display' to adjust brightness.

5. Maintenance

5.1 Cleaning the Unit

To maintain the appearance of your MS5, wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents

as they may damage the finish.

5.2 CD Player Care

Handle CDs by their edges to avoid fingerprints. If a CD is dirty, wipe it gently with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or solvents.

6. Troubleshooting

If you encounter issues with your MangoKit MS5, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected and try a different power outlet.
No sound	Volume too low, mute activated, or incorrect audio source.	Increase volume, check if mute is off, ensure correct mode (e.g., CD, Bluetooth, Radio) is selected.
Poor radio reception	Weak signal or interference.	Reposition the unit, extend the antenna fully, or try a different location.
Bluetooth pairing issues	Device not in pairing mode, or too far from the unit.	Ensure MS5 is in Bluetooth pairing mode, keep devices within 10 meters, and try re-pairing.
CD not playing	CD is dirty, scratched, or inserted incorrectly.	Clean the CD, check for scratches, and ensure it is inserted correctly into the slot.

7. Specifications

Feature	Detail
Brand	MangoKit
Model Number	MS5
Color	Oak / Black
Connectivity Technology	Auxiliary, Bluetooth, USB, Wi-Fi
Supported Radio Bands	FM, DAB, DAB+, Internet Radio
Compatible Devices	Headphones
Voltage	12 Volts (AC)
Item Weight	6 Kilograms
Components Included	User Manual

Feature	Detail
Rechargeable Battery	No

8. Warranty and Support

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official MangoKit brand store.
MangoKit Brand Store: https://www.amazon.com.be/stores/MangoKit/page/AD994A9B-9043-41FE-9136-E0284E47D751

© 2024 MangoKit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09YD4N1QR

More documents and user manuals: **https://manuals.plus/**