Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SIMPLE HOUSEWARE BO-07I-K

Simple Houseware Double Rod Garment Rack

Model: BO-07I-K
Brand: SIMPLE HOUSEWARE

Introduction

Thank you for choosing the Simple Houseware Double Rod Garment Rack. This versatile and sturdy rack is designed to provide ample storage for your clothing, shoes, and accessories. Its thoughtful design includes unique side hooks, a top hanging rod with stoppers, convenient bottom shelves, and lockable casters for easy mobility and stability. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use of your new garment rack.

Safety Information

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Ensure all connections are securely fastened before loading the rack.
- Do not exceed the maximum weight recommendation of 100 pounds (45.36 kg). Overloading may cause the rack to tip or collapse.
- Distribute weight evenly on the hanging rods and shelves to maintain stability.
- Use the locking casters to secure the rack in place when not moving it.
- Avoid placing the rack in high-traffic areas where it could be easily bumped or tipped.

Package Contents

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Main Frame Components (Vertical and Horizontal Bars)
- Double Hanging Rods
- Bottom Wired Shelf
- Side Hooks (2 sets)
- Casters (4, including 2 lockable)
- Assembly Hardware (screws, bolts, wrench)

Assembly Instructions

Assembly is required for this garment rack. Please follow these steps carefully. It is recommended to assemble the rack on a soft, clean surface to prevent scratches.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them with the package contents list to ensure everything is present.
2. **Attach Casters to Base:** Secure the four casters to the bottom frame of the rack. Ensure the two lockable casters are placed on the same side for easier access. Tighten securely with the provided wrench.
3. **Assemble Vertical Supports:** Connect the lower vertical support bars to the base frame. Ensure they are firmly seated.
4. **Install Bottom Wired Shelf:** Slide the wired shelf into the designated slots on the lower vertical supports. This shelf provides additional stability and storage space for shoes or boxes.
5. **Attach Lower Hanging Rod:** Secure the lower horizontal hanging rod between the vertical supports at your desired height. This rack offers multiple height settings for the lower rod.
6. **Attach Upper Vertical Supports:** Connect the upper vertical support bars to the lower vertical supports.
7. **Install Upper Hanging Rod:** Attach the upper horizontal hanging rod to the top of the vertical supports. Note the built-in stoppers on each end designed to prevent hangers from sliding off.
8. **Attach Side Hooks:** Secure the stylish side hooks to the upper vertical supports. These hooks provide extra hanging space for hats, bags, or scarves. Ensure they are oriented correctly with smooth, rounded corners facing outwards to prevent scratching clothes.
9. **Final Check:** Once all parts are assembled, gently shake the rack to ensure all connections are stable and secure.



Image: The assembled garment rack without items, showing its structure.



Image: Detail of the top hanging rod with a built-in stopper to prevent hangers from sliding off.



Image: Detail of the stylish side hooks, designed with smooth, rounded corners for hanging hats, bags, and other accessories.

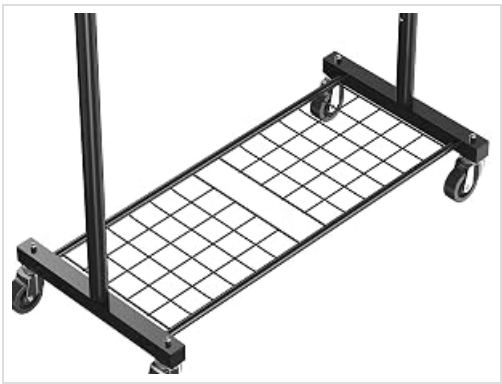


Image: Detail of the sturdy wired shelf at the bottom, providing additional storage for shoes or boxes.



Image: Detail of one of the durable casters, showing the locking mechanism for enhanced stability.

Operating Instructions

Using your Simple Houseware Garment Rack is straightforward. Follow these guidelines for optimal functionality:

- **Hanging Clothes:** Utilize both the top and bottom hanging rods for organizing garments. The top rod is ideal for longer items like dresses or coats, while the adjustable lower rod can accommodate shirts, pants, or skirts.
- **Using Side Hooks:** The unique side hooks are perfect for hanging hats, bags, scarves, belts, or other accessories.
- **Bottom Shelf Storage:** Place shoes, storage boxes, folded clothes, or other items on the sturdy wired shelf at the base of the rack.
- **Mobility:** To move the rack, unlock the two locking casters by flipping their levers. Gently push or pull the rack to its desired location.
- **Stability:** Once the rack is in position, engage the locking casters by flipping their levers down to prevent unintended movement and ensure stability.





Image: The garment rack fully loaded with various clothing items, shoes, and a hat on the side hook, demonstrating its storage capacity.



Image: The garment rack positioned in a bedroom, showcasing its practical use for organizing daily wear and accessories.

Maintenance and Care

To ensure the longevity and appearance of your garment rack, follow these simple maintenance tips:

- **Cleaning:** Wipe down the metal frame and shelves with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by drying thoroughly. Avoid abrasive cleaners or harsh chemicals.
- **Regular Checks:** Periodically inspect all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Caster Care:** Keep the caster wheels free of lint, hair, and debris to ensure smooth rolling.
- **Weight Distribution:** Always distribute the weight of your garments and items evenly across the rods and shelves to prevent strain on the frame.

Troubleshooting

If you encounter any issues with your garment rack, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Rack is wobbly or unstable.	Loose connections; uneven weight distribution.	Check and tighten all screws and bolts. Redistribute items evenly on rods and shelves.
Casters do not roll smoothly.	Debris caught in wheels; casters locked.	Clean any debris from the wheels. Ensure locking levers are in the unlocked position.
Hangers slide off the rod.	Hangers are too wide or rod stoppers are not effective.	Ensure hangers are appropriate size. The top rod has built-in stoppers; if issues persist, consider using non-slip hangers.
Rack tips over.	Overloaded; uneven weight distribution; casters unlocked on an incline.	Do not exceed 100 lbs (45.36 kg) capacity. Distribute weight evenly. Lock casters when stationary, especially on uneven surfaces.

Specifications

Feature	Detail
Brand	SIMPLE HOUSEWARE
Model Number	BO-07I-K
Color	Black
Material	Metal
Product Dimensions (D x W x H)	16.8"D x 39.5"W x 71.4"H (42.67 cm D x 100.33 cm W x 181.36 cm H)
Installation Type	Free Standing
Special Features	Bottom Wired Shelf, Stylish Side Hooks, Wheels (2 lockable)
Load Capacity	100 Pounds (45.36 kg)

Feature	Detail
Number of Shelves	1
Assembly Required	Yes
Item Weight	8.8 Pounds (3.99 kg)

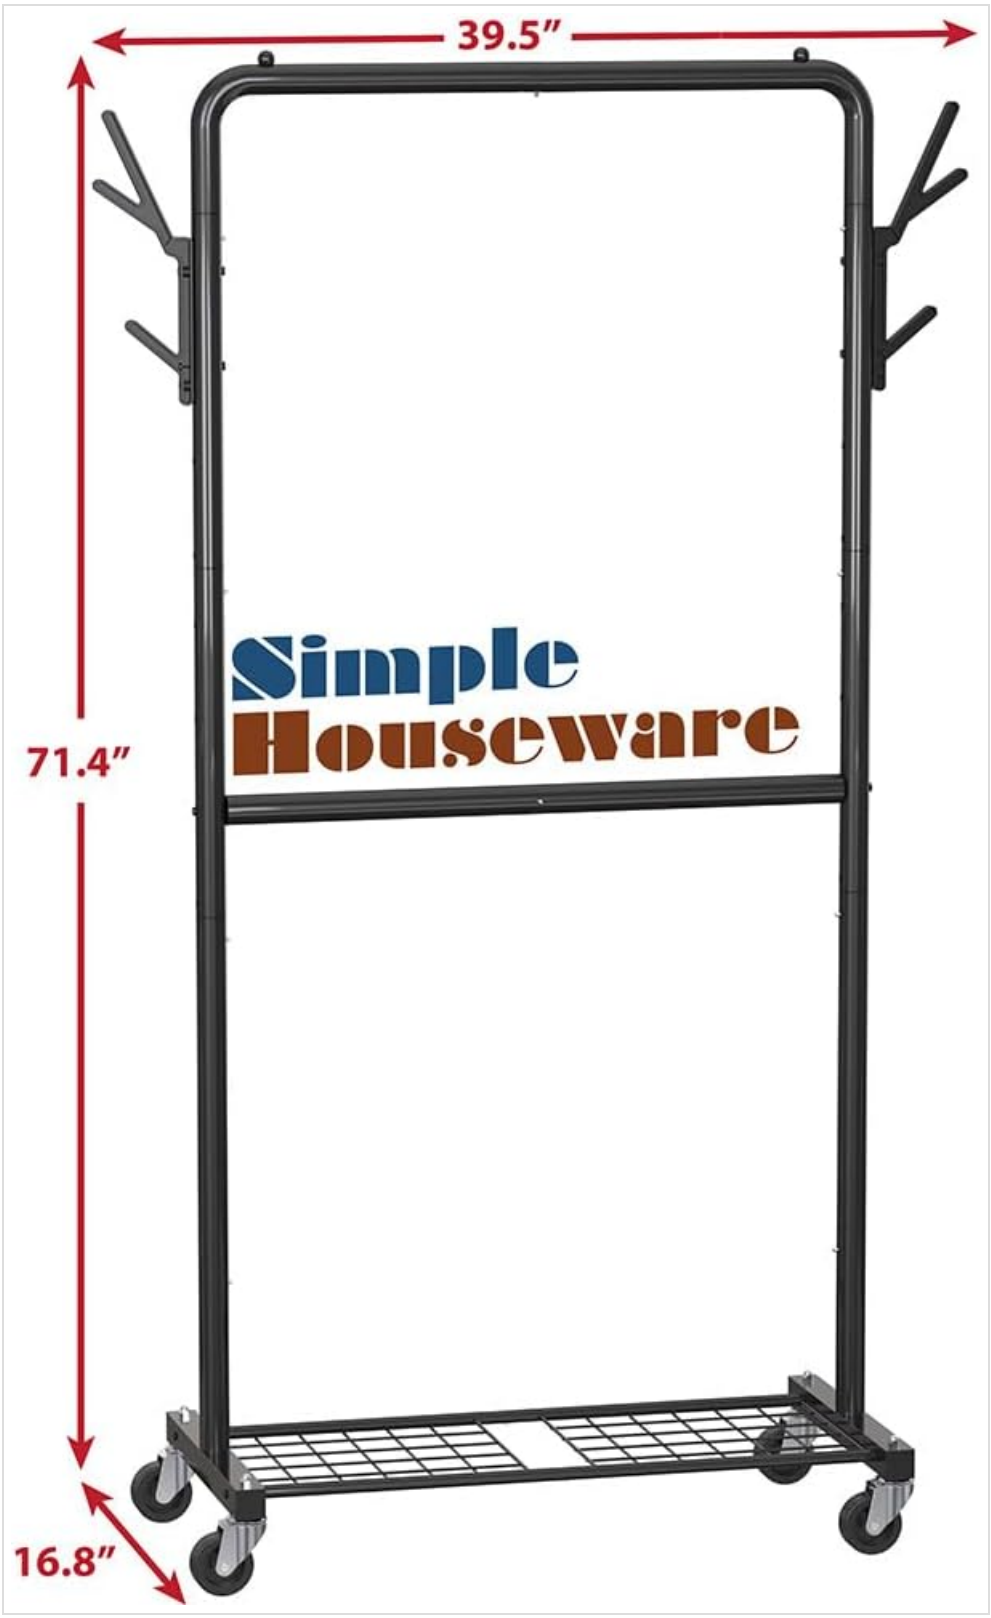


Image: Diagram showing the dimensions of the garment rack: 16.8 inches deep, 39.5 inches wide, and 71.4 inches high.

Warranty and Support

Simple Houseware stands behind the quality of its products. For specific warranty information, please refer to the product packaging or contact Simple Houseware customer service directly. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please reach out to our support team.

Contact Information:

Please visit the official Simple Houseware website or refer to your purchase documentation for the most current contact details.

© 2025 Simple Houseware. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09YHY8CZH

More documents and user manuals: **https://manuals.plus/**