Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CUISUNYO B09YJ283M3

CUISUNYO 1800W Portable Induction Countertop Cooktop User Manual

Model: B09YJ283M3

1. Important Safety Information

Please read all instructions carefully before using your CUISUNYO Induction Cooktop. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Operate only with 120V 60Hz power supply. Ensure the power outlet is properly grounded. Do not use with damaged cords or plugs.
- **Surface Temperature:** The cooktop surface will become hot during and immediately after cooking.**DO NOT TOUCH** the heating areas during operation or within 30 minutes after cooking. Use the child lock feature to prevent accidental activation.
- **Cookware:** Use only induction-compatible cookware. Non-compatible cookware will not heat and may trigger an error code.
- **Ventilation:** Ensure proper ventilation around the cooktop. Do not block air vents on the bottom or sides.
- **Overheating Protection:** The cooktop features an automatic shut-off if it operates for two hours continuously or if an internal temperature is detected as too high.
- **Child Lock:** Activate the child lock feature to prevent unintended operation, especially around children.
- **Placement:** Place the cooktop on a stable, flat, heat-resistant surface. Do not place near flammable materials.

2. Product Overview

The CUISUNYO 1800W Portable Induction Countertop Cooktop offers efficient and precise cooking. Its compact design makes it suitable for various environments, from small kitchens to RVs.



Figure 1: CUISUNYO 1800W Portable Induction Cooktop. This image displays the sleek black glass surface with touch controls and the induction heating zone.

Key Features:

- **Compact and Portable:** 12-inch design, ideal for small spaces, RVs, or outdoor use with a power outlet.
- **Durable Construction:** High-strength, scratch-resistant glass surface with 1800W heating element and 170mm double heating layer for even heat distribution.
- **Versatile Temperature Control:** 10 power levels and precise temperature settings ranging from 140-465°F.
- **Safety Features:** Waterproof design, "overflow" protection, child lock, and automatic shut-off.
- **Cookware Compatibility:** Works with magnetic cookware. A magnetic testing piece is included to verify compatibility.

3. Setup

1. **Unpack:** Carefully remove the cooktop and all accessories from the packaging.
2. **Placement:** Place the cooktop on a dry, flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit, especially for the bottom radiator fan.
3. **Power Connection:** Plug the cooktop into a standard 120V 60Hz electrical outlet.
4. **Cookware Check:** Before first use, verify your cookware is induction-compatible using the provided magnetic testing piece. If the magnet sticks firmly to the bottom of your pot or pan, it is compatible.



Figure 2: Cookware Compatibility. This image illustrates the minimum (4.7 inch) and maximum (10.2 inch) compatible cookware sizes for the induction cooktop.

4. Operating Instructions

Control Panel Overview:

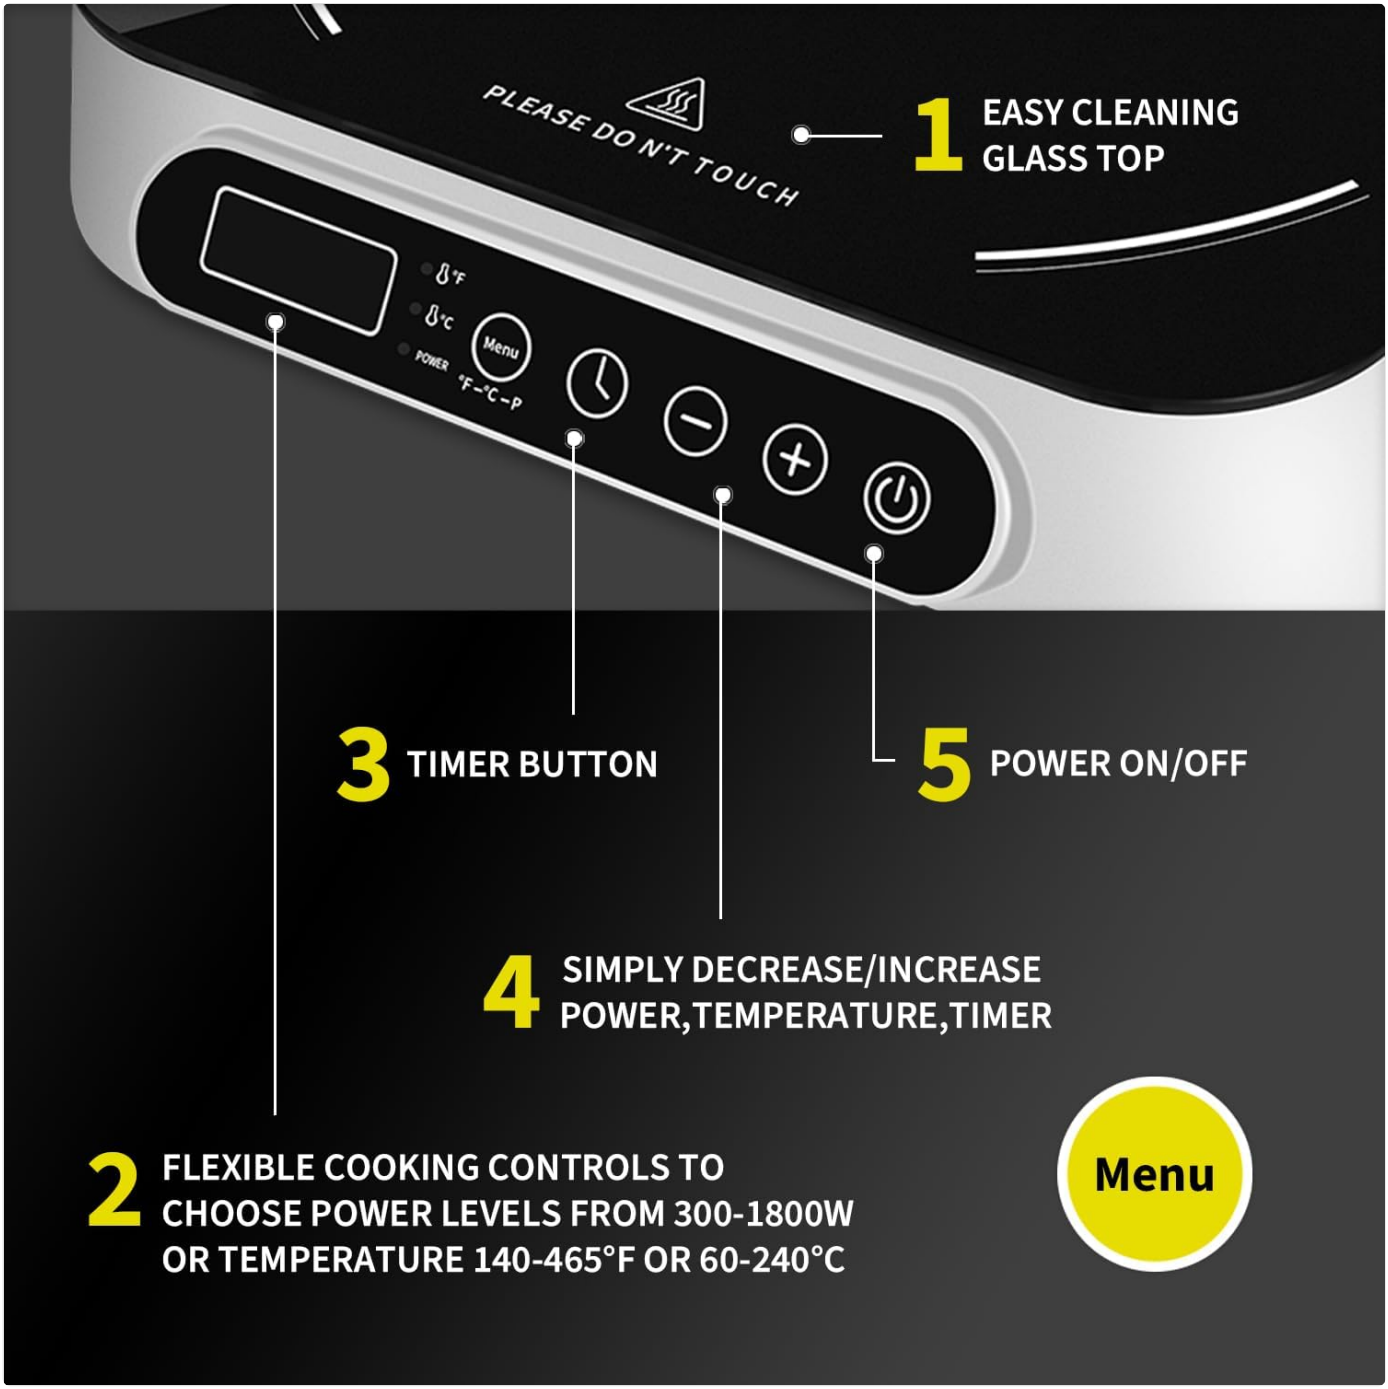


Figure 3: Control Panel. This image highlights the key controls: Easy Cleaning Glass Top, Flexible Cooking Controls (Power/Temperature), Timer Button, Decrease/Increase Power/Temperature/Timer, and Power On/Off.

1. **Power On/Off:** Press the **ON/OFF** button to turn the cooktop on or off. The display will illuminate.
2. **Selecting Cooking Mode:**
    - **Power Mode:** Use the **+** and **-** buttons to adjust power levels (e.g., P1 to P10). This mode is ideal for boiling water or hot pot.
    - **Temperature Mode:** Use the **+** and **-** buttons to set precise temperatures (e.g., 140-465°F). This mode is suitable for frying or simmering to avoid overheating.
3. **Timer Function:** Press the **TIMER** button. Use the **+** and **-** buttons to set the desired cooking time (up to 3 hours and 59 minutes). The cooktop will automatically shut off when the timer expires.
4. **Child Lock:** To activate, press and hold the **LOCK** button for 3 seconds. The control panel will be locked, preventing accidental changes to settings. To deactivate, press and hold the **LOCK** button again for 3 seconds.

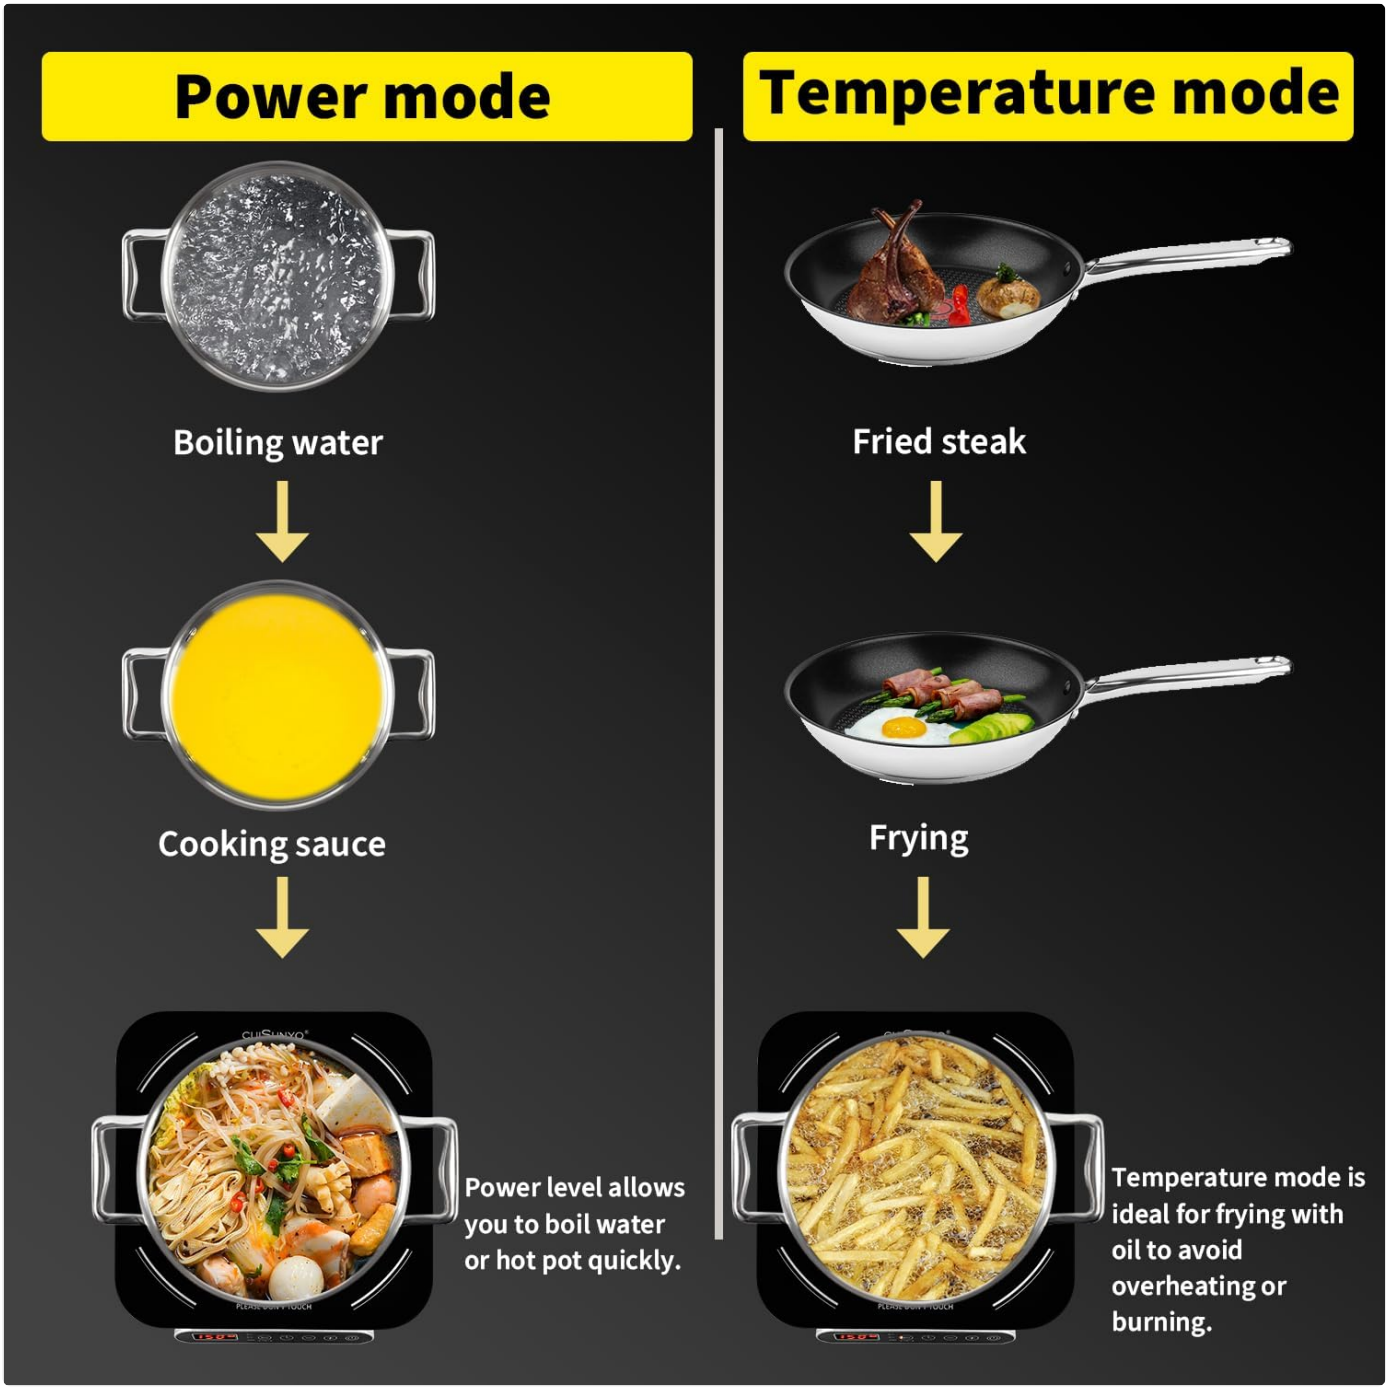


Figure 4: Cooking Modes. This image illustrates the difference between Power Mode (for boiling water, cooking sauce, hot pot) and Temperature Mode (for fried steak, frying).

Official Product Video:

Your browser does not support the video tag.

Video 1: CUISUNYO 1800W Countertop 10 Power Levels Burners. This video provides a visual demonstration of the cooktop's features, controls, and cooking capabilities.

5. Cookware Compatibility

Induction cooktops require cookware with a magnetic base. To ensure your pots and pans are compatible:

- **Magnetic Test:** Use the provided magnetic testing piece. If it sticks to the bottom of your cookware, it is compatible.
- **Suitable Materials:** Compatible materials include cast iron, magnetic stainless steel, enameled iron, and some aluminum or copper cookware with a magnetic base. Glass and ceramic cookware without a magnetic base are generally not compatible.

- **Cookware Size:** The cooktop is designed for cookware with a minimum diameter of 4.7 inches and a maximum diameter of 10.2 inches.

6. Cleaning and Maintenance

The glass ceramic surface is designed for easy cleaning.

1. **Cool Down:** Always allow the cooktop surface to cool completely before cleaning. The "Hot" indicator will disappear when it is safe to touch.
2. **Wipe Clean:** Use a soft, damp cloth and mild detergent to wipe down the glass surface. For stubborn stains, a non-abrasive cleaner specifically designed for ceramic cooktops can be used.
3. **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
4. **Spills:** Wipe up spills immediately, especially sugary liquids, to prevent them from hardening and causing damage.

7. Troubleshooting

If you encounter issues with your cooktop, refer to the following common problems and solutions:

Error Code/Symptom	Possible Cause	Solution
"E0" or Flashing Display	No cookware detected or incompatible cookware.	Place induction-compatible cookware on the heating zone. Ensure cookware is centered.
"E1" or "E7"	Cooktop has overheated.	Turn off the cooktop and allow it to cool down. Ensure ventilation is not blocked. Resume operation once cooled.
Cooktop does not turn on	Not plugged in, power outage, or child lock active.	Check power connection. Verify power outlet. Deactivate child lock if active.

8. Specifications

- **Brand:** CUISUNYO
- **Model:** B09YJ283M3
- **Power:** 1800W
- **Voltage:** 120V 60Hz
- **Temperature Range:** 140-465°F
- **Control Type:** Digital Touch
- **Product Dimensions:** 15"D x 13"W x 14"H
- **Item Weight:** 5.66 pounds
- **Material:** Carbon Steel (body), Glass (cooktop surface)
- **Color:** Black

9. Warranty and Support

The CUISUNYO 1800W Portable Induction Countertop Cooktop comes with a**1-year warranty** from the date of purchase.
For any questions, concerns, or warranty claims, please contact CUISUNYO Appliance US customer support. Our

dedicated support team is available to assist you within 24 hours.
Please refer to the contact information provided in your product packaging or visit the official CUISUNYO website for further assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09YJ283M3

More documents and user manuals: **https://manuals.plus/**