EROMMY 12'x20' Aluminum Composite Roof Aluminum Frame Gazebo

EROMMY 12'x20' Aluminum Composite Roof Gazebo Instruction Manual

Model: 12'x20' Aluminum Composite Roof Aluminum Frame Gazebo

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your EROMMY 12'x20' Aluminum Composite Roof Gazebo. Please read this manual thoroughly before beginning assembly or use to ensure safe and correct installation and to maximize the lifespan of your product. Keep this manual for future reference.



Image 1.1: Fully assembled EROMMY 12'x20' Gazebo.

2. Safety Information

Always follow the assembly instructions carefully. Secure the gazebo to a stable foundation using the provided ground stakes. Be cautious when handling the aluminum frame and curtains during assembly and disassembly to prevent injury. Keep children and pets away from the gazebo during windy conditions.

Important Safety Notes:

- Ensure all bolts and fasteners are securely tightened after assembly and periodically checked for tightness.
- Do not hang heavy objects from the gazebo frame or roof.
- In extreme weather conditions (heavy snow, strong winds), it is recommended to remove the roof panels and curtains to prevent damage.
- Avoid using open flames or heating devices inside the gazebo.

3. Product Features

The EROMMY 12'x20' Gazebo is designed with durability and comfort in mind, featuring:

- **Aluminum Composite Panel Roof:** Offers superior rust resistance, longevity, and effective blocking of harmful UV rays. Provides better snow capacity compared to polycarbonate materials.
- **Double Roof Design:** Enhances airflow and stability, especially in windy conditions, providing optimal comfort.
- **Heavy-duty Aluminum Frame:** Powder-coated for resistance against rust, corrosion, and chipping. Includes ground stakes for added stability.
- **Curtains & Netting:** Equipped with two top meshes, six meshes, and six privacy curtains. The mesh prevents insects while ensuring ventilation. Binding straps secure curtains and netting in strong winds.
- **Spacious Design:** A 12'x20' footprint provides ample space for gatherings of 10-15 people.



Image 3.1: Aluminum Composite Panel Roof construction.



Image 3.2: Double Roof, Top Net, and Support Hook details.

4. Setup and Assembly

Assembly typically requires two or more people. Refer to the included assembly diagram for specific part identification and step-by-step instructions. Ensure all parts are present before beginning assembly.
General Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all boxes and lay out components. Verify all parts against the packing list.
2. **Assemble Frame Posts:** Connect the vertical posts and horizontal beams to form the main structure. Ensure all connections are secure.
3. **Install Roof Frame:** Attach the roof support beams to the main frame.
4. **Attach Roof Panels:** Carefully place and secure the aluminum composite roof panels onto the roof frame. Ensure proper alignment for water runoff.
5. **Install Double Roof and Top Net:** Assemble and attach the upper roof section and integrate the top net.
6. **Attach Curtains and Netting:** Slide the curtains and netting onto the designated rails.
7. **Anchor the Gazebo:** Securely anchor the gazebo to the ground using the provided ground stakes or other

suitable anchoring methods for your surface.

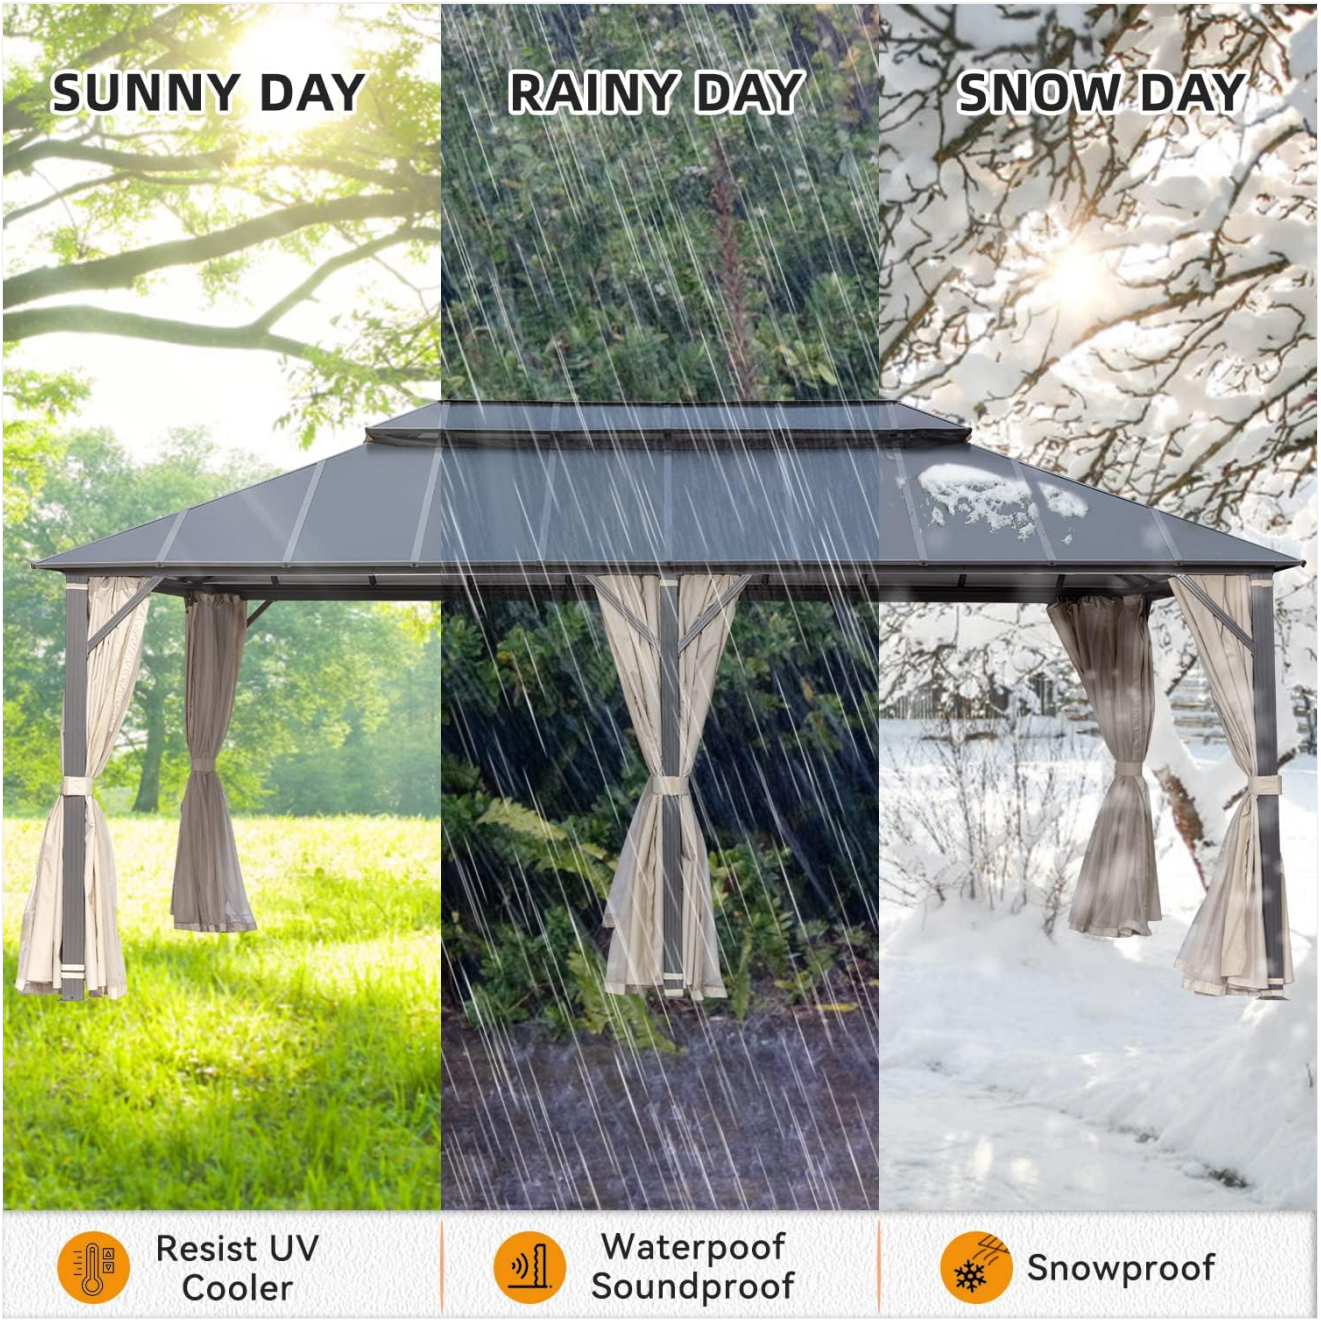


Image 4.1: Product Dimensions for planning placement.



Image 4.2: Aluminum Frame and Anchoring Design.

Video 4.1: Overview of the EROMMY 12'x20' Aluminum Composite Panel Hardtop Gazebo, demonstrating features and providing visual context for assembly.

5. Operating Instructions

Your EROMMY gazebo is designed for versatile outdoor use. Here's how to operate its key features:

- **Curtains and Netting:** The gazebo includes both privacy curtains and mosquito netting. These can be operated independently on dual rails. Use the zippers to fully enclose the gazebo for privacy or insect protection.
- **Securing Curtains/Netting:** When not in use, roll up the curtains and netting and secure them to the gazebo posts using the integrated binding belts to prevent them from flying in the wind.
- **J-Hooks:** The integrated J-hooks on the roof frame can be used to hang lightweight decorations, lights, or small fans. Do not exceed the weight limit specified in the assembly instructions.



Image 5.1: Dual Rail System for Curtains and Netting.

6. Maintenance

Regular maintenance will help preserve the appearance and functionality of your gazebo.

- **Cleaning the Frame:** Wipe the aluminum frame with a damp cloth and mild soap. Rinse thoroughly and dry to prevent water spots. Avoid abrasive cleaners.
- **Cleaning the Roof Panels:** Clean the aluminum composite roof panels with water and a soft brush or cloth. Do not use harsh chemicals that could damage the finish.
- **Cleaning Curtains and Netting:** The fabric curtains and netting can be spot cleaned with mild soap and water. For deeper cleaning, follow care instructions on the fabric tags, if available. Ensure they are completely dry before storing or folding to prevent mildew.
- **Seasonal Care:** In regions with heavy snowfall, it is advisable to clear snow accumulation from the roof to prevent structural stress. Consider disassembling and storing the gazebo during winter months or extreme weather conditions for prolonged product life.
- **Fastener Checks:** Periodically inspect all bolts and screws to ensure they remain tight. Re-tighten as necessary.

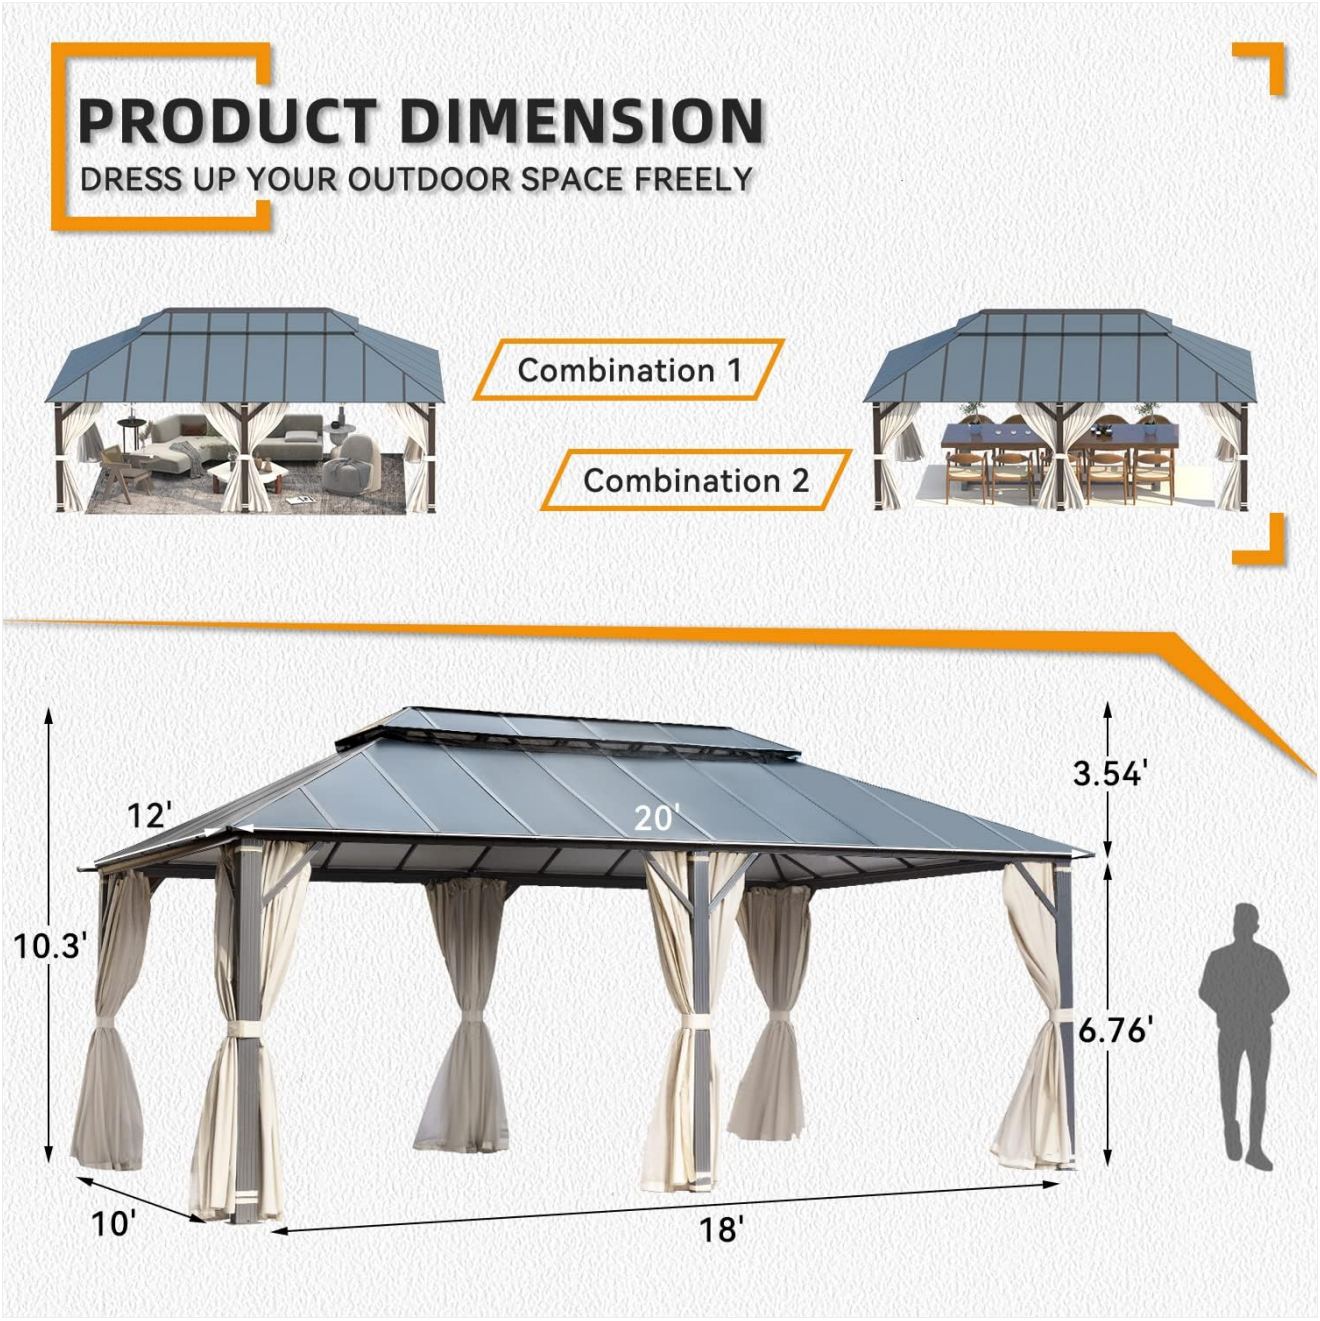


Image 6.1: Gazebo performance in various weather conditions.

7. Troubleshooting

This section addresses common issues you might encounter with your gazebo.

Problem	Possible Cause	Solution
Roof panels sag or detach.	Insufficient support for long panels; improper installation; extreme weather.	Ensure all roof panel fasteners are securely tightened. Verify that all support beams are correctly installed according to the assembly diagram. In areas with heavy snow, clear snow regularly or consider temporary disassembly.
Water leakage from roof.	Improperly sealed roof panels; damaged panels.	Check for gaps between roof panels and ensure all seals are intact. Re-tighten any loose fasteners. Inspect panels for damage and contact support if replacements are needed.

Problem	Possible Cause	Solution
Gazebo feels unstable.	Inadequate anchoring; loose frame connections.	Ensure the gazebo is securely anchored to the ground using all provided stakes. For concrete surfaces, consider using expansion bolts (not included). Check and tighten all frame connections.
Missing parts during assembly.	Packaging error or lost during transit.	Carefully re-check all packaging materials. If parts are still missing, contact EROMMY customer support with your purchase details and the specific part numbers required.

8. Specifications

Attribute	Detail
Brand	EROMMY
Model	12'x20' Aluminum Composite Roof Aluminum Frame Gazebo
Material (Roof)	Aluminum Composite Panel
Material (Frame)	Powder-coated Aluminum, Alloy Steel, Metal, Plastic
Product Dimensions (L x W x H)	240"L x 144"W x 120"H (20 ft x 12 ft x 10 ft)
Floor Area	240 square feet
Item Weight	480 pounds
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	99%
Shape	Rectangular
Occupancy	15 people
Color	Charcoal Gray

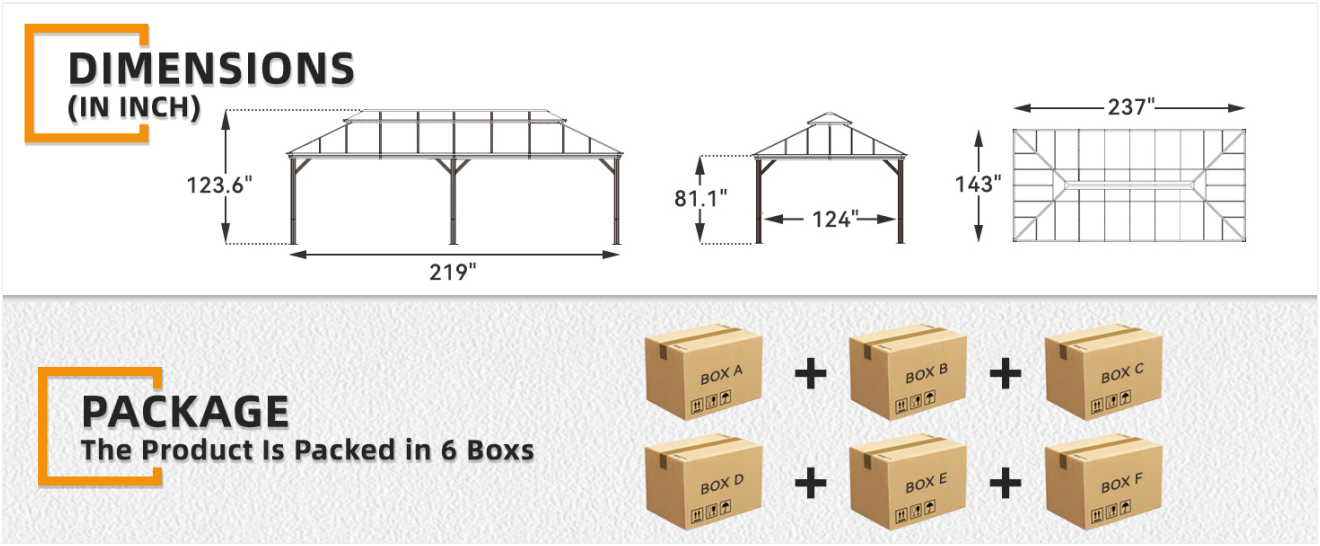


Image 8.1: Detailed Dimensions and Packaging Information.

9. Warranty and Support

For warranty information, please refer to the documentation included with your purchase or contact EROMMY customer service directly. EROMMY is committed to providing support for their products.

Contacting Support:

If you have questions regarding assembly, missing parts, or product functionality, please contact EROMMY customer service. Have your purchase receipt and model information (EROMMY 12'x20' Aluminum Composite Roof Aluminum Frame Gazebo, ASIN: B09YR9PM72) ready when contacting support.

You can typically find contact information on the EROMMY official website or through your retailer's customer service portal.

© 2024 EROMMY. All rights reserved. This manual is for informational purposes only.